

Trasformazione da differenziale RC222 fisso a estraibile o rimovibile T4-T5  
 Transformation from RC222 fixed differential to T4-T5 extractable or removable  
 Umwandlung von festem RC-222-Differential in ausfahrbares oder herausnehmbares T4-T5  
 Transformation de différentiel RC222 fixe à différentiel extractible ou débrochable T4-T5  
 Transformación desde diferencial RC222 fijo a extraíble o removible T4-T5

**T4** x 4



**T5 400** x 4

**T5 630** x 4


| Pos |        | T4 | T5 400 | T5 630 |
|-----|--------|----|--------|--------|
| 1   | M6x14  | 4  | -      | -      |
| 2   | M6x20  | 4  | -      | -      |
| 3   | M8x16  | -  | 4      | 4      |
| 4   | M8x18  | -  | 4      | 4      |
| 5   | 6,3x14 | 4  | -      | -      |
| 6   | 6x16   | 4  | -      | -      |
| 7   | 8,4x17 | -  | 4      | 4      |
| 8   | 8,4    | -  | 4      | 4      |
| 9   | M6     | 4  | -      | -      |
| 10  | M8     | -  | 4      | 4      |

**ONLY FOR T5 630**


optional x 2

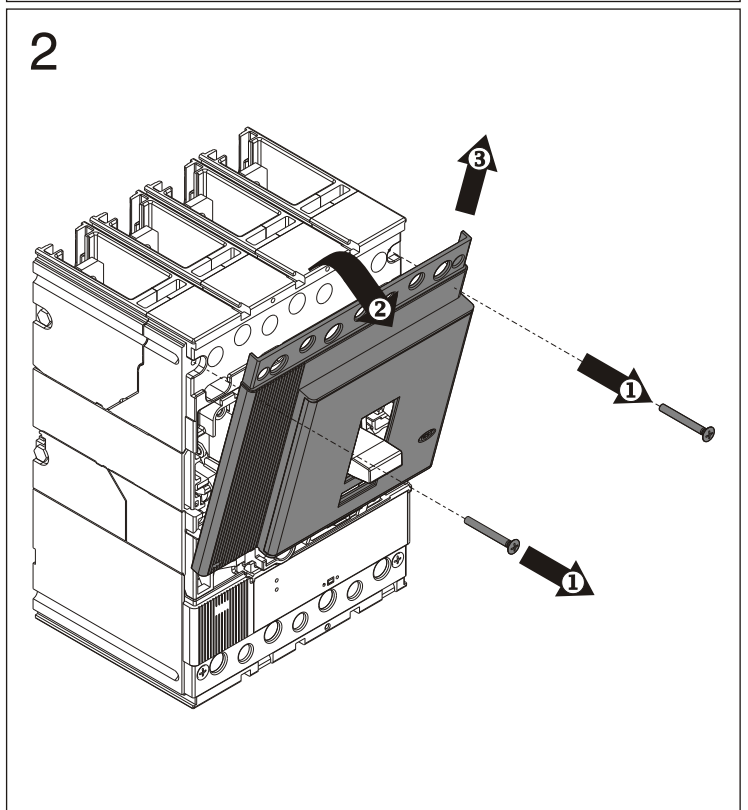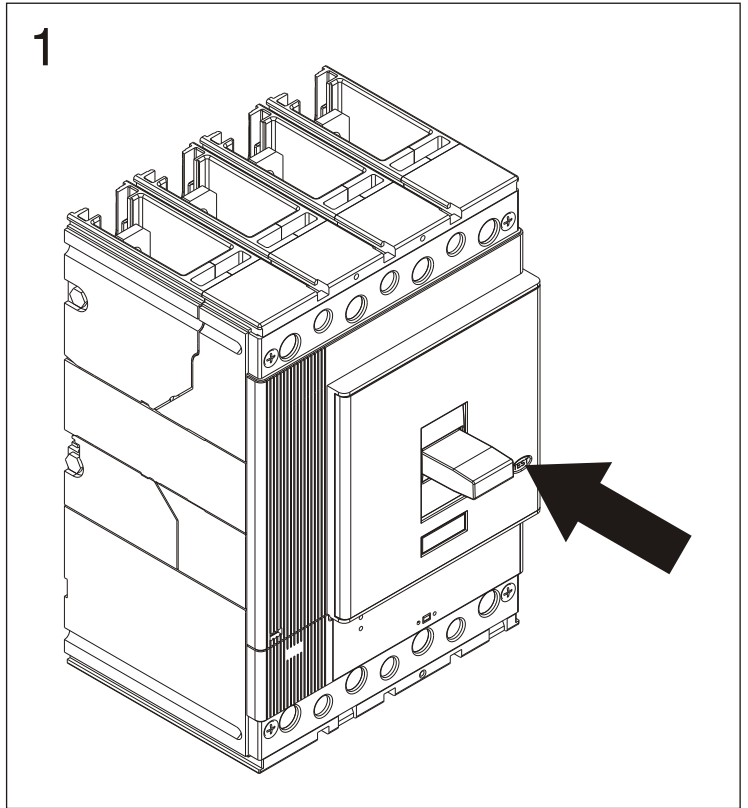

3

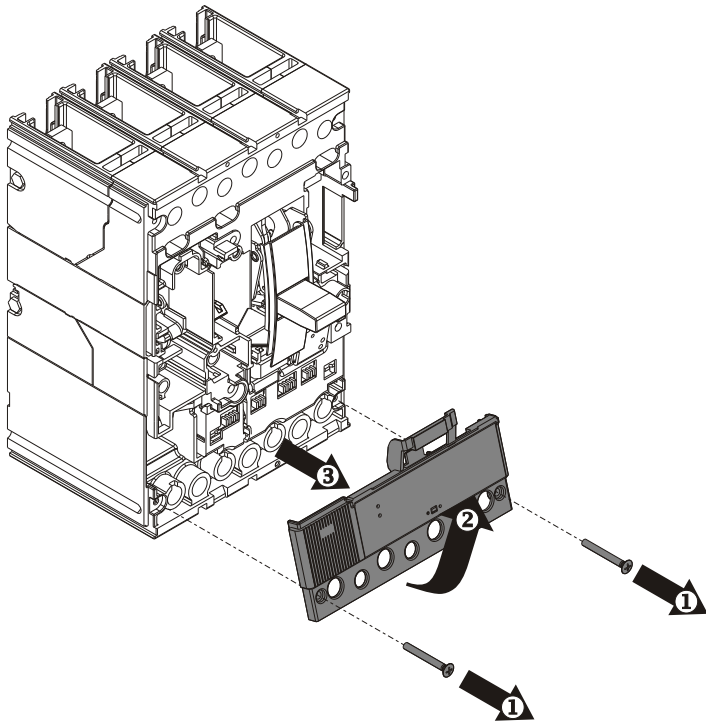


4

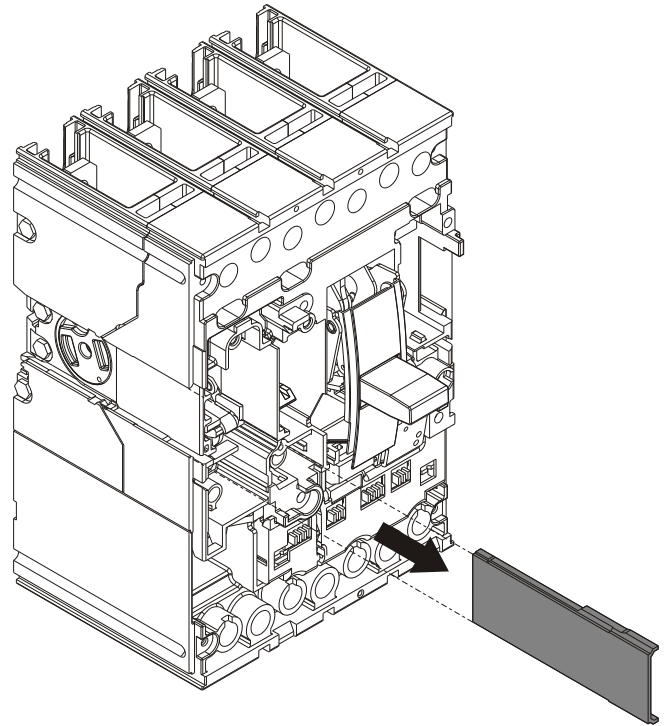


5

ONLY FOR P

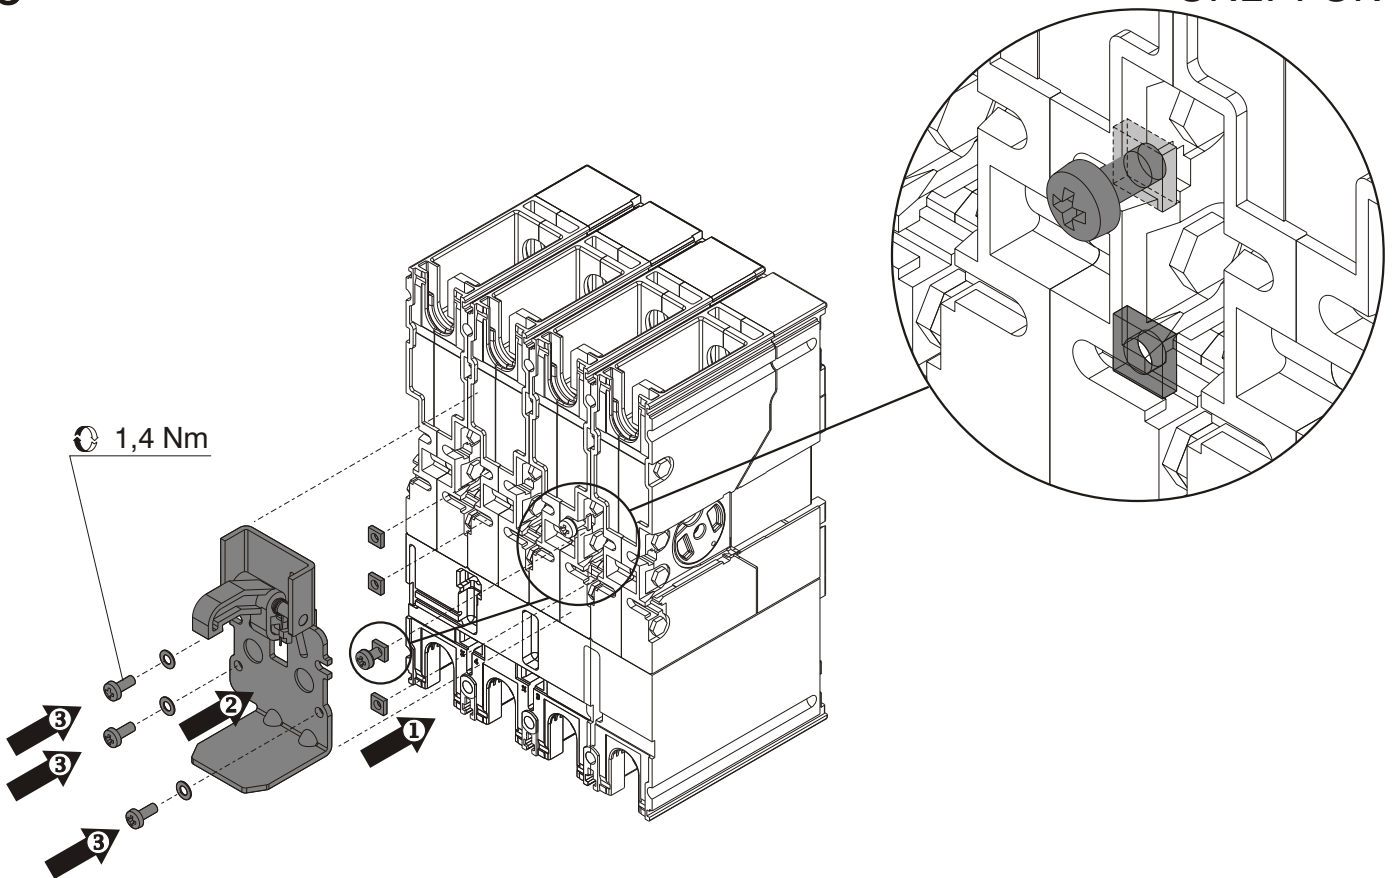


6

ONLY FOR W

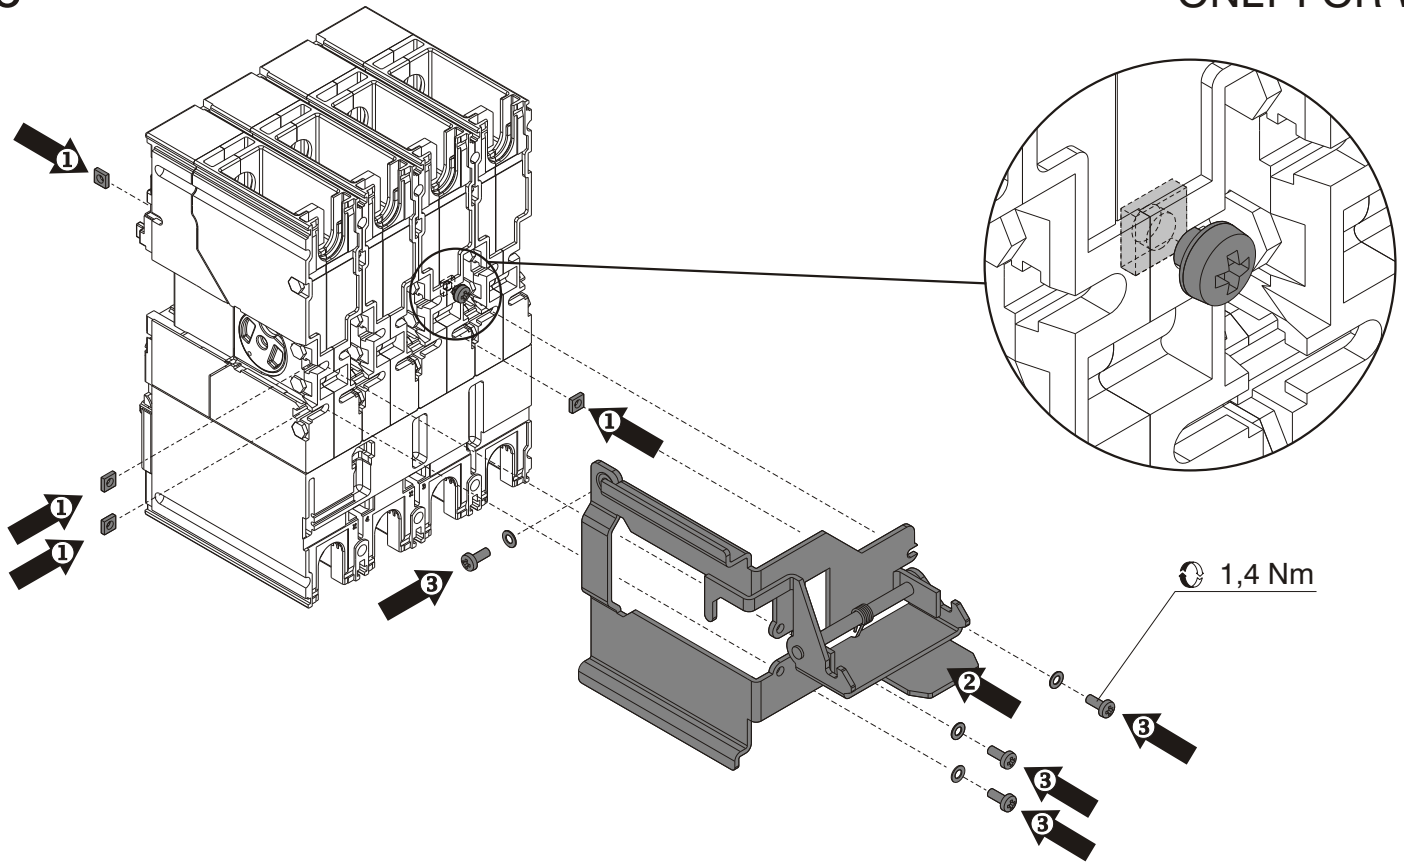


7


|      |       |
|------|-------|
| T4   | 10 Nm |
| T5   | 24 Nm |
| 400A |       |

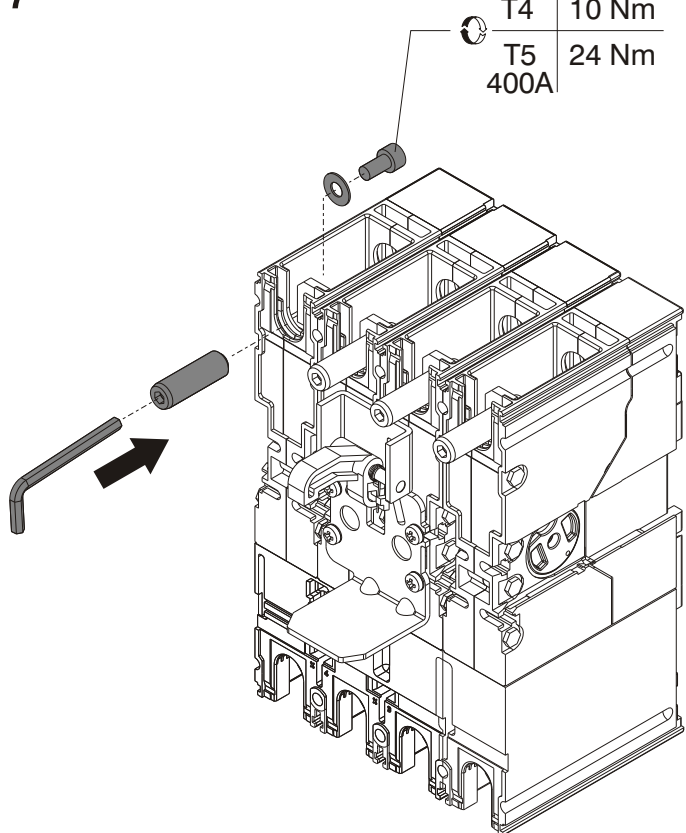


8

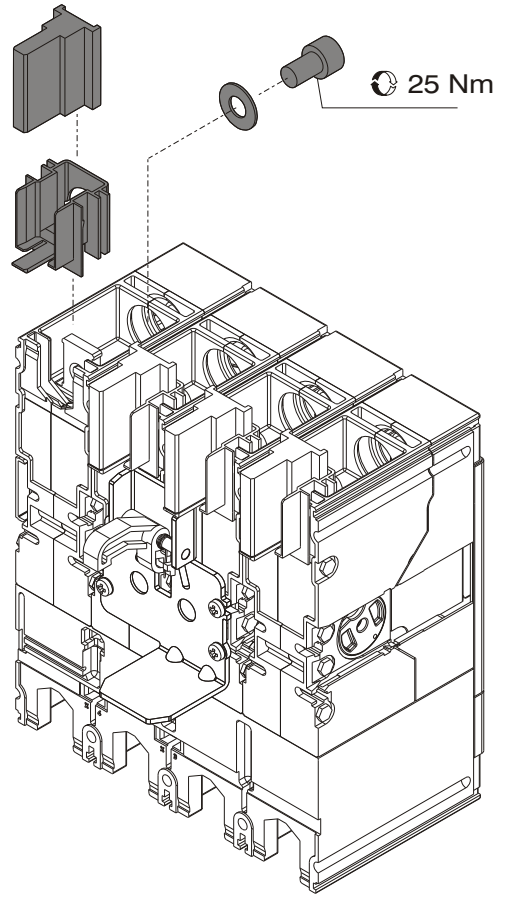


9

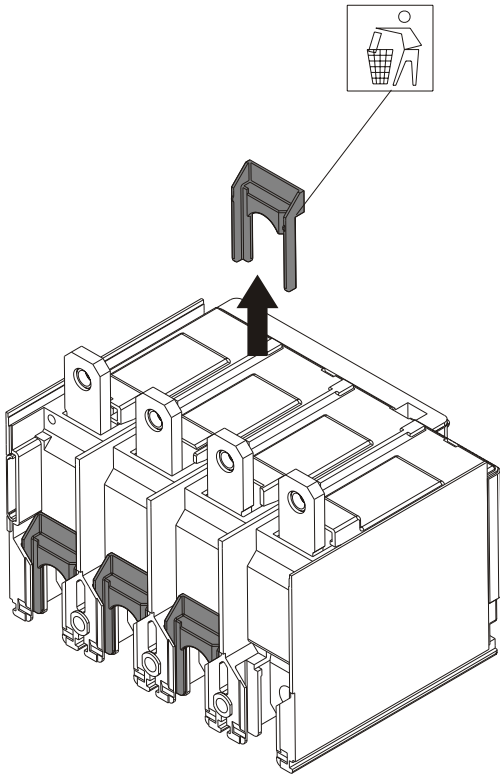


10

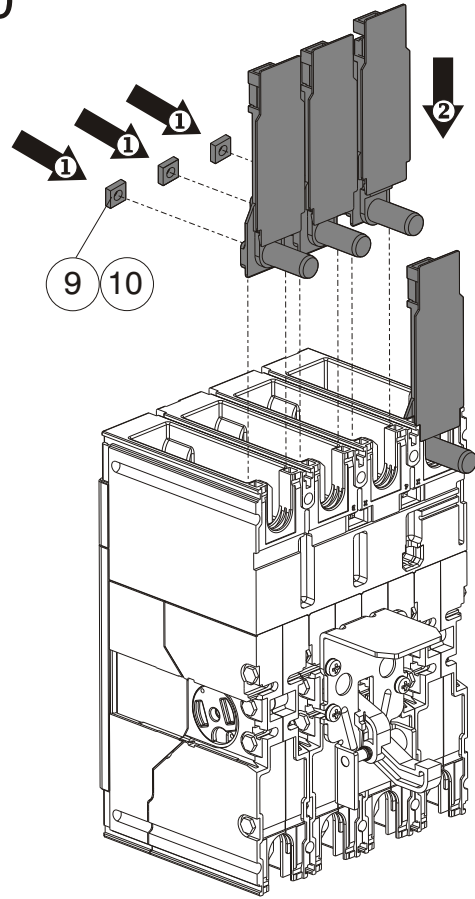


11

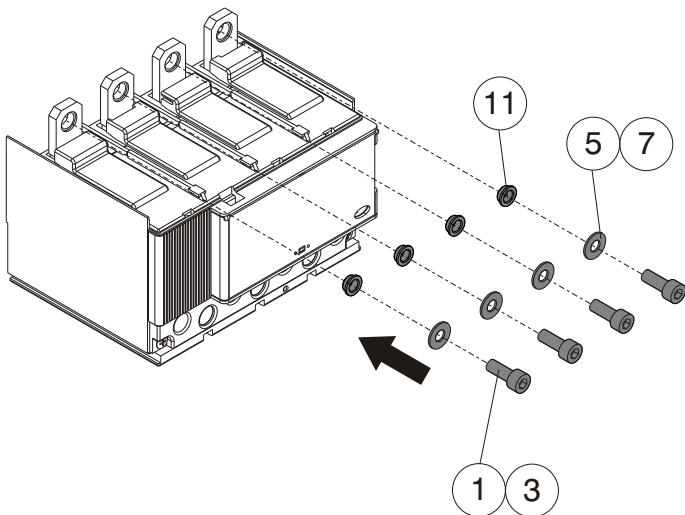


12

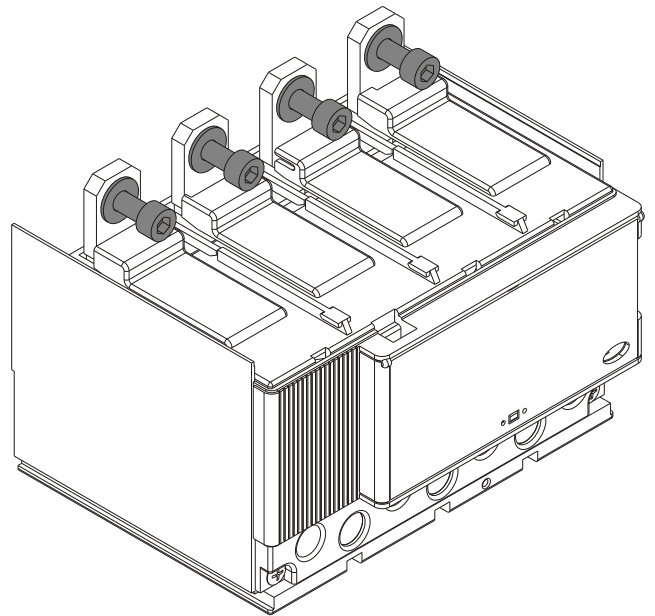


13

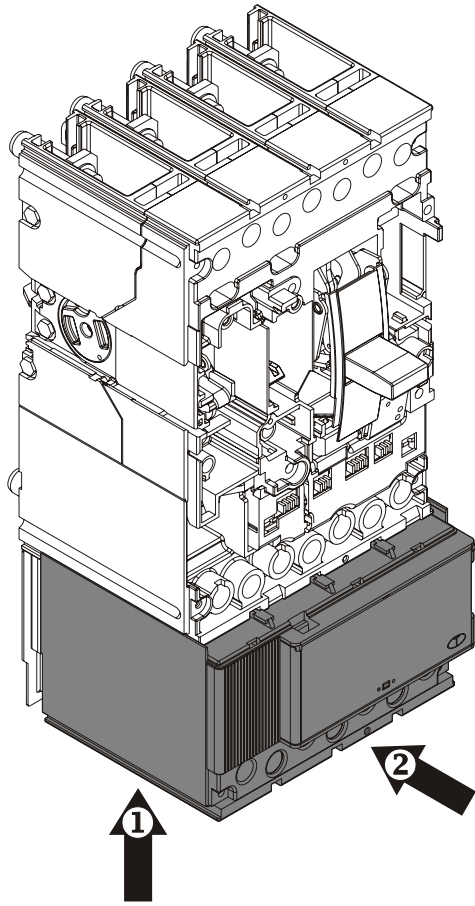


14

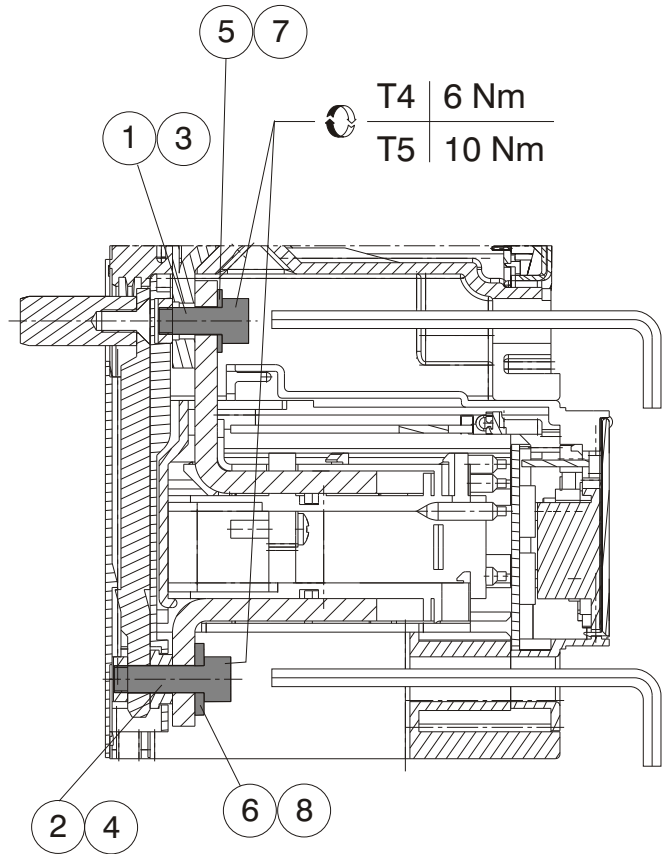


15

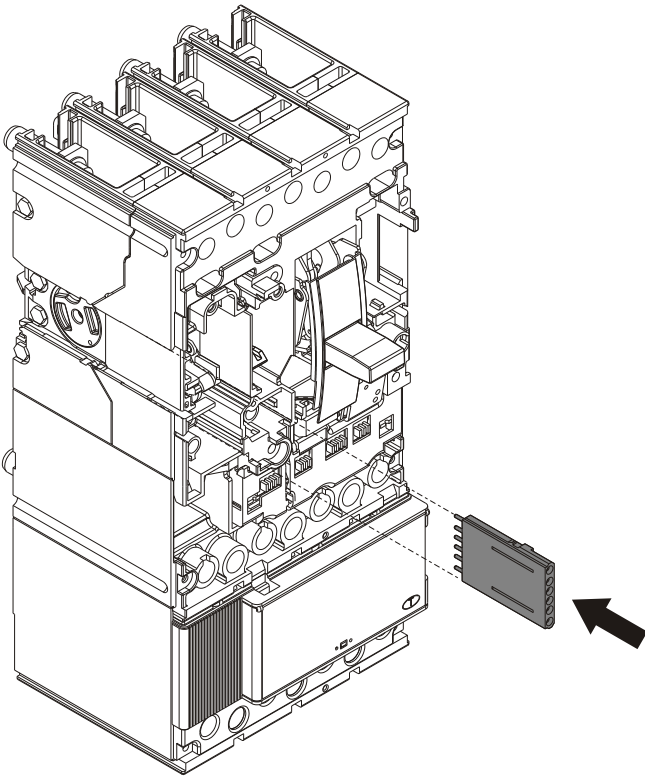

16

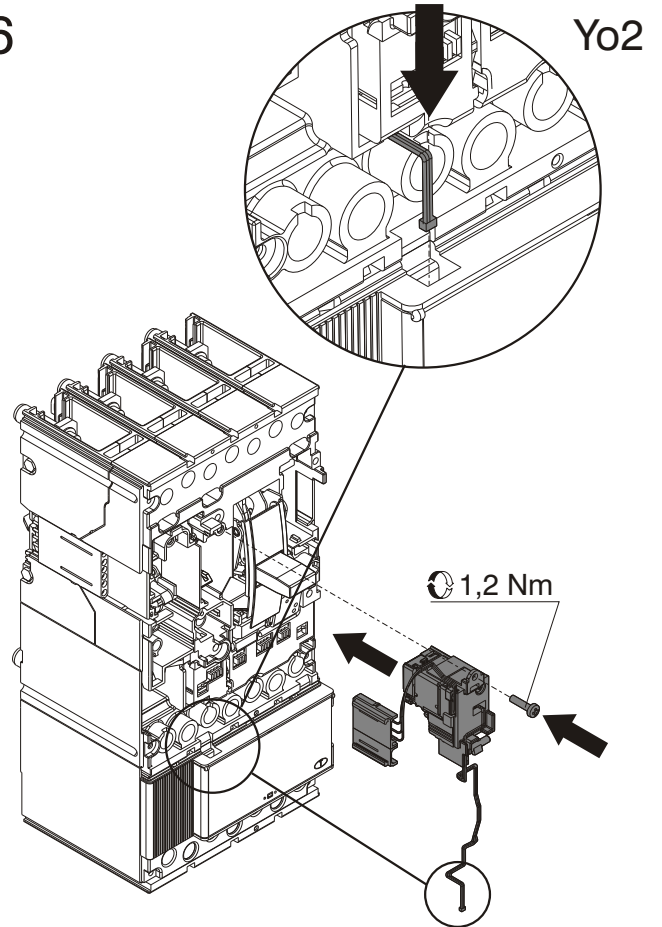


17

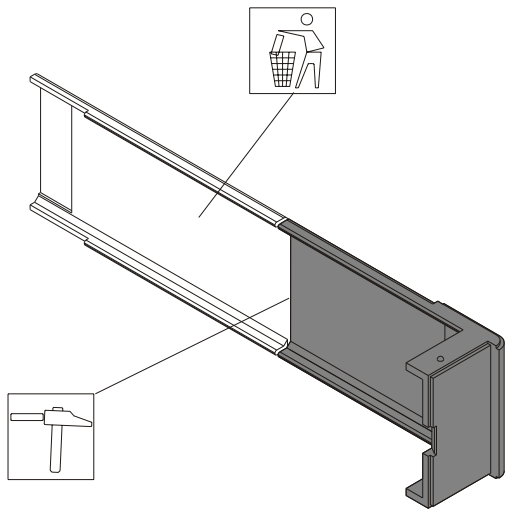


18


P/W

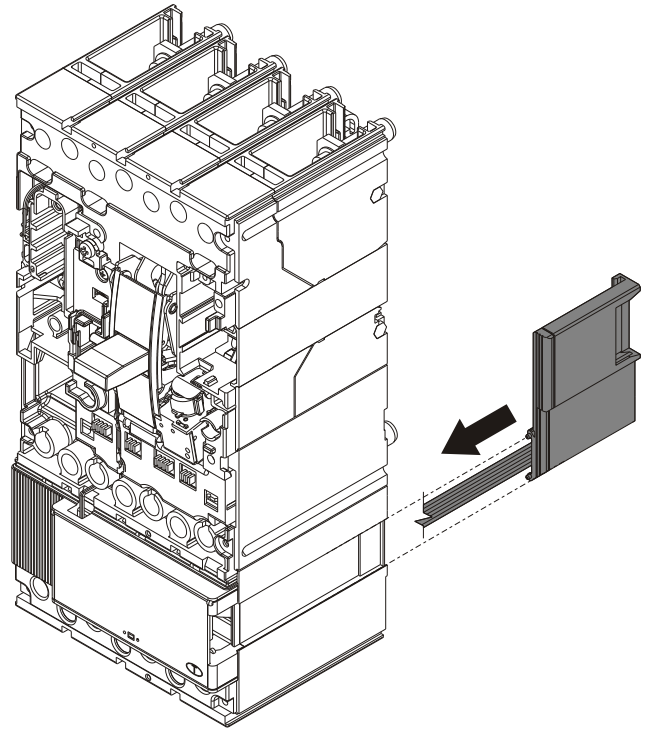

19

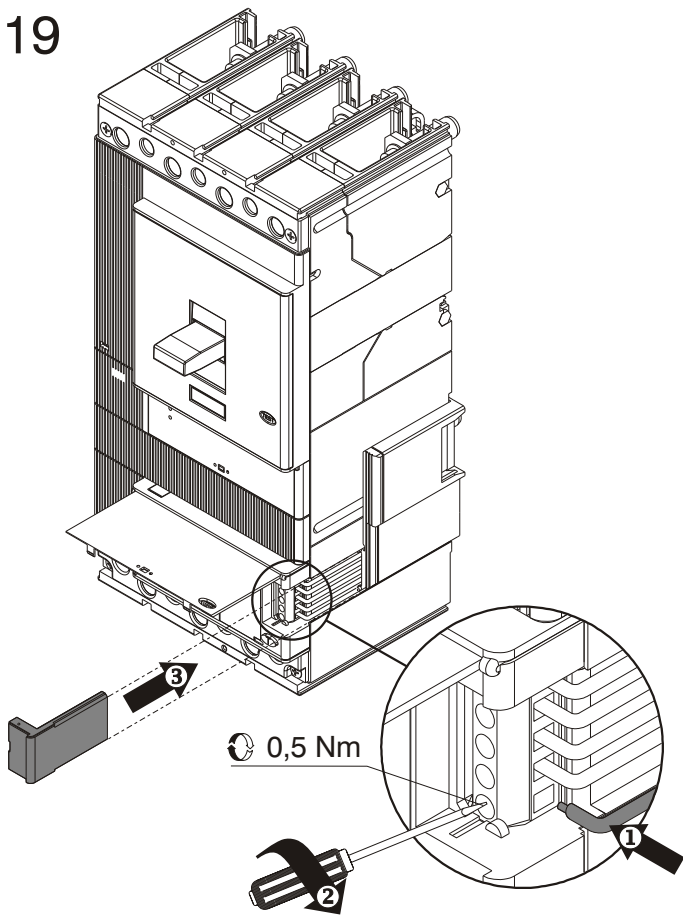


20

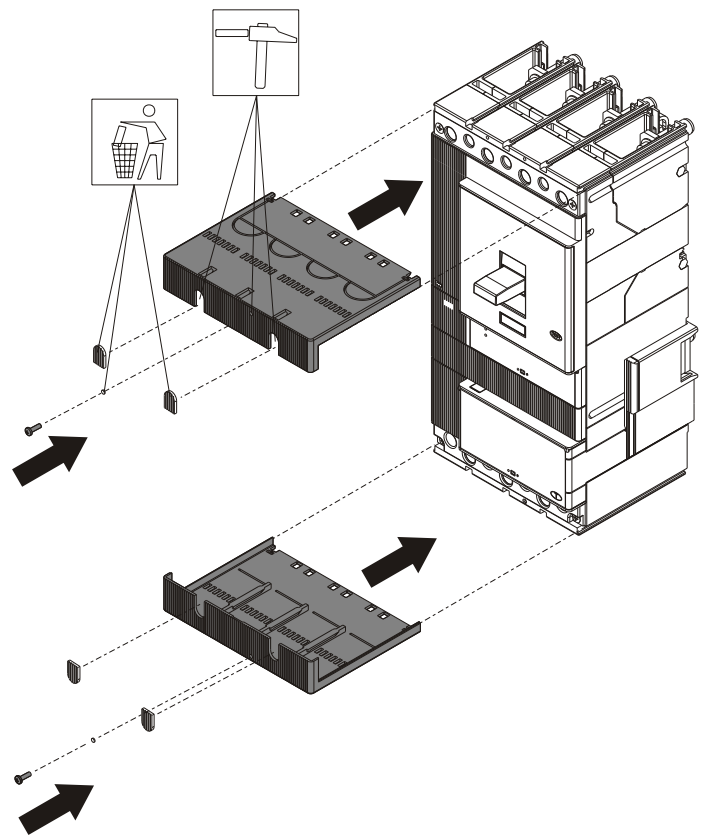


21

ONLY FOR T5 630

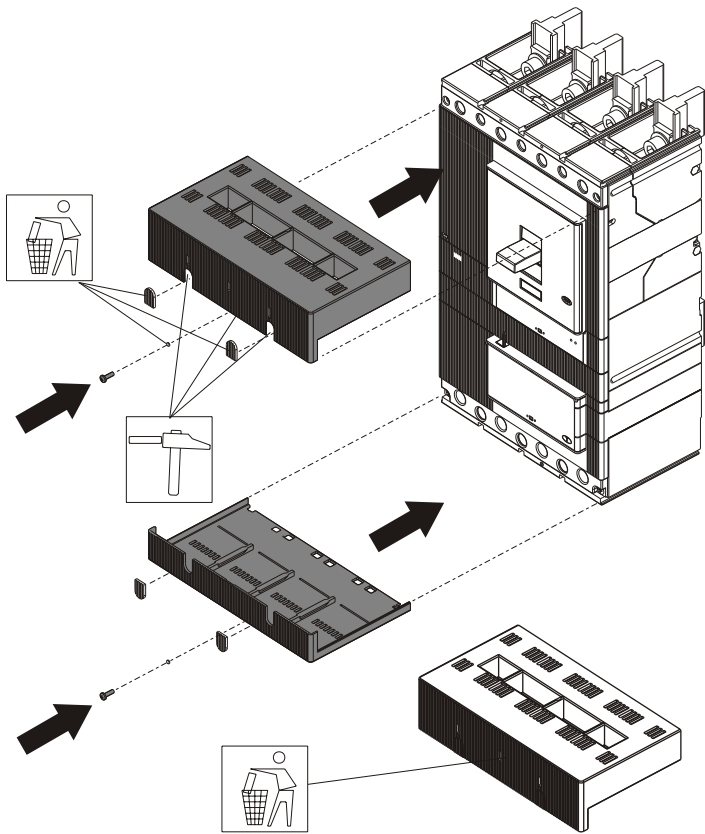


22

ONLY FOR W

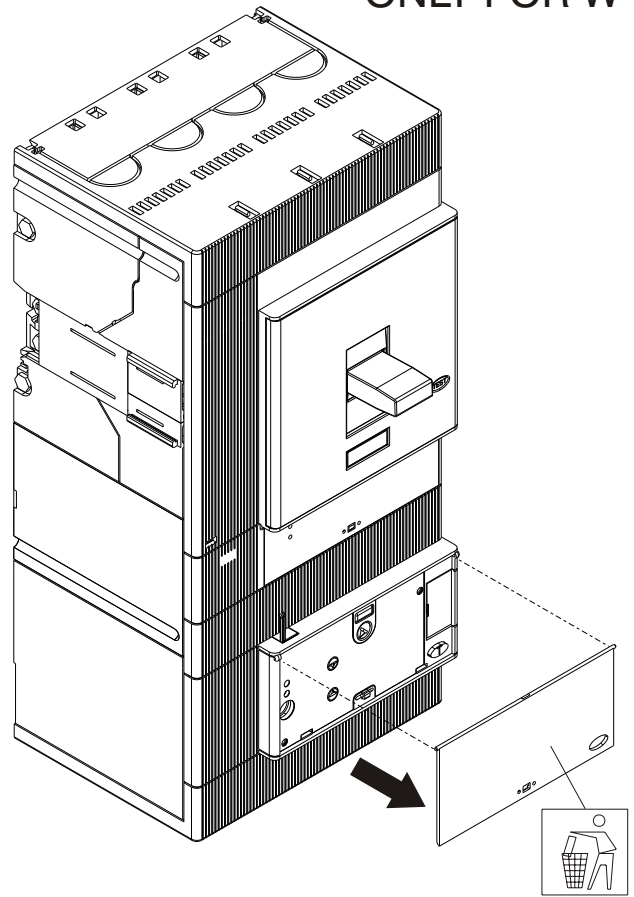


23

ONLY FOR W

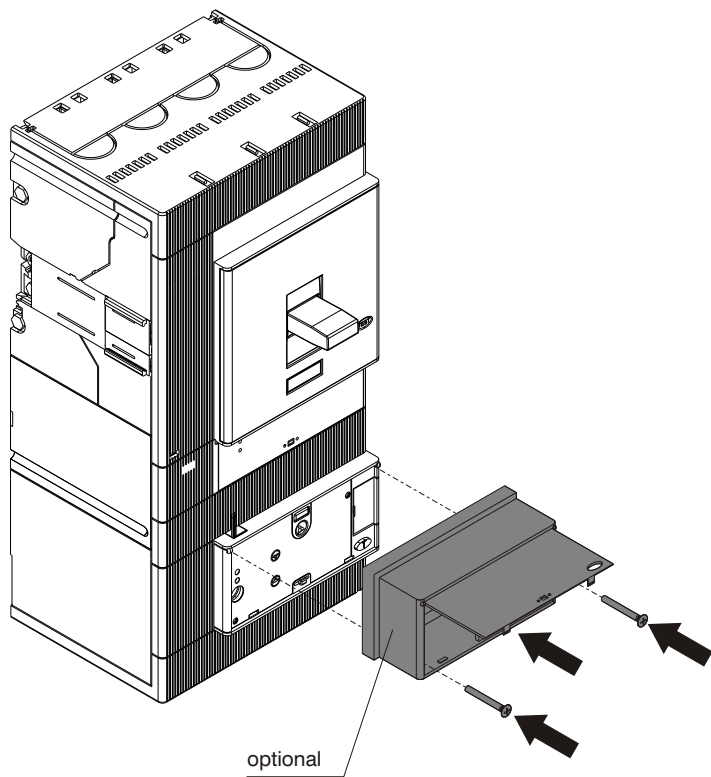


24

T4

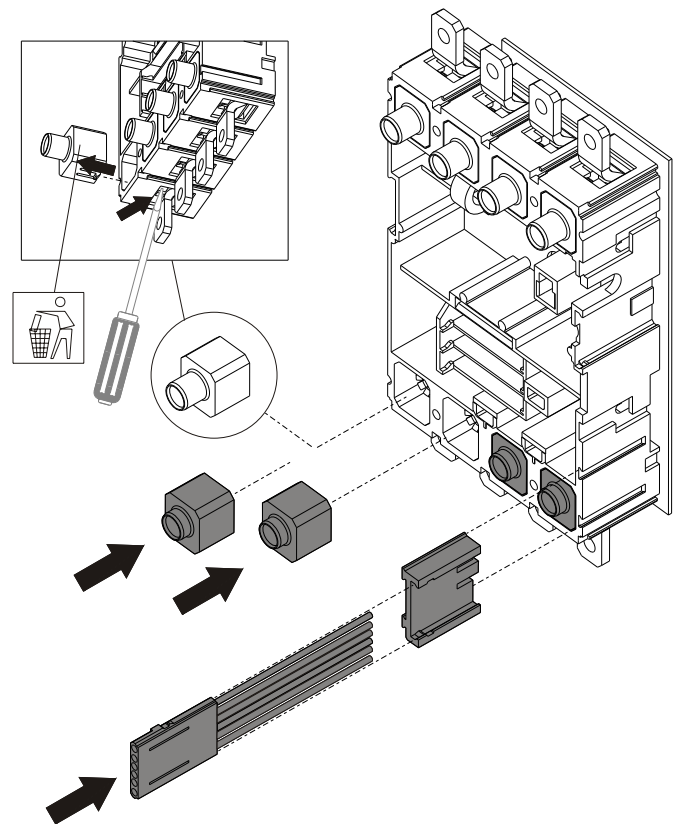


25

T5 400

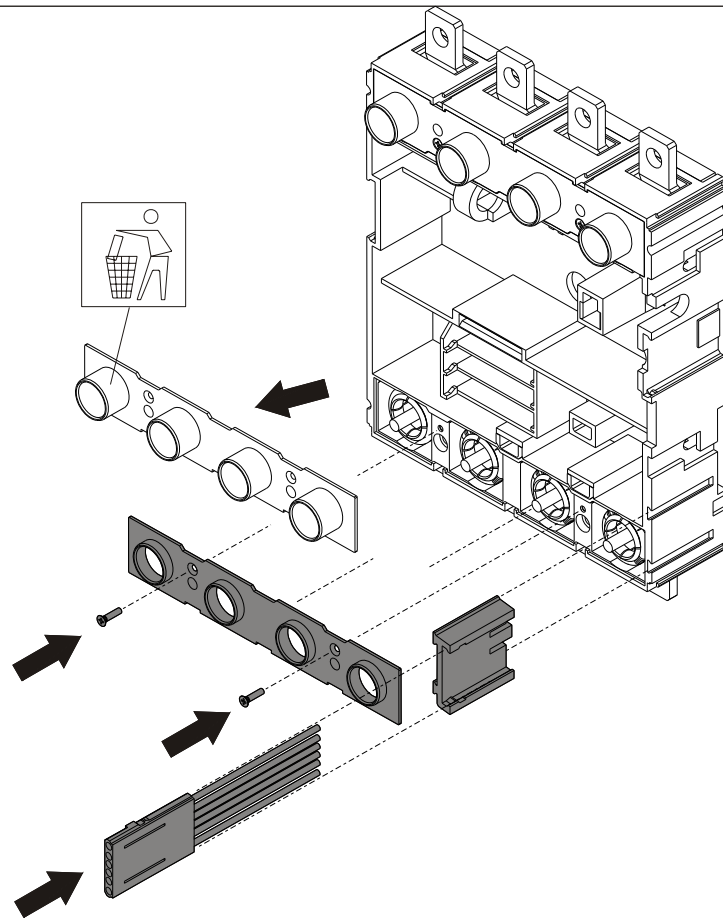


26


T5 630

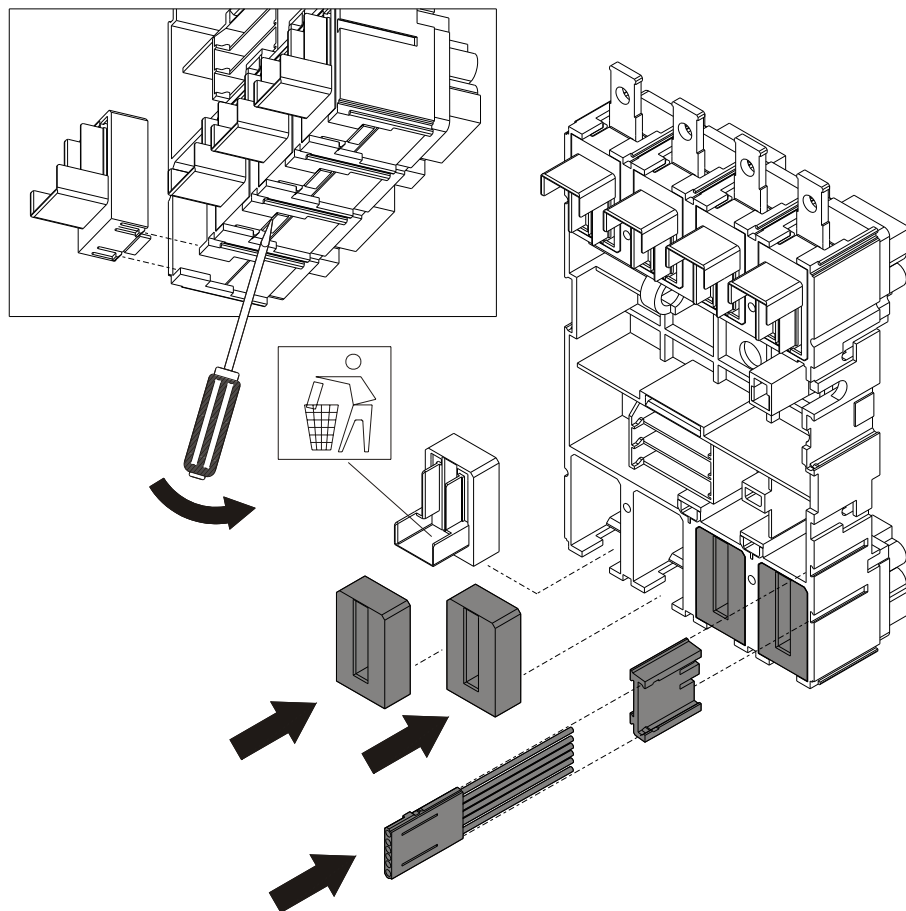



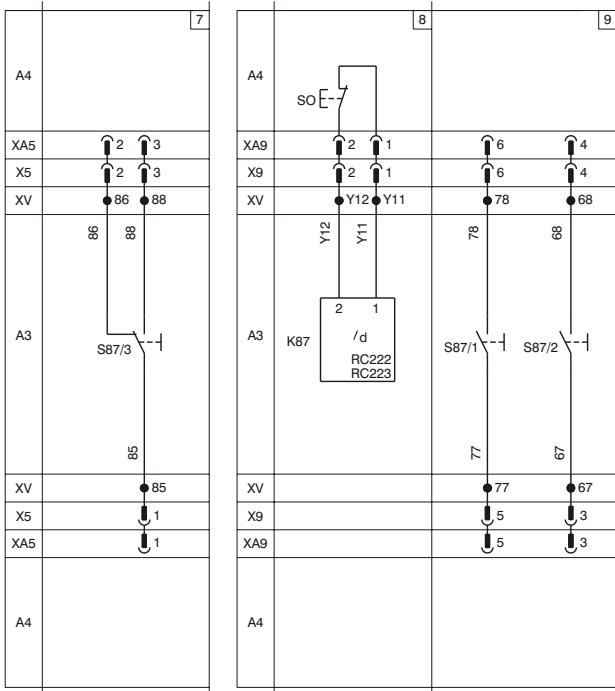

- SO = Pulsante o contatto per l'apertura dell'interruttore
- SO = Pushbutton or contact for opening the circuit-breaker
- SO = Taster oder Schalter zum Öffnen des Leistungsschalters
- SO = Bouton-poussoir ou contact pour l'ouverture du disjoncteur
- SO = Pulsador o contacto para la apertura del interruptor
  
- S87/1 = Contatto per la segnalazione elettrica di preallarme dello sganciatore differenziale tipo RC222
- S87/1 = Pre-alarm electrical signalling contact of releasing device RC222
- S87/1 = Kontakt für die elektrische Voralarmanzeige des Differentialauslösers vom Typ RC222
- S87/1 = Contact pour l'avertissement électrique de préalarme du déclencheur différentiel type RC222
- S87/1 = Contacto para la señalación eléctrica de prealarma del disparador diferencial tipo RC222
  
- S87/2 = Contatto per la segnalazione elettrica di allarme dello sganciatore differenziale tipo RC222
- S87/2 = Alarm electrical signalling contact of differential releasing device RC222
- S87/2 = Kontakt für die elektrische Alarmanzeige des Differentialauslösers vom Typ RC222
- S87/2 = Contact pour l'avertissement électrique d'alarme du déclencheur différentiel type RC222
- S87/2 = Contacto para la señalación eléctrica de alarma del disparador diferencial tipo RC222
  
- S87/3 = Contatto per la segnalazione elettrica di interruttore aperto per intervento dello sganciatore differenziale tipo RC222
- S87/3 = Electrical signalling contact for open construction circuit-breaker for differential releasing device RC222 operation.
- S87/3 = Kontakt für die elektrische Anzeige des offenen Leistungsschalter für das Eingreifen des Differentialauslösers vom Typ RC222
- S87/3 = Contact pour l'avertissement électrique de disjoncteur ouvert pour l'intervention du déclencheur différentiel type RC222
- S87/3 = Contacto para la señalación eléctrica de interruptor abierto para actuación del disparador diferencial tipo RC222
  
- K87 = Sganciatore differenziale RC222
- K87 = Residual-current release RC222
- K87 = Fehlerstromauslöser RC222
- K87 = Déclencheur différentiel RC222
- K87 = Relé diferencial Rc222

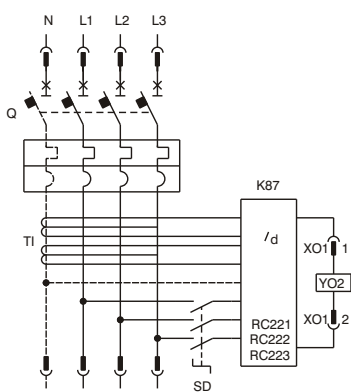

- Q = Interruttore principale
- Q = Main switch
- Q = Hauptschalter
- Q = Disjoncteur principal
- Q = Interruptor principal
  
- TI = Trasformatore di corrente toroidale
- TI = Toroidal current transformer
- TI = Ringkernwandler
- TI = Transformateur de courant torique
- TI = Transformador de corriente toroidal
  
- SD = Sezionatore dell'alimentazione dello sganciatore differenziale tipo RC222
- SD = Power supply isolator of the Rc222 residual-current release
- SD = Trennschalter der Stromversorgung des Fehlerstromauslösers RC222
- SD = Sectionneur de l'alimentation du déclencheur différentiel type RC222
- SD = Seccionador de la alimentación del relé diferencial tipo RC222
  
- XO1 = Connettore per il solenoide di apertura YO2
- XO1 = Connector for the opening solenoid YO2
- XO1 = Steckverbinder für die Ausschaltspule YO2
- XO1 = Connecteur pour le solénoïde d'ouverture YO2
- XO1 = Conector para el solenoide de apertura YO2
  
- YO2 = Solenoide di apertura dello sganciatore differenziale tipo RC222
- YO2 = Opening solenoid of the RC222 residual-current release
- YO2 = Ausschaltspule des Fehlerstromauslösers RC222
- YO2 = Solénoïde d'ouverture du déclencheur différentiel type RC222
- YO2 = Solenoide de apertura del relé diferencial tipo RC222



ABB SACE S.p.A.

Via Baioni, 35

24123 Bergamo Italy

Tel.: +39 035 395.111 - Telefax: +39 035 395.306-433

<http://www.abb.com>