

Tmax

DOC. N.° 1SDH000436R0623 - L2358

AUX-MO - Contatti ausiliari funzionam. locale/remoto per comando motore T4-T5-T6



AUX-MO - Local/remote auxiliary contacts for T4-T5-T6 motor operating mechanism

AUX-MO - Hilfskontakte lokaler/Fernbetrieb für Motorantrieb T4-T5-T6

AUX-MO - Contacts auxiliaires fonctionnement local/déporté pour commande moteur T4-T5-T6


AUX-MO - Contactos auxiliares funcionam. local/remoto para control motor T4-T5-T6

Tensione nominale Un Rated voltage Un Nennspannung Un Tension assignée Un Tensión nominal Un		Carico ohmico In (A) Ohmic load In (A) Ohmsche Last In (A) Charge ohmique In (A) Carga resistiva In (A)
V 50-60 Hz	V -	
—	125	0,3
—	250	0,15
250	—	6
400	—	3

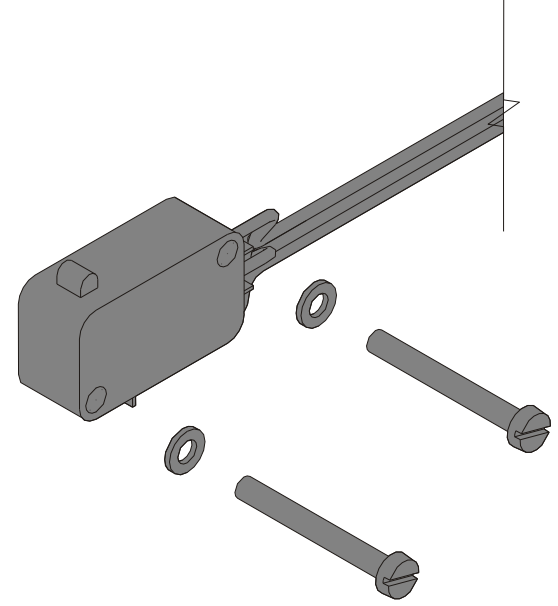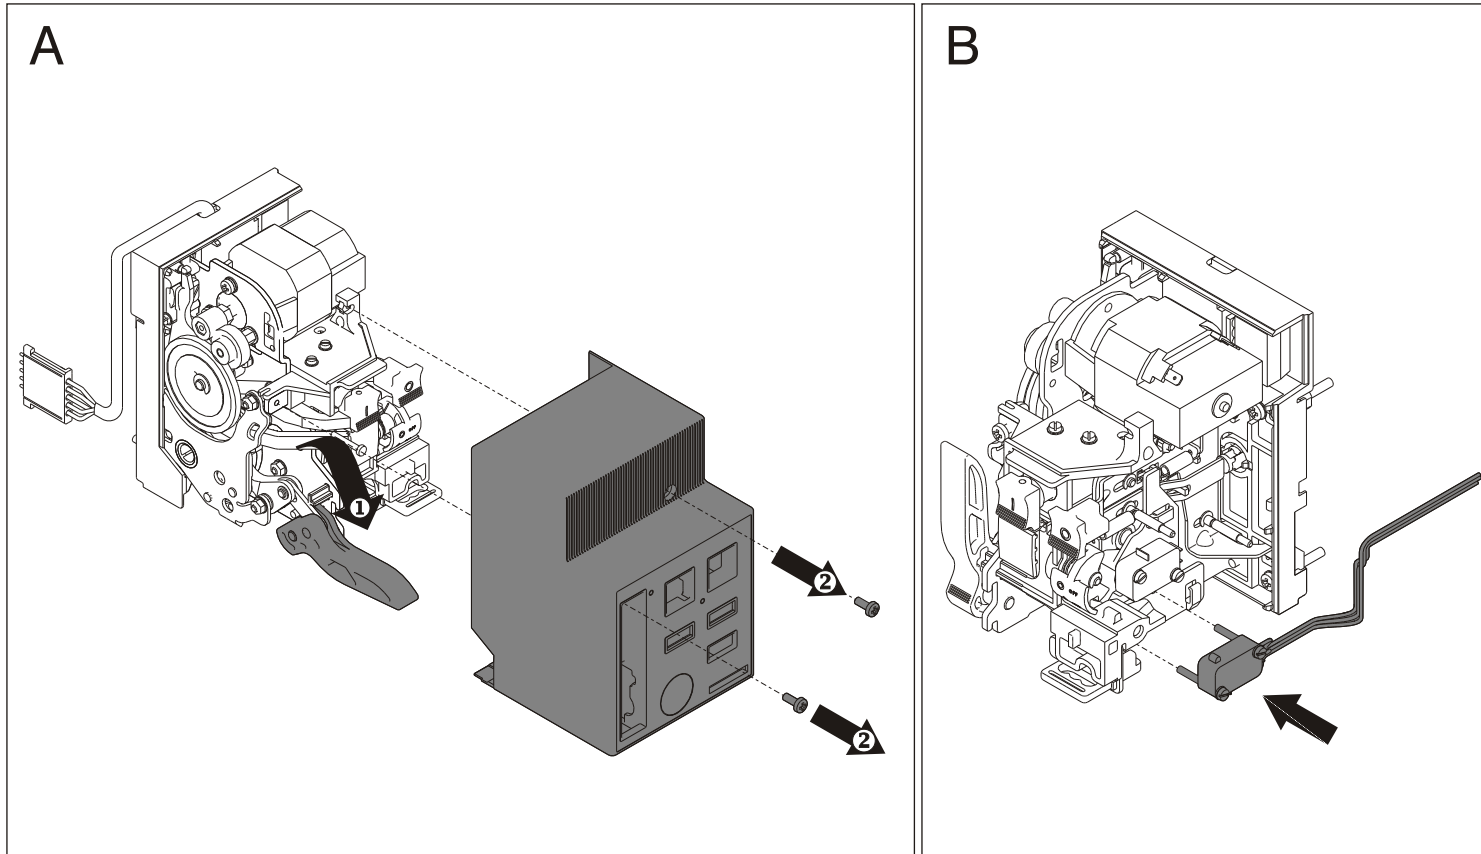
C

T4-T5

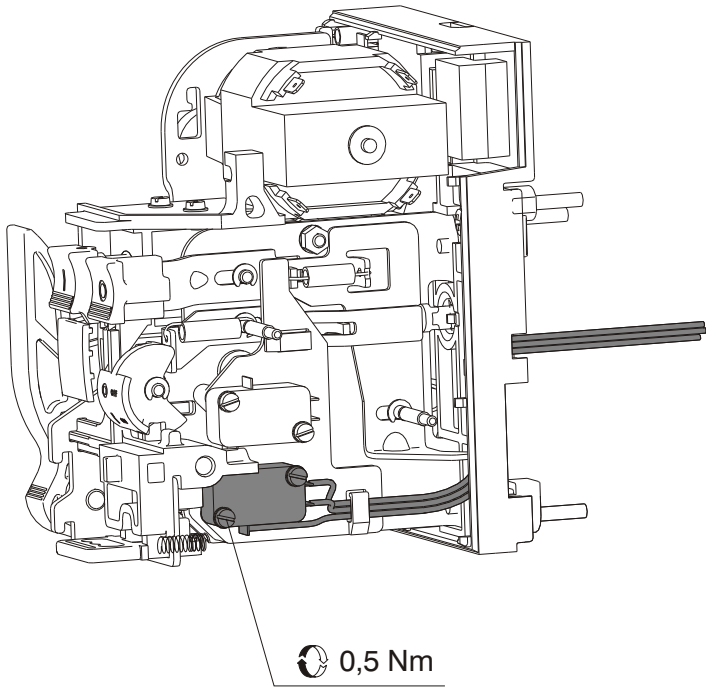


D


T6

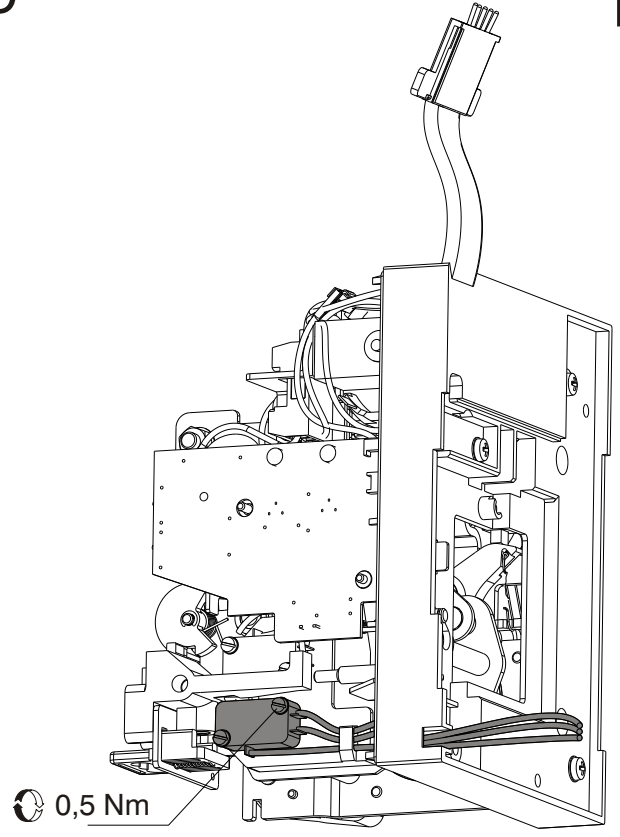


E

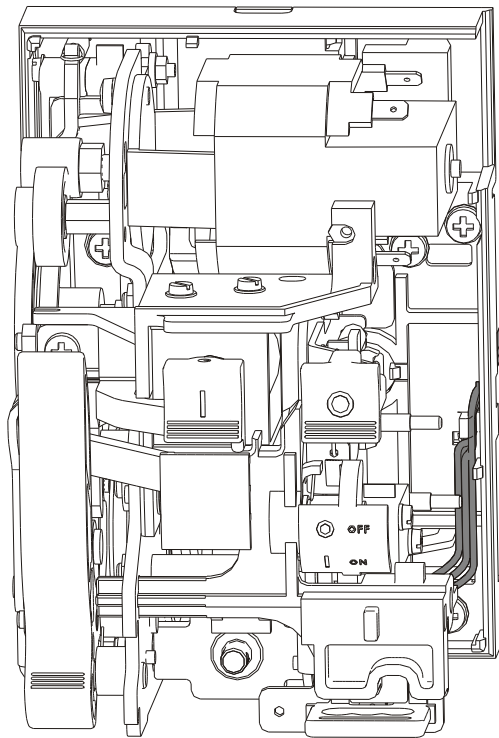

F

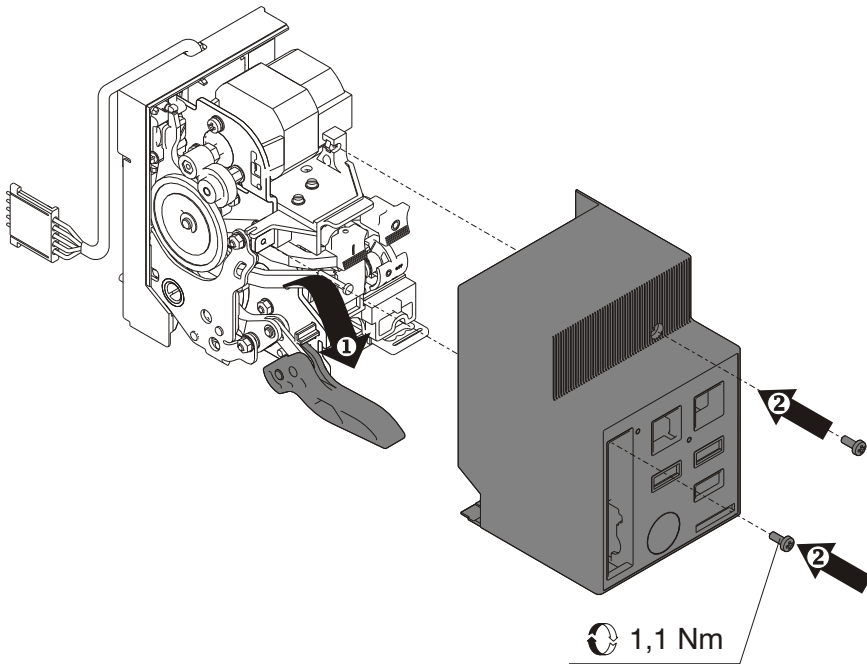

G

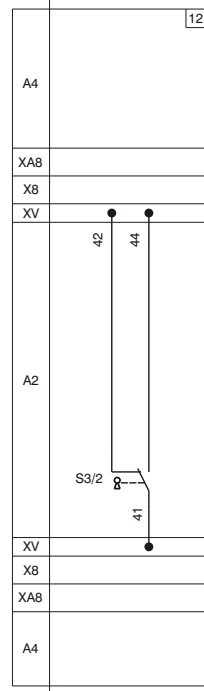

**LEGENDA KEY
ZEICHENERKLÄRUNG
LÉGENDE LEYENDA**

S3/1-2: = Contatto di scambio per la segnalazione elettrica di stato del selettore locale/remoto

S3/1-2 = Change-over contact for electrical signalling of local/remote selector status

S3/1-2 = Umschalter für die elektrische Zustandsmeldung des lokalen /fernen Wahlschalters

S3/1-2 = Contact inverseur pour signalisation électrique de état de local/ déporté sélecteur

S3/1-2 = Contacto conmutado para señalización eléctrica de estado de local/remoto selector



ABB SACE S.p.A.

Via Baioni, 35
24123 Bergamo Italy

Tel.: +39 035 395.111 - Telefax: +39 035 395.306-433

<http://www.abb.com>