 
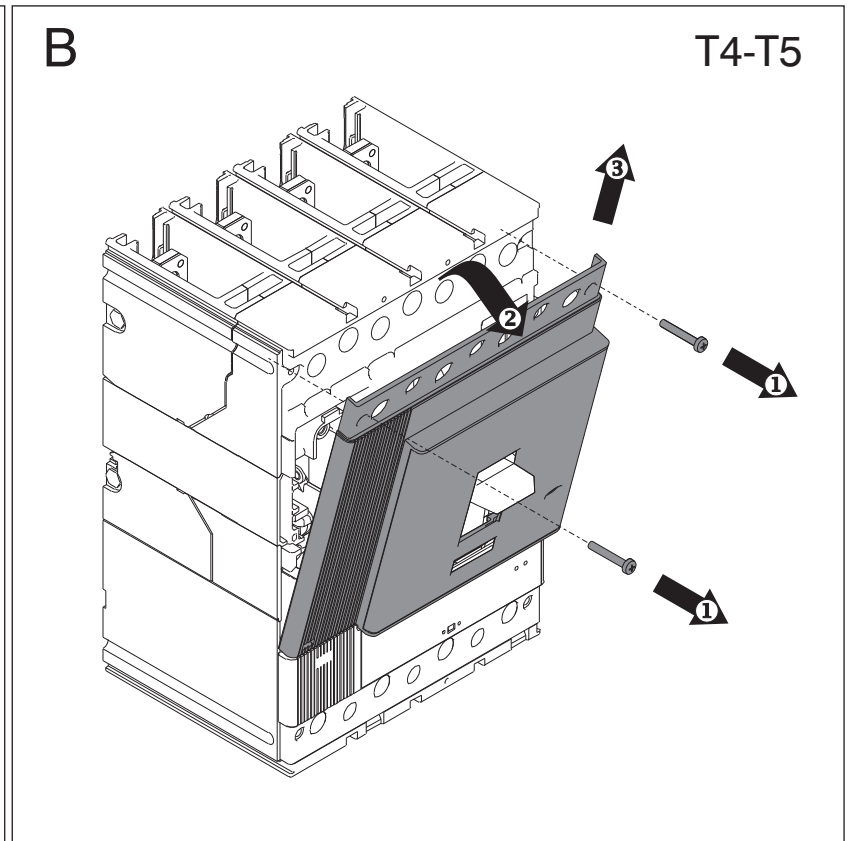 
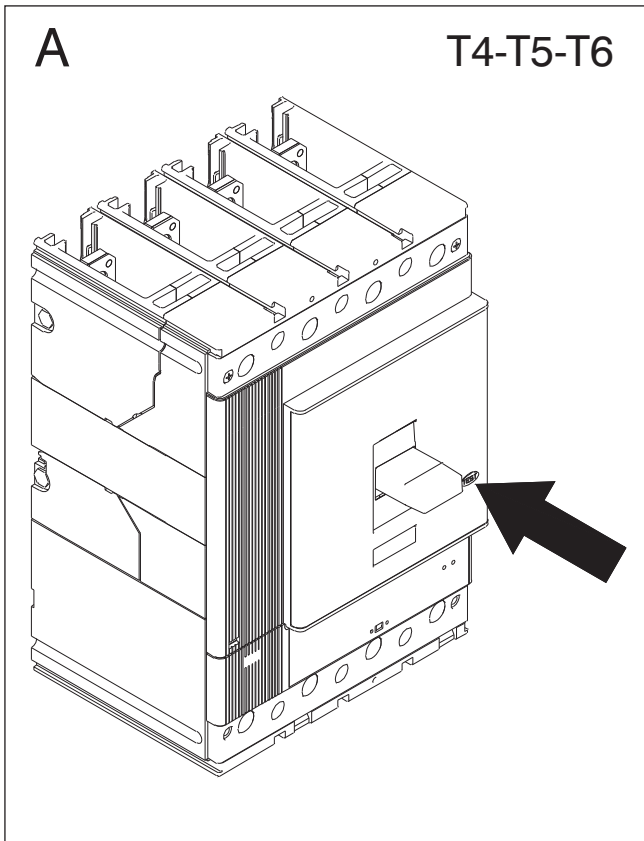 
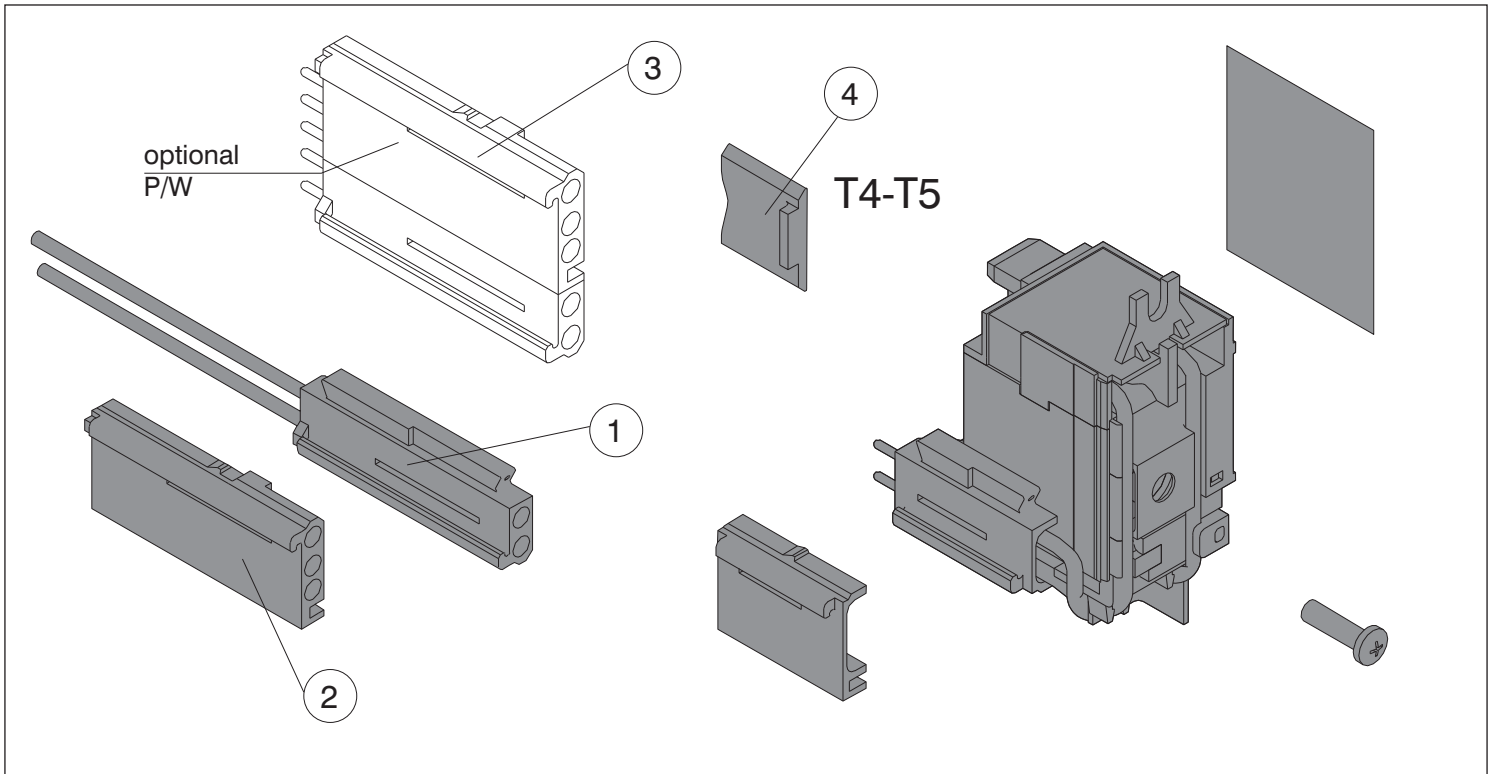 
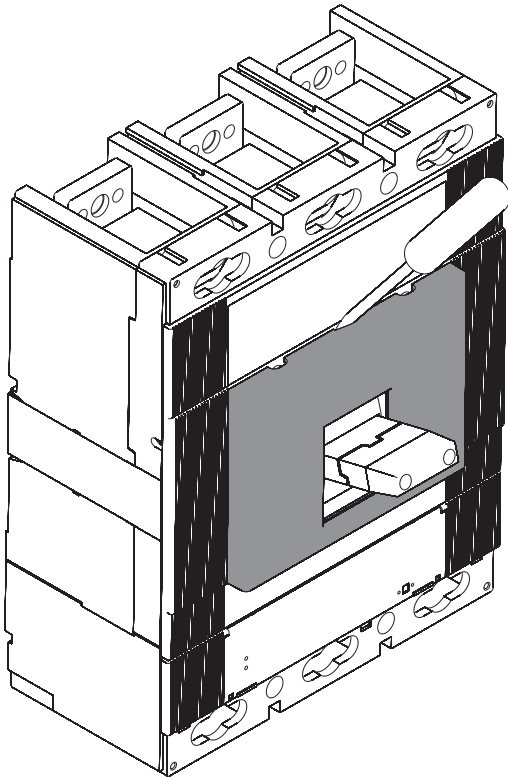 
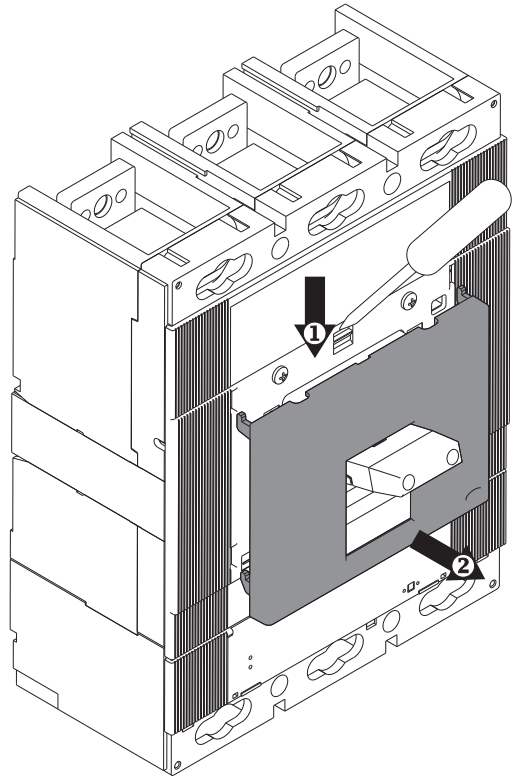 
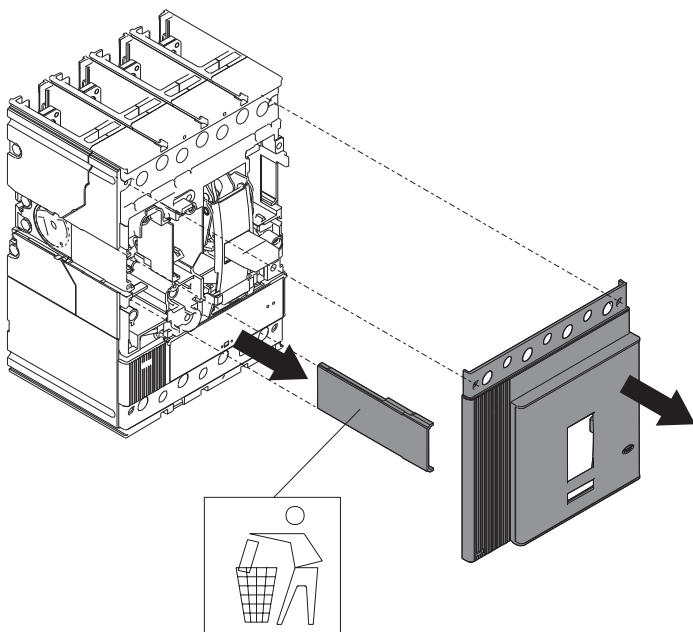 
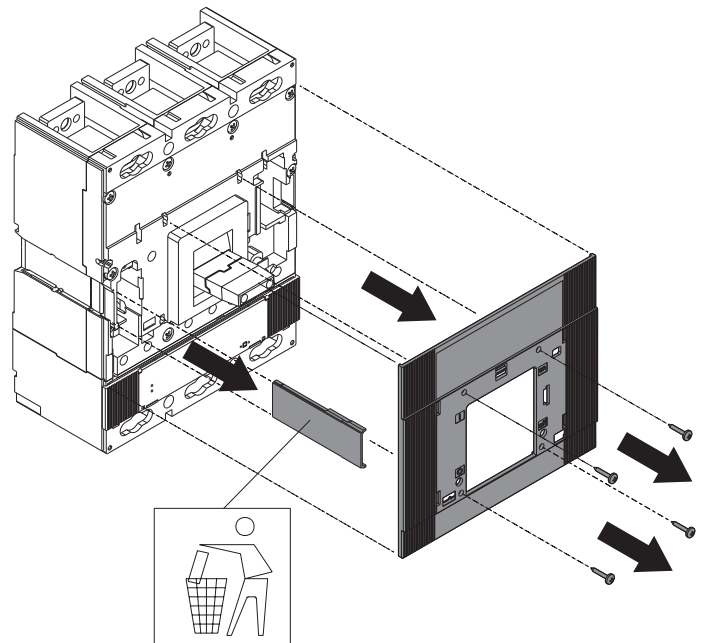 
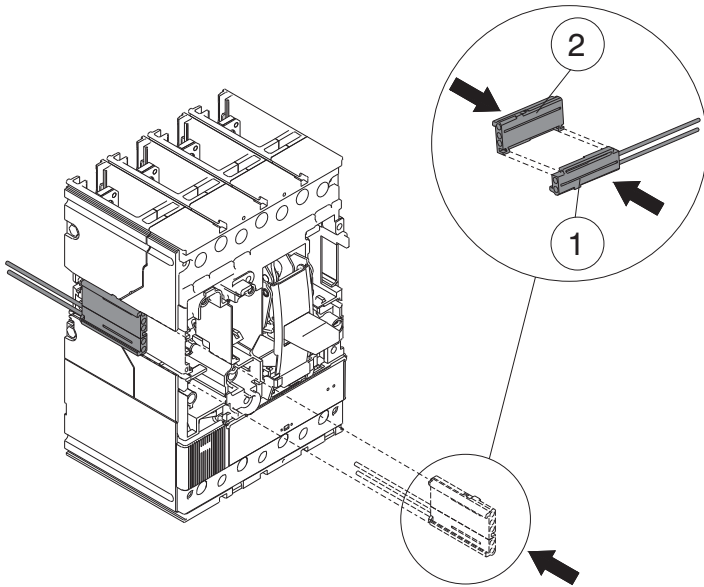 
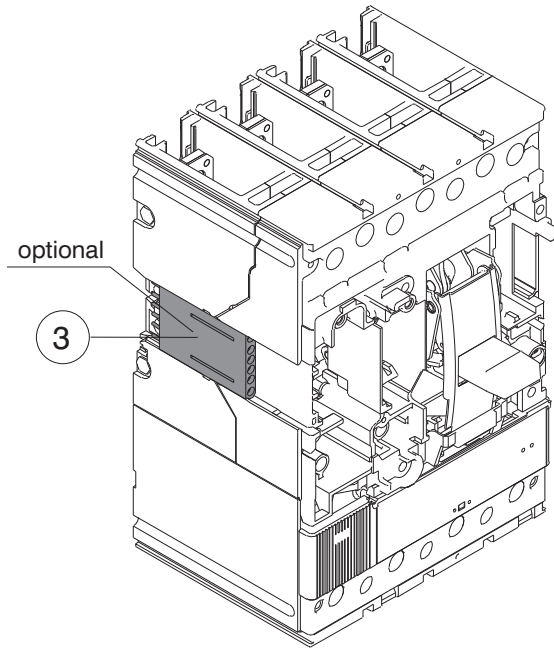 


- SOR-C/ UVR-C/ PS-SOR-C - Sganciatore di apertura/minima tensione cablato T4-T5-T6
- SOR-C/ UVR-C/ PS-SOR-C - T4-T5-T6 Wired opening /undervoltage release
- SOR-C/ UVR-C/ PS-SOR-C - Arbeitsstrom-/Unterspannungsauslöser, verdrahtet, T4-T5-T6
- SOR-C/ UVR-C/ PS-SOR-C - Déclencheur d'ouverture à émission/à minimum de tension câblé T4-T5-T6
- SOR-C/ UVR-C/ PS-SOR-C - Relé de apertura/tensión mínima cableado T4-T5-T6

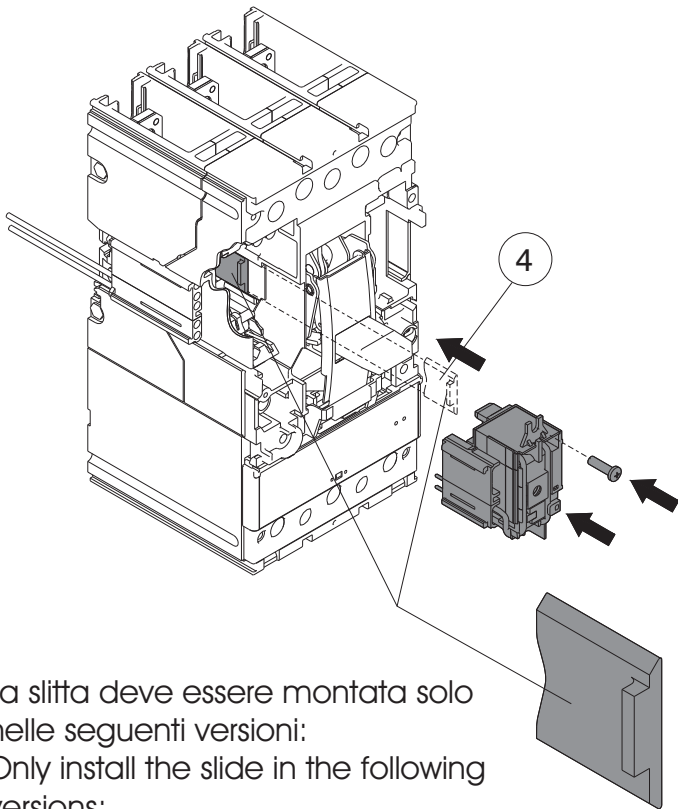

C**T6****D****T6****E****T4-T5****F****T6**

G**T4-T5-T6****H****T4-T5 P-W
T6 W****I****T4-T5 III**


La slitta deve essere montata solo nelle seguenti versioni:
Only install the slide in the following versions:





Der Schlitten muss nur bei den folgenden Versionen montiert werden:

Le rail ne doit être monté que dans les versions suivantes:

Montar la corredera solamente en las siguientes versiones:


T4	III	OK
T4	IV	NO
T5	III	OK
T5	IV	NO
T6	III	NO
T6	IV	NO

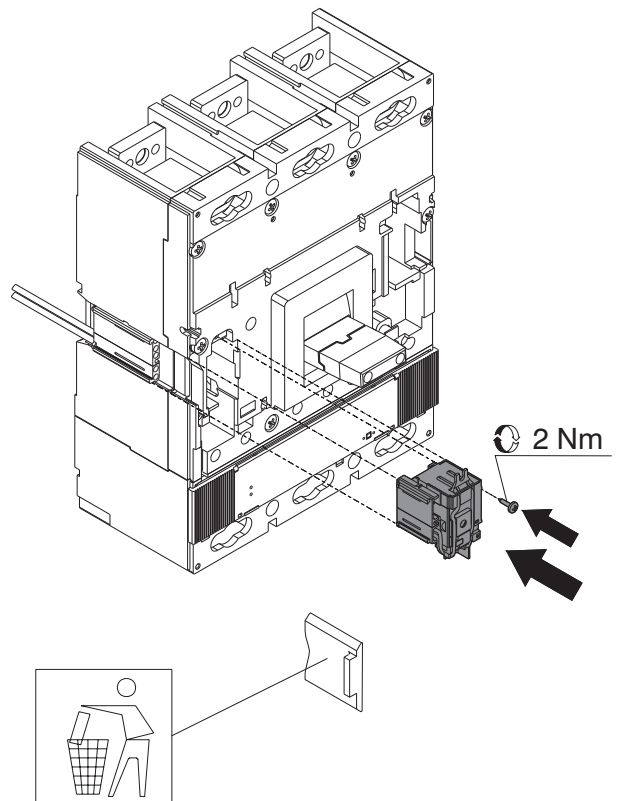 J**T6 III****ABB**

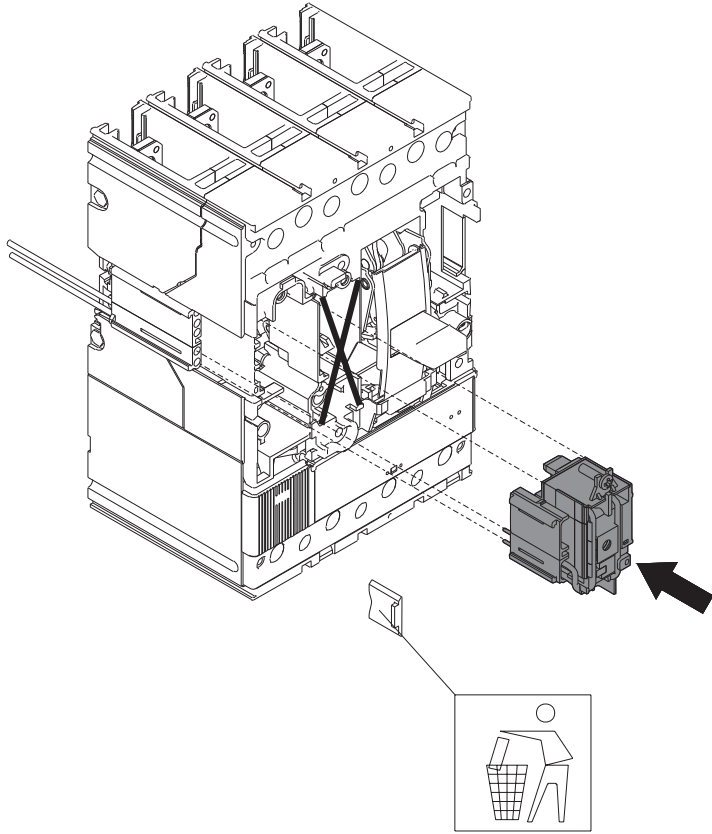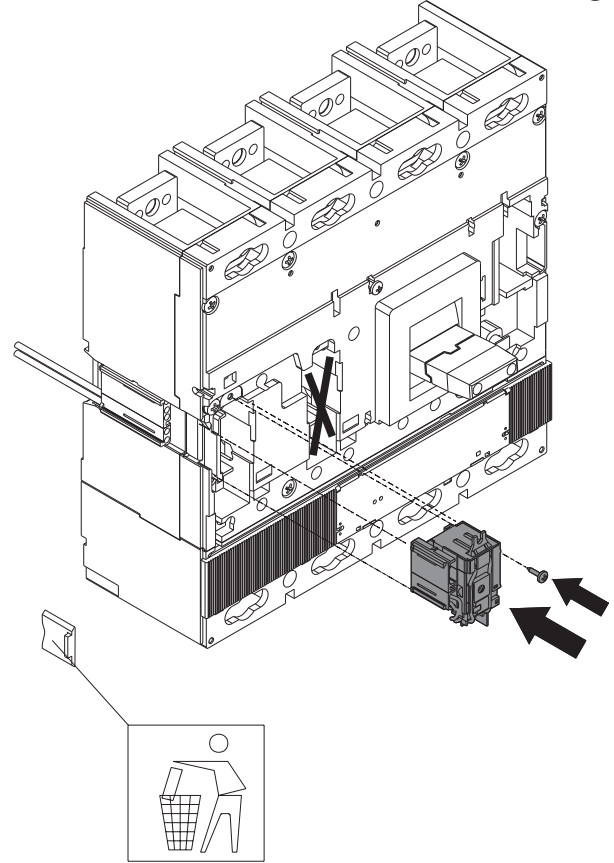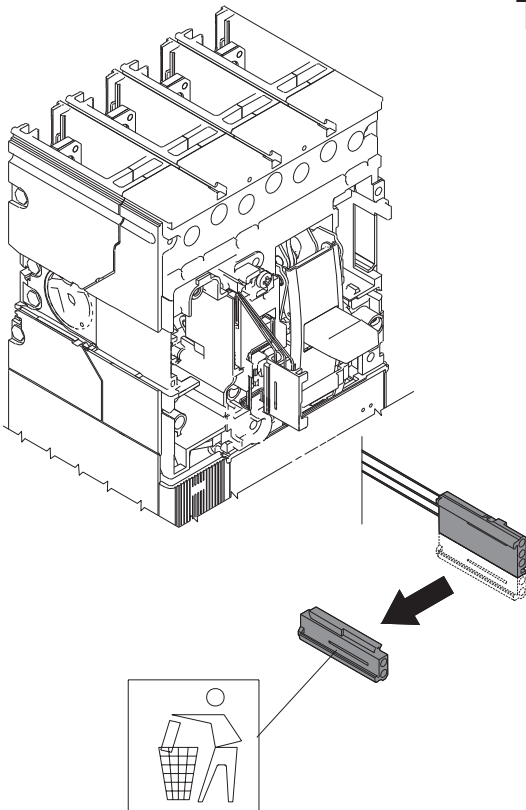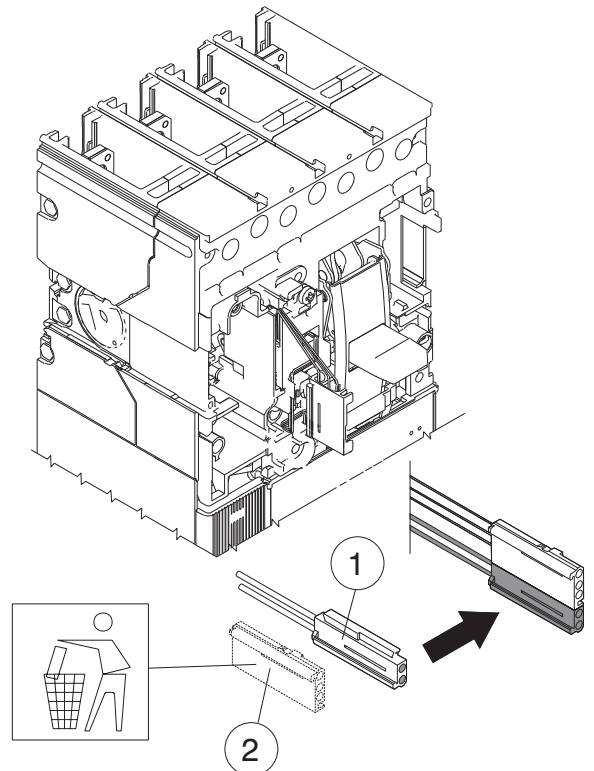    K**T4-T5 IV****L****T6 IV****M****ONLY WITH SA RC222
T4-T5****N****ONLY WITH SA RC222
T4-T5**


O

 ONLY WITH SA RC222
T4-T5

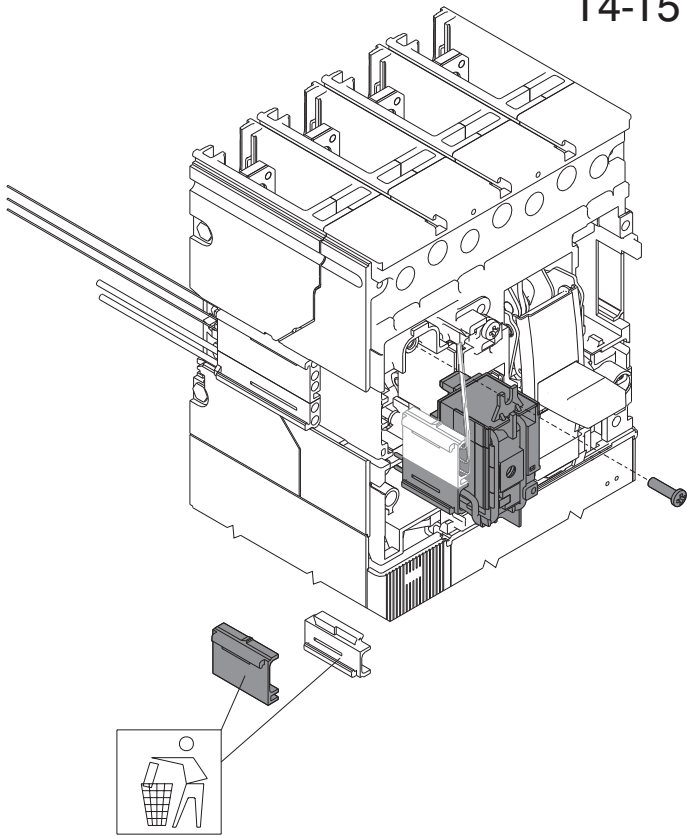

P

 
T4-T5

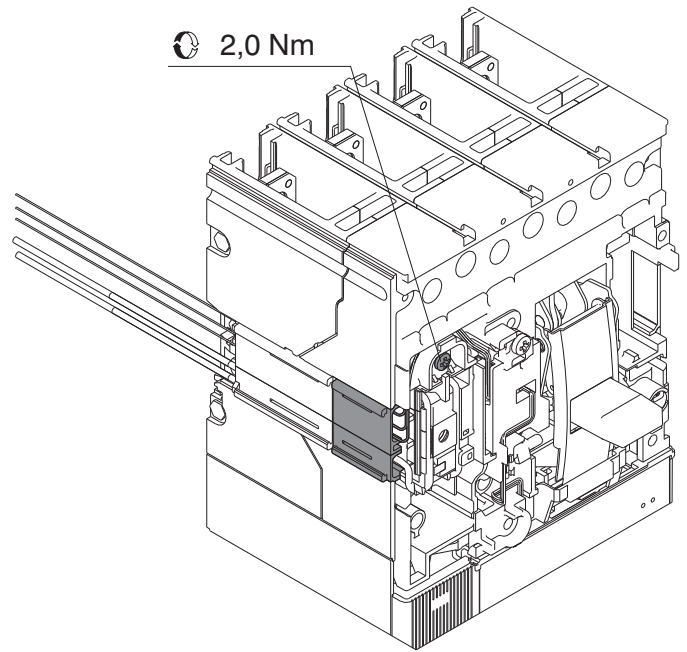

Q


T6




 
2 Nm

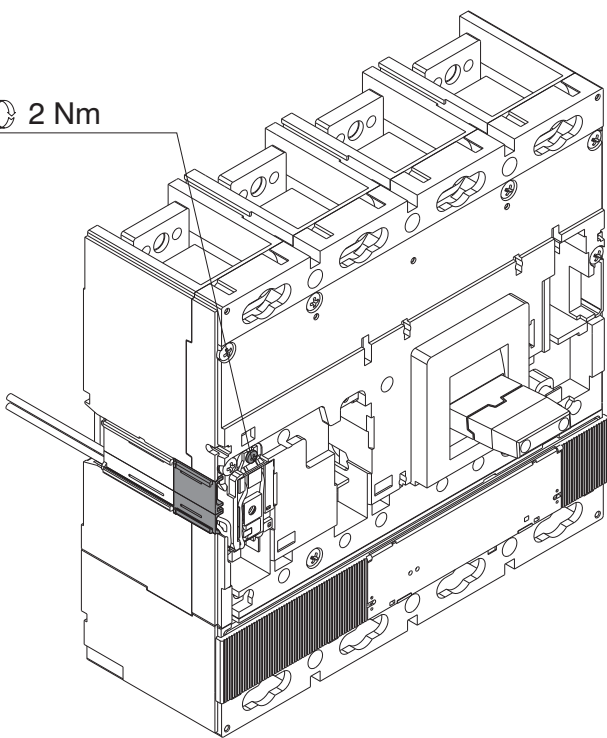

R

     
T4-T5

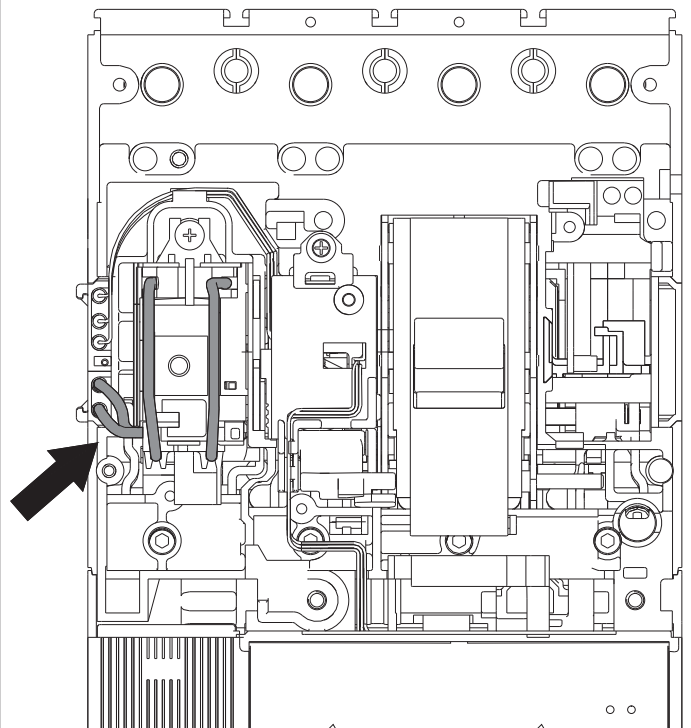

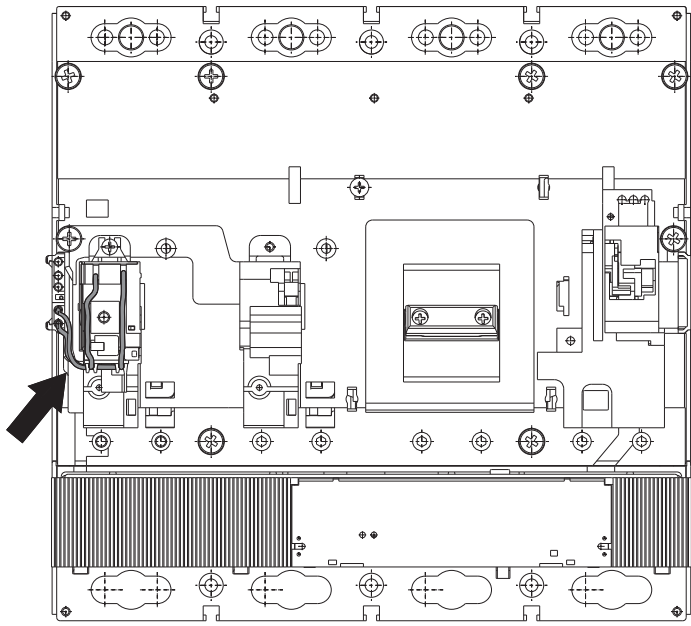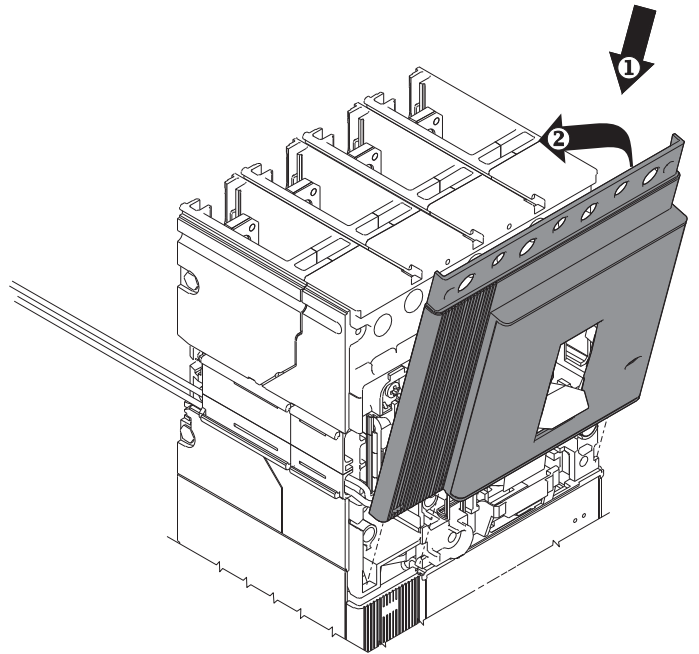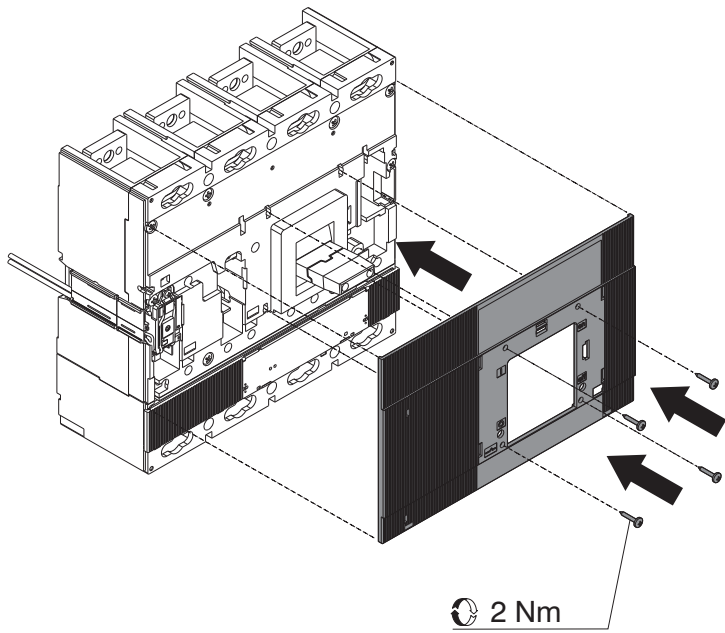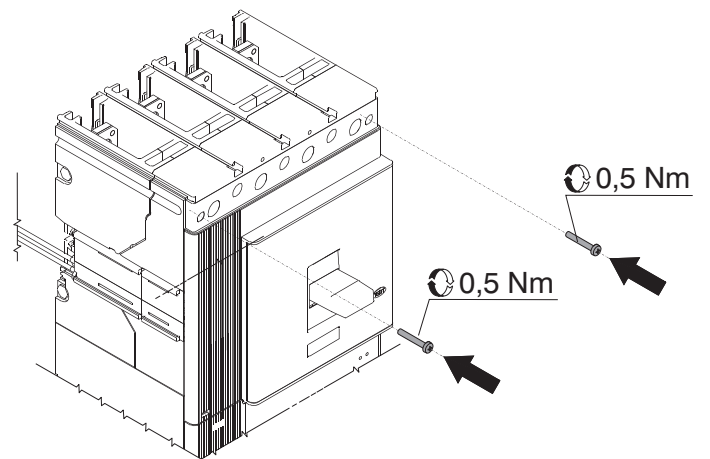S**T6****T****T4-T5****U****T6****V****T4-T5**


W

 T6

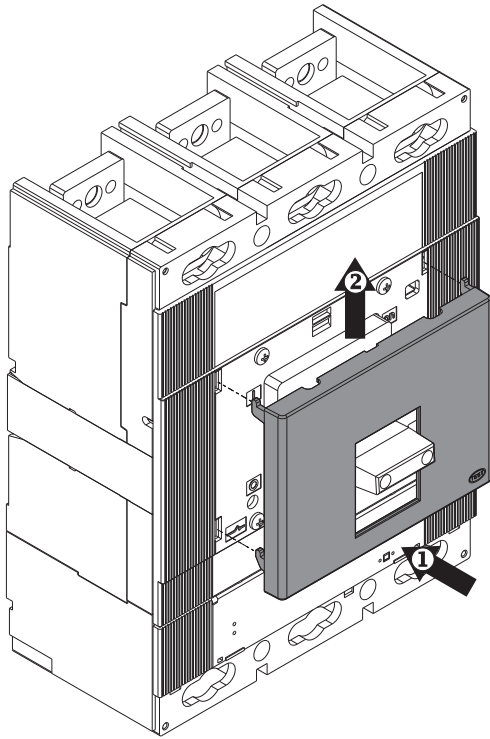


X

 
T4-T5 P-W
T6 W

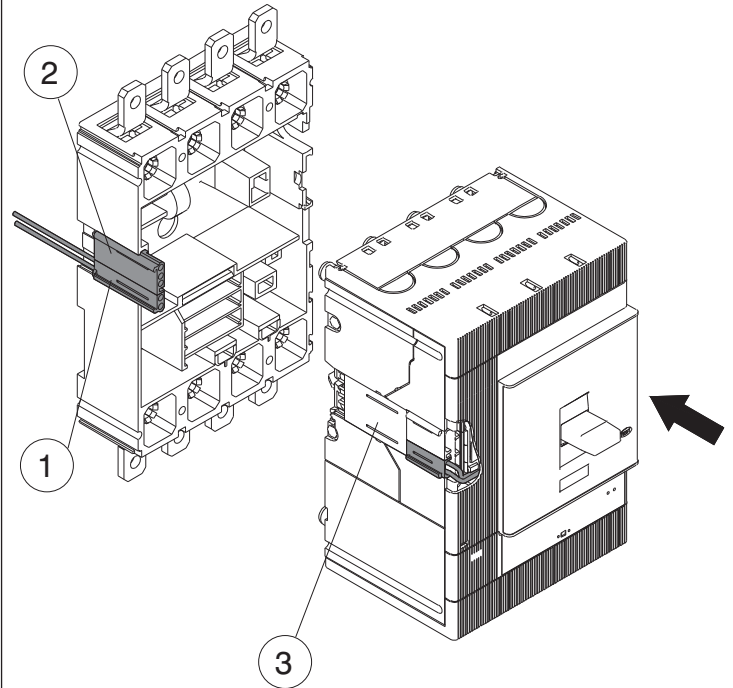

Y

  T4-T5-T6

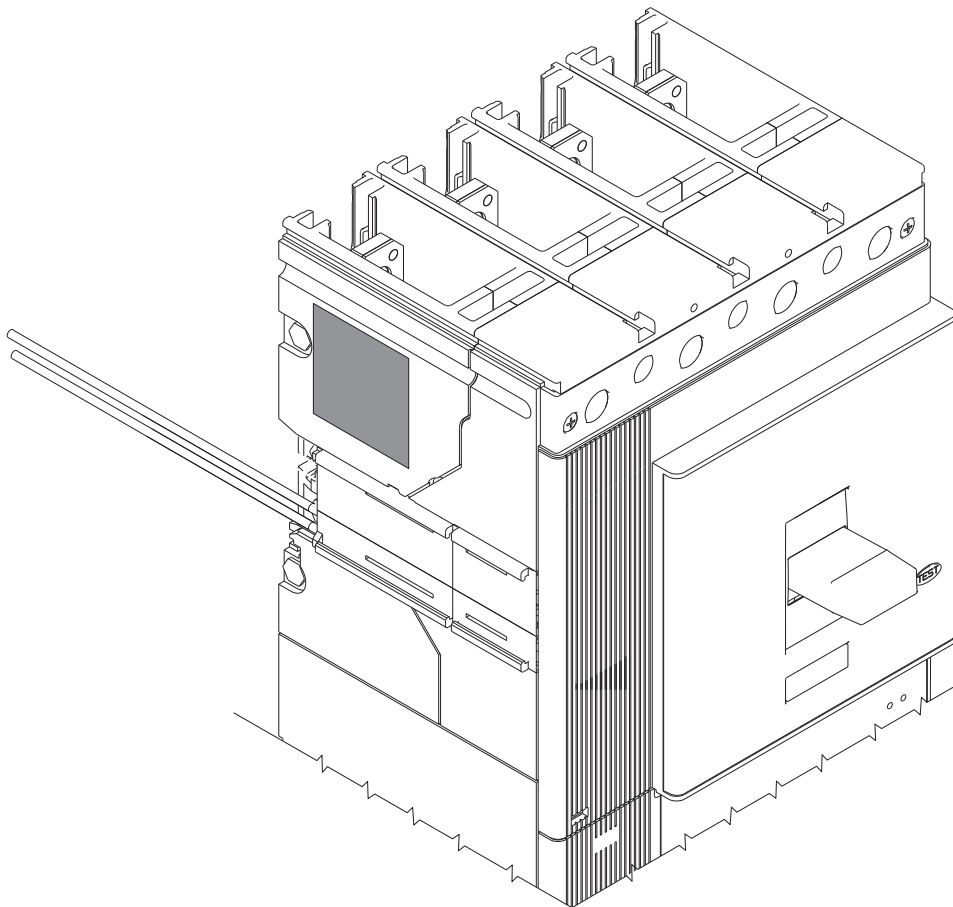

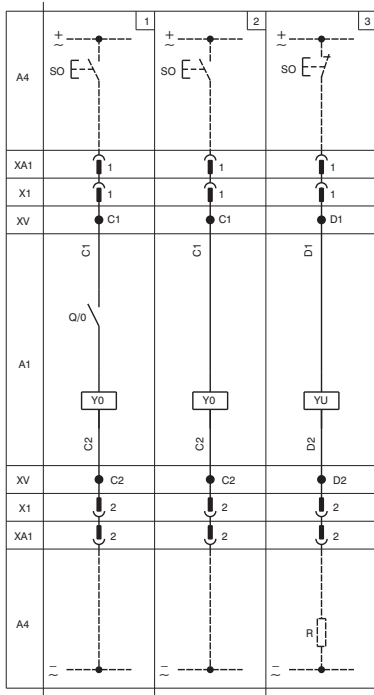

SO = Pulsante o contatto per l'apertura dell'interruttore
 SO = Pushbutton or contact for opening the circuit-breaker
 SO = Taster oder Schalter zum Öffnen des Leistungsschalters
 SO = Bouton-poussoir ou contact pour l'ouverture du disjoncteur
 SO = Pulsador o contacto para la apertura del interruptor

Q/0 = Contatti ausiliari dell'interruttore
 Q/0 = Auxiliary contacts of the circuit-breaker
 Q/0 = Hilfsschalter des Leistungsschalters
 Q/0 = Contacts auxiliaires du disjoncteur
 Q/0 = Contactos auxiliares del interruptor

YO = Sganciatore di apertura
 YO = Opening release
 YO = Arbeitsstromauslöser
 YO = Déclencheur d'ouverture à émission
 YO = Relé de apertura

YU = Sganciatore di minima tensione
 YU = Undervoltage release
 YU = Unterspannungsauslöser
 YU = Déclencheur à minimum de tension
 YU = Relé de mínima tensión

R = Resistore
 R = Resistor
 R = Widerstand
 R = Resistance
 R = Resistencia



ABB SACE S.p.A.

Via Baioni, 35

24123 Bergamo Italy

Tel.: +39 035 395.111 - Telefax: +39 035 395.306-433

<http://www.abb.com>