


SOR - Sganciatore di apertura T1-T2-T3.

SOR - Shunt opening release T1-T2-T3.


SOR - Arbeitsstromauslöser T1-T2-T3.

SOR - Déclencheur d'ouverture à émission T1-T2-T3


SOR - Relé de apertura T1-T2-T3

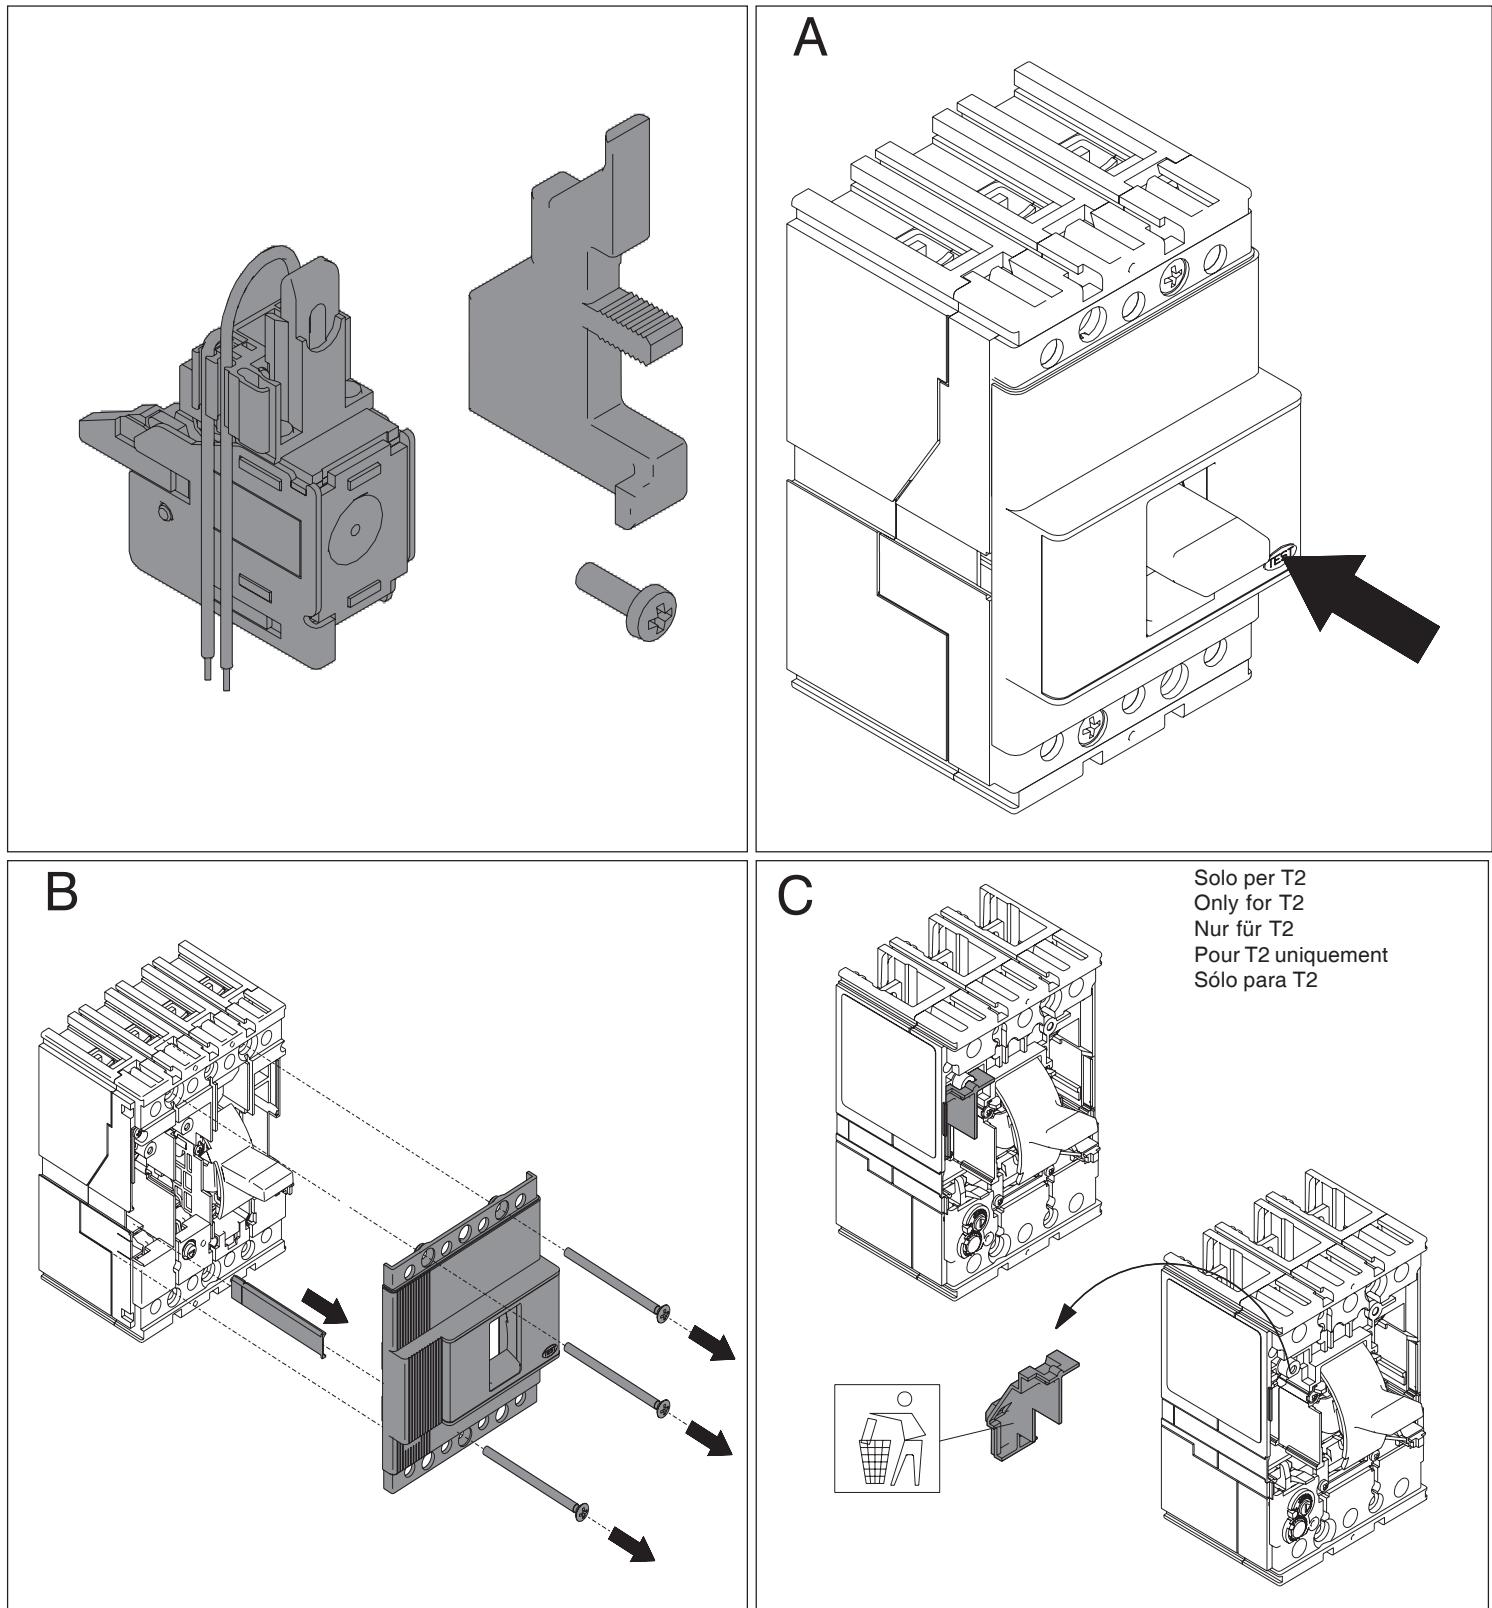

D





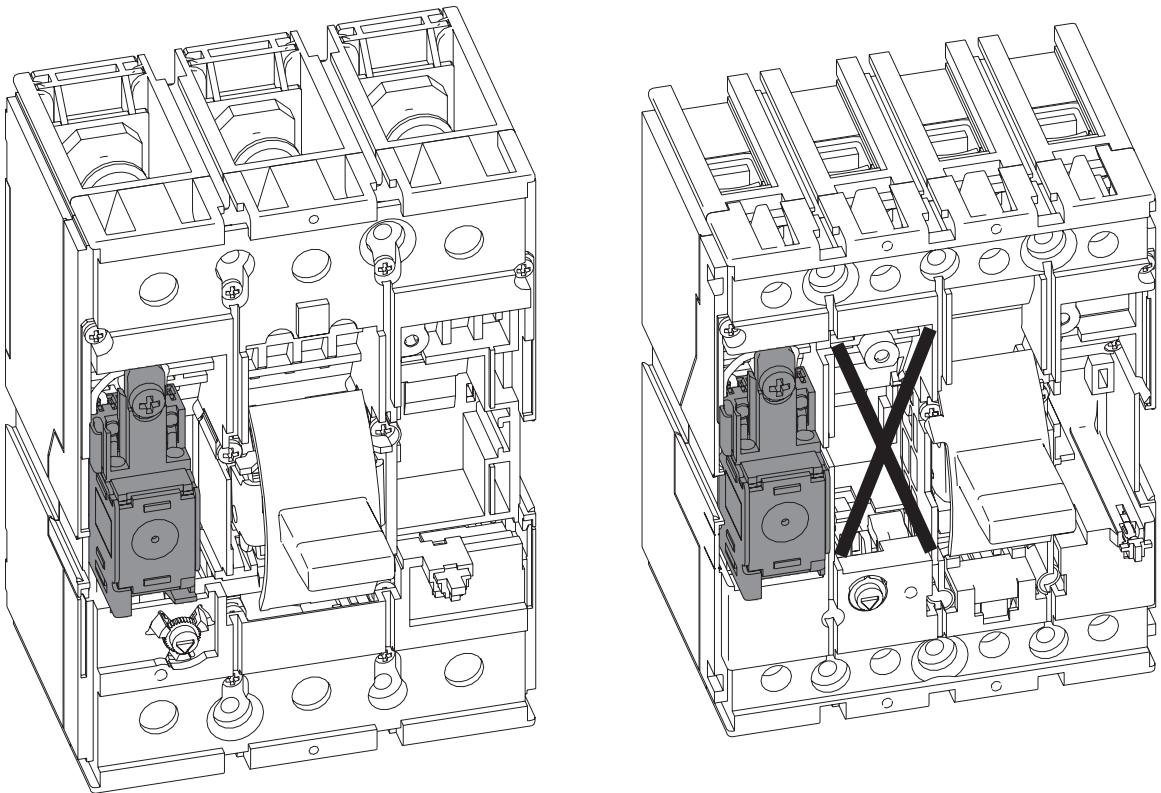


E

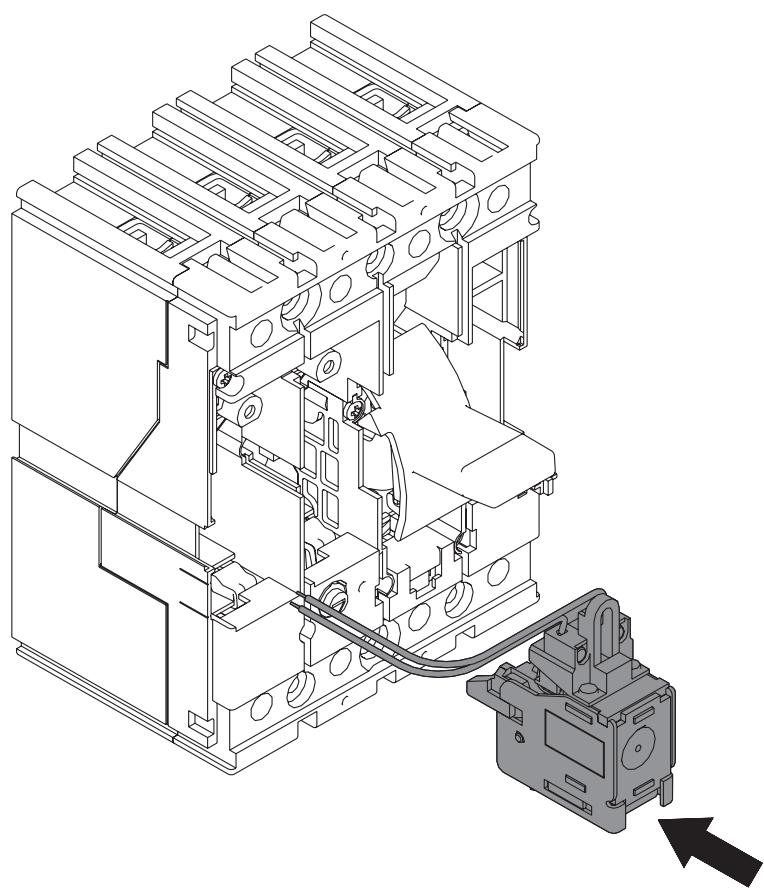

ABB


F

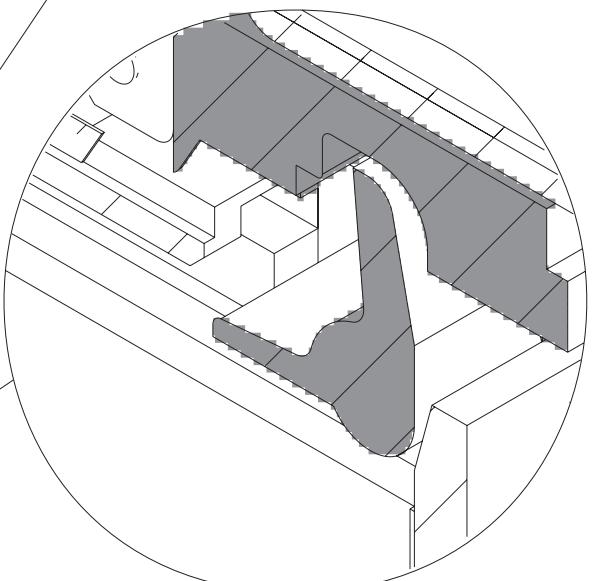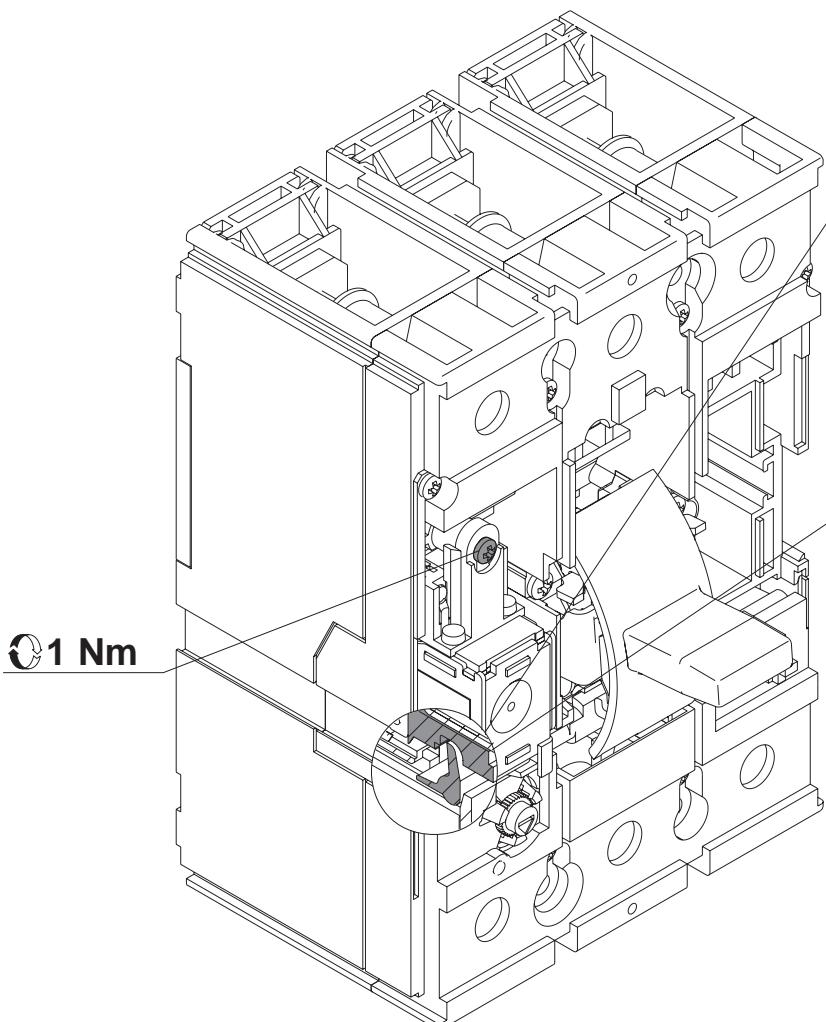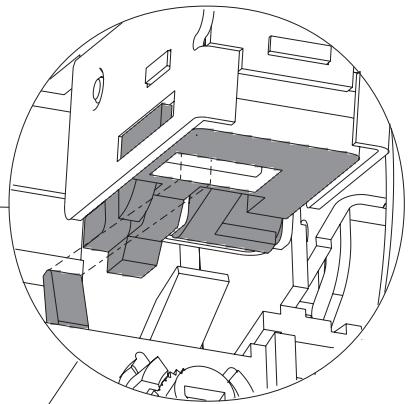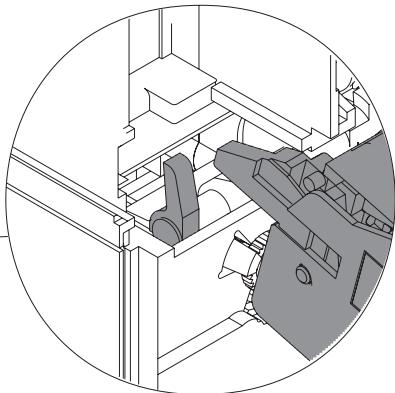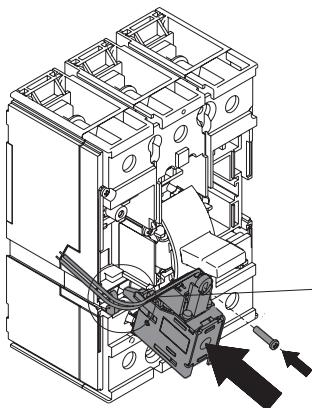




ABB

G

T2-PR221DS

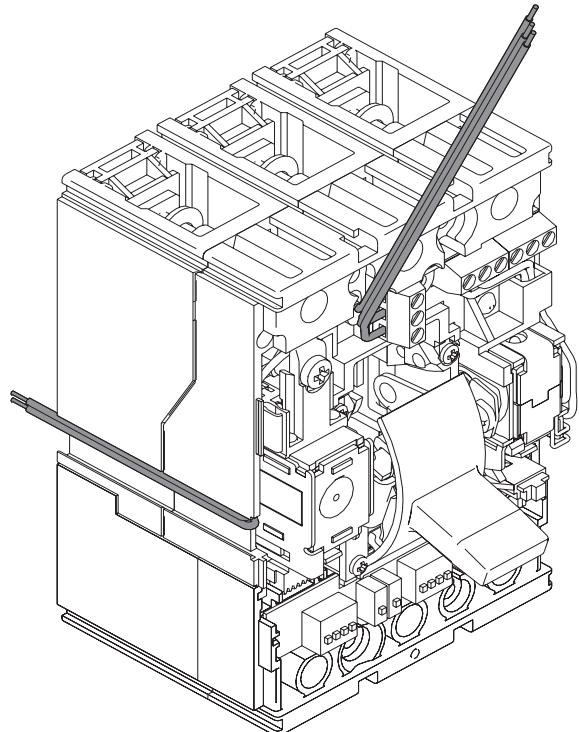
**H**

T2-PR221DS

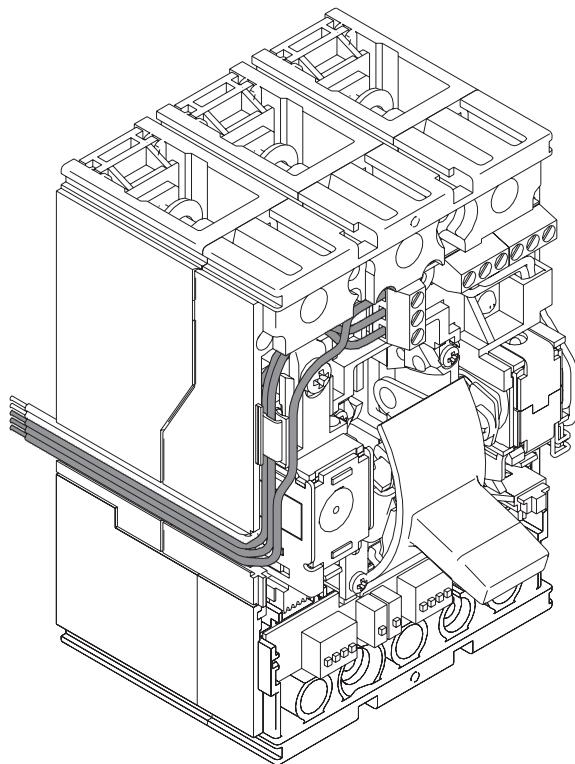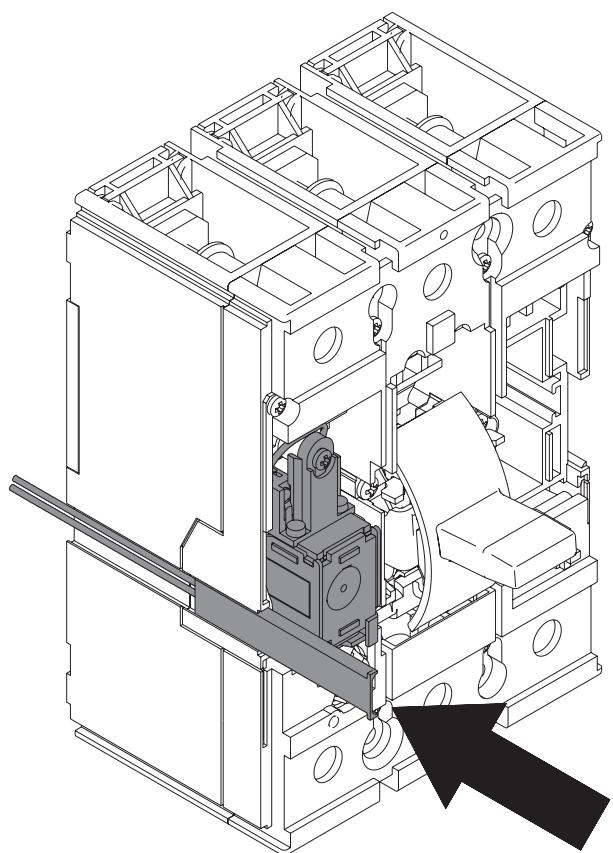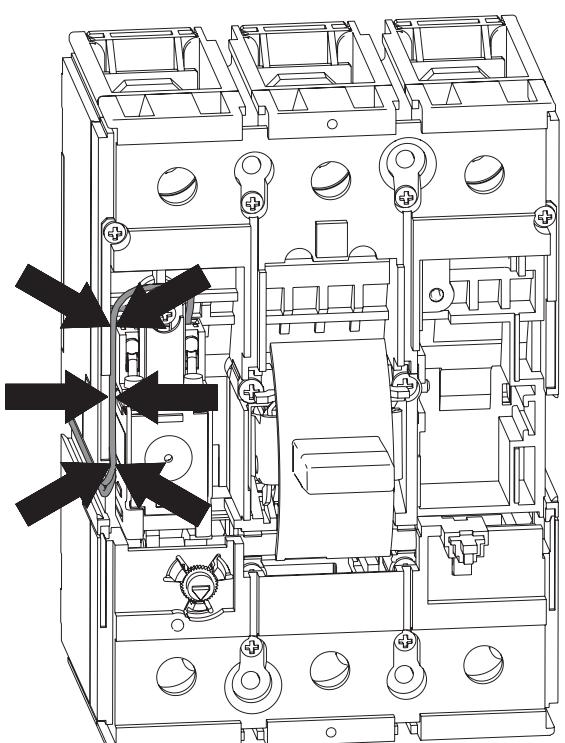
**I****ABB**

L


T3

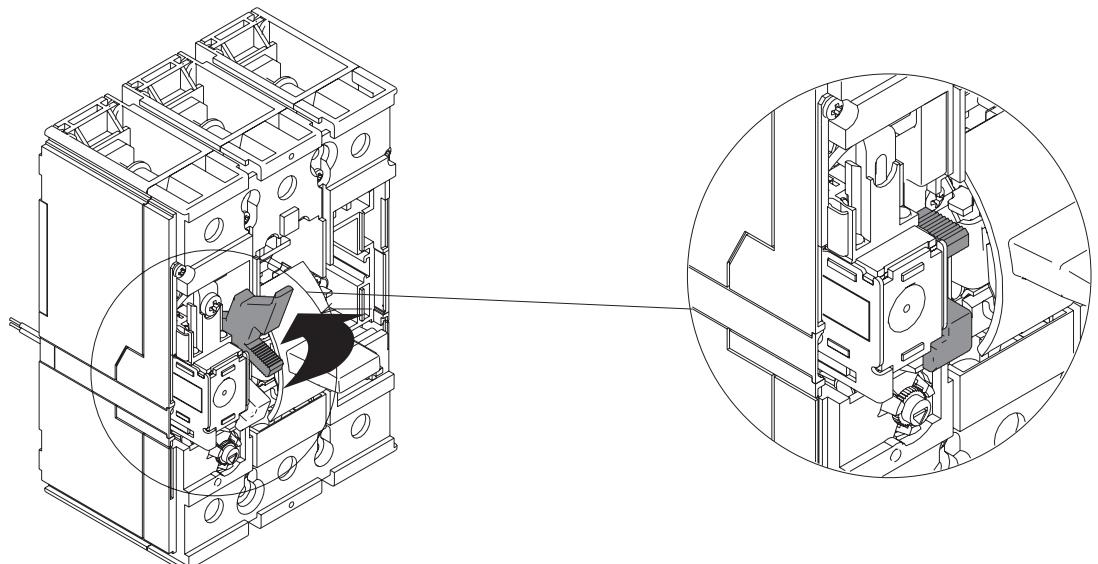

M

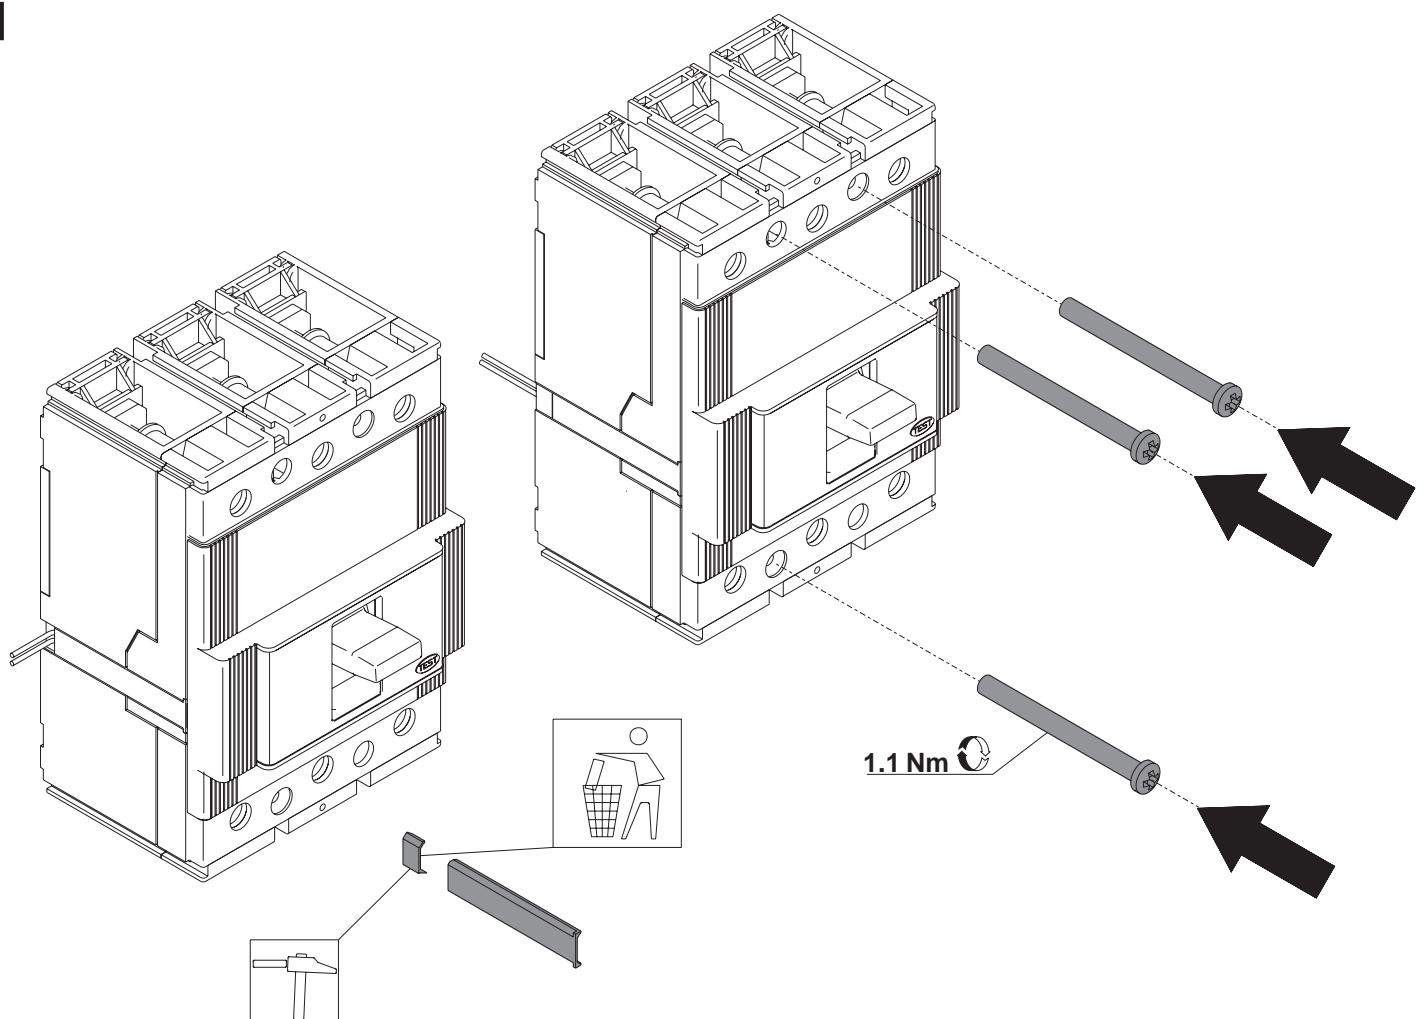

ABB

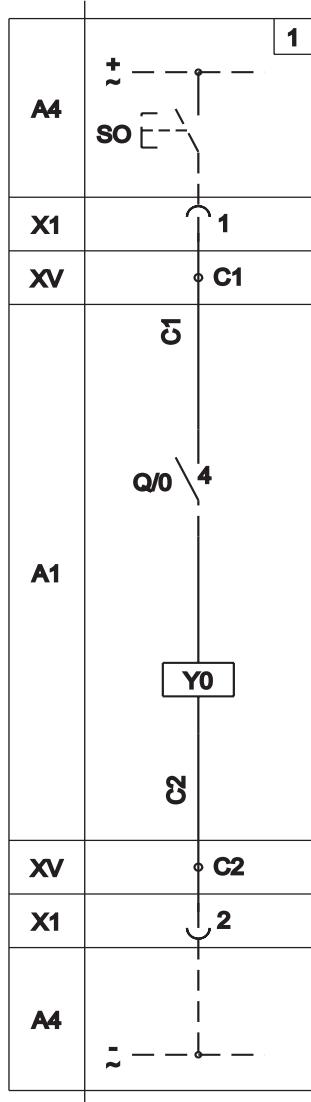**LEGENDA****KEY****ZEICHENERKLÄRUNG****LÉGENDE****LEYENDA**

YO	= Sganciatore di apertura
YO	= Opening release
YO	= Arbeitsstromauslöser
YO	= Déclencheur d'ouverture à émission
YO	= Relé de apertura
Q/O	= Contatti ausiliari dell'interruttore
Q/O	= Auxiliary contacts of the circuit-breaker
Q/O	= Hilfsschalter des Leistungsschalters
Q/O	= Contactos auxiliares del interruptor
Q/O	= Contacts auxiliaires du disjoncteur
SO	= Pulsante o contatto per l'apertura dell'interruttore
SO	= Pushbutton or contact for opening the circuit-breaker
SO	= Taster oder Schalter zum Öffnen des Leistungsschalters
SO	= Bouton-poussoir ou contact pour l'ouverture du disjoncteur
SO	= Pulsador o contacto para la apertura del interruptor

**ABB SACE S.p.A.**

Via Baioni, 35

24123 Bergamo Italy

Tel.: +39 035 395.111 - Telefax: +39 035 395.306-433

<http://www.abb.com>