





UVR - Sganciatore di minima tensione T1-T2-T3.

UVR - Undervoltage release T1-T2-T3.


UVR - Unterspannungsauslöser T1-T2-T3.

UVR - Déclencheur à minimum de tension T1-T2-T3


UVR - Relé de mínima tensión T1-T2-T3

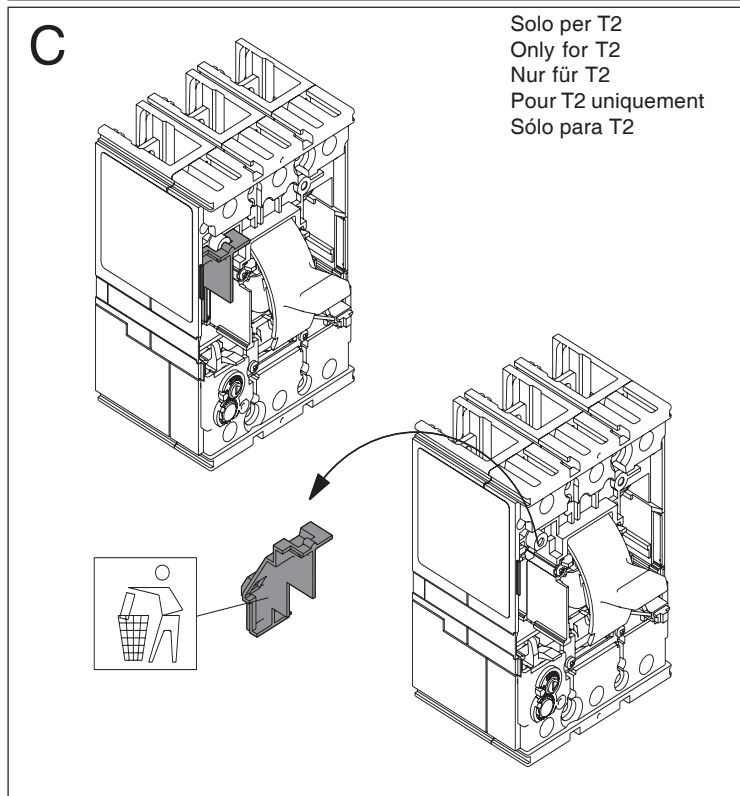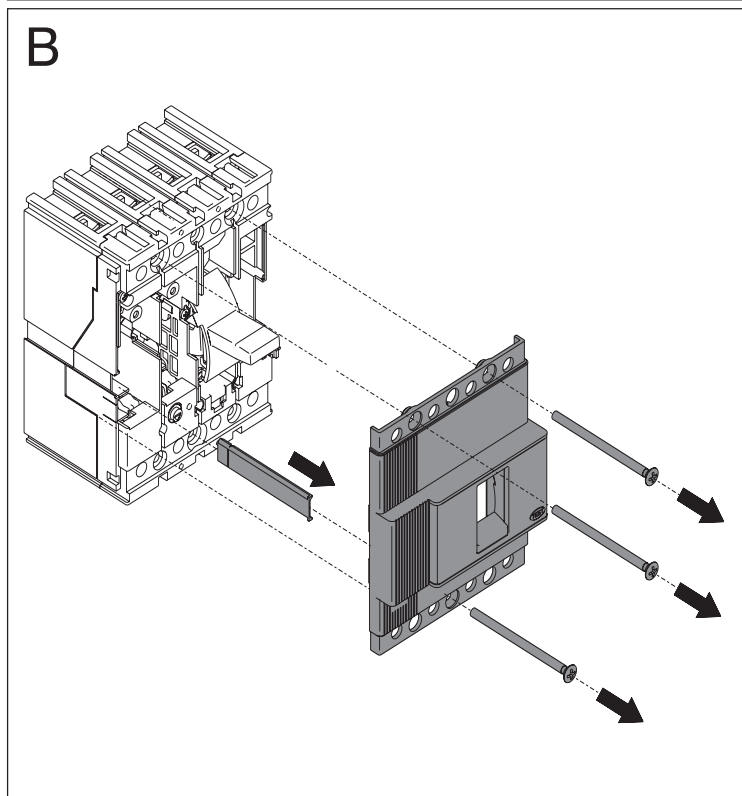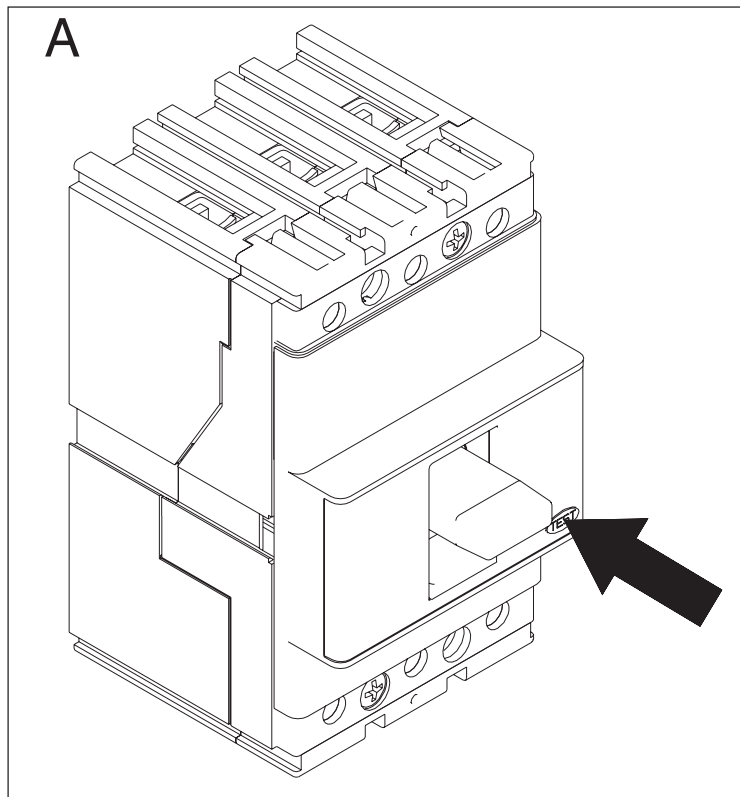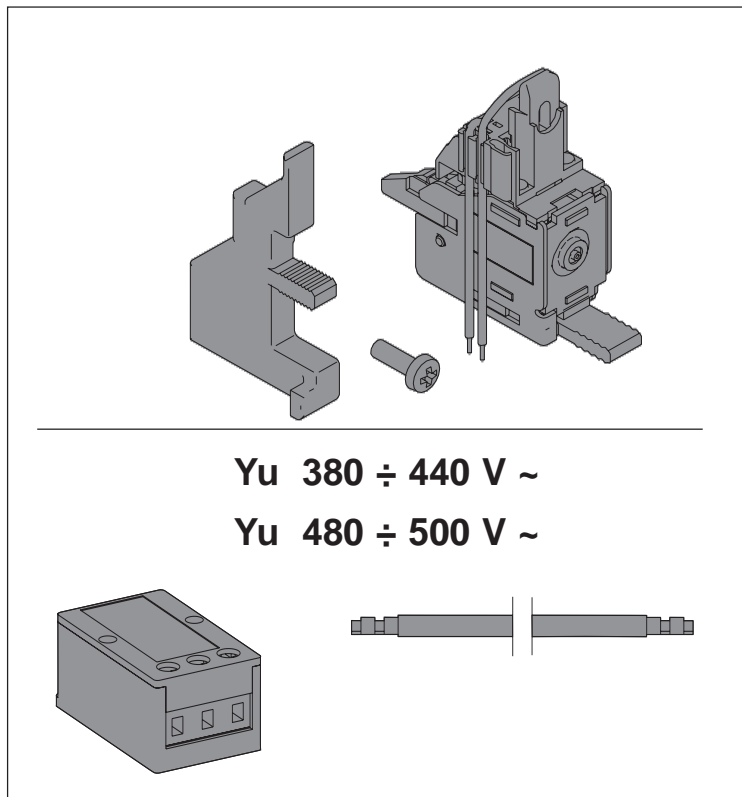


D

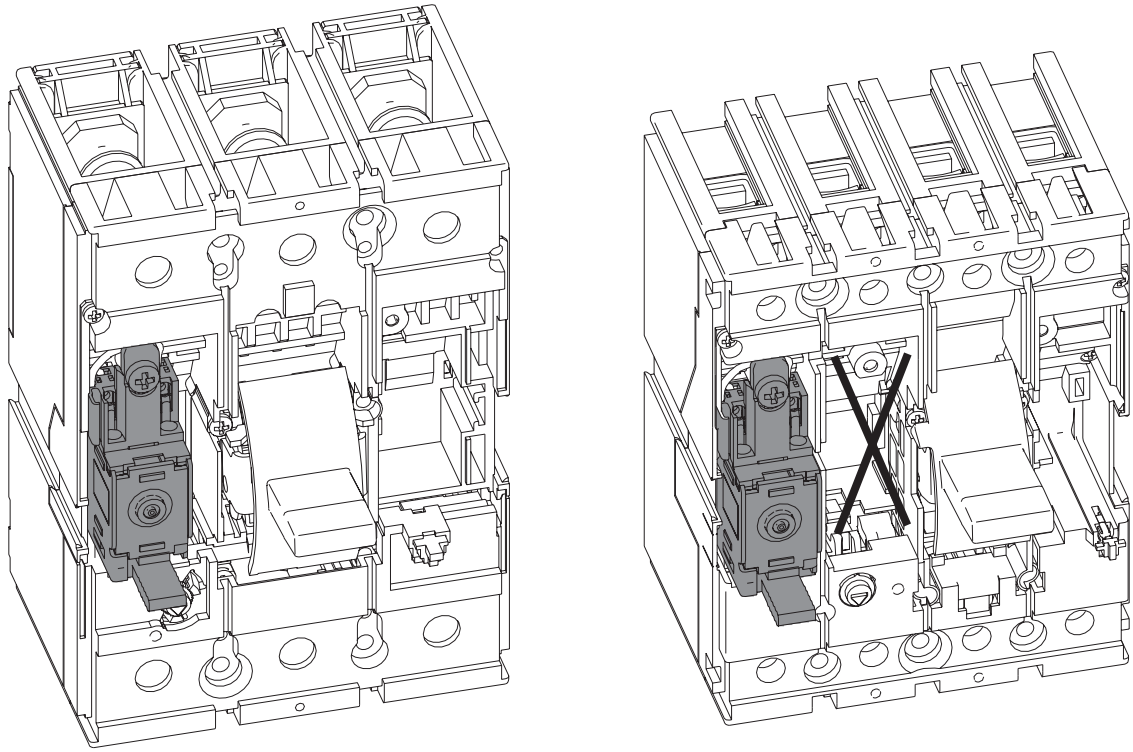

E

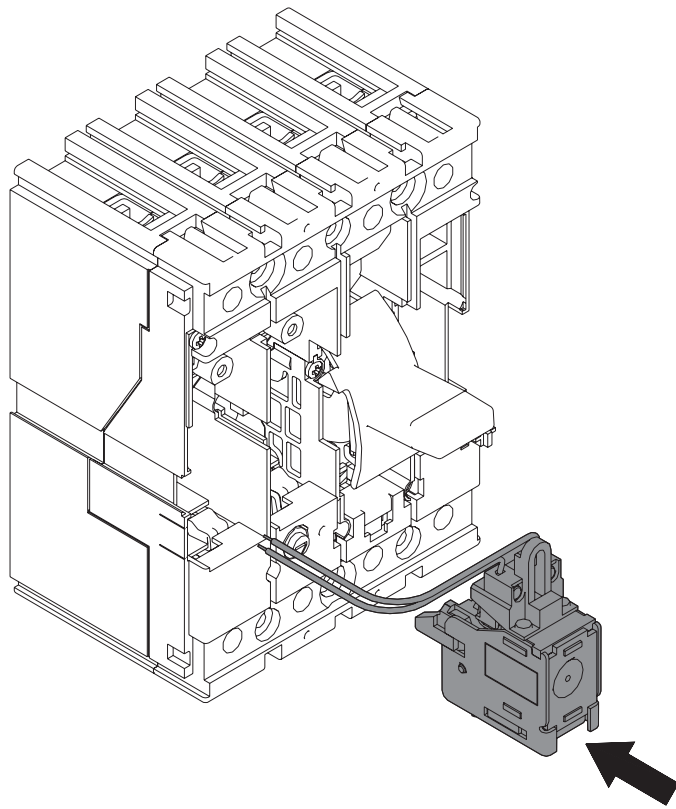


F

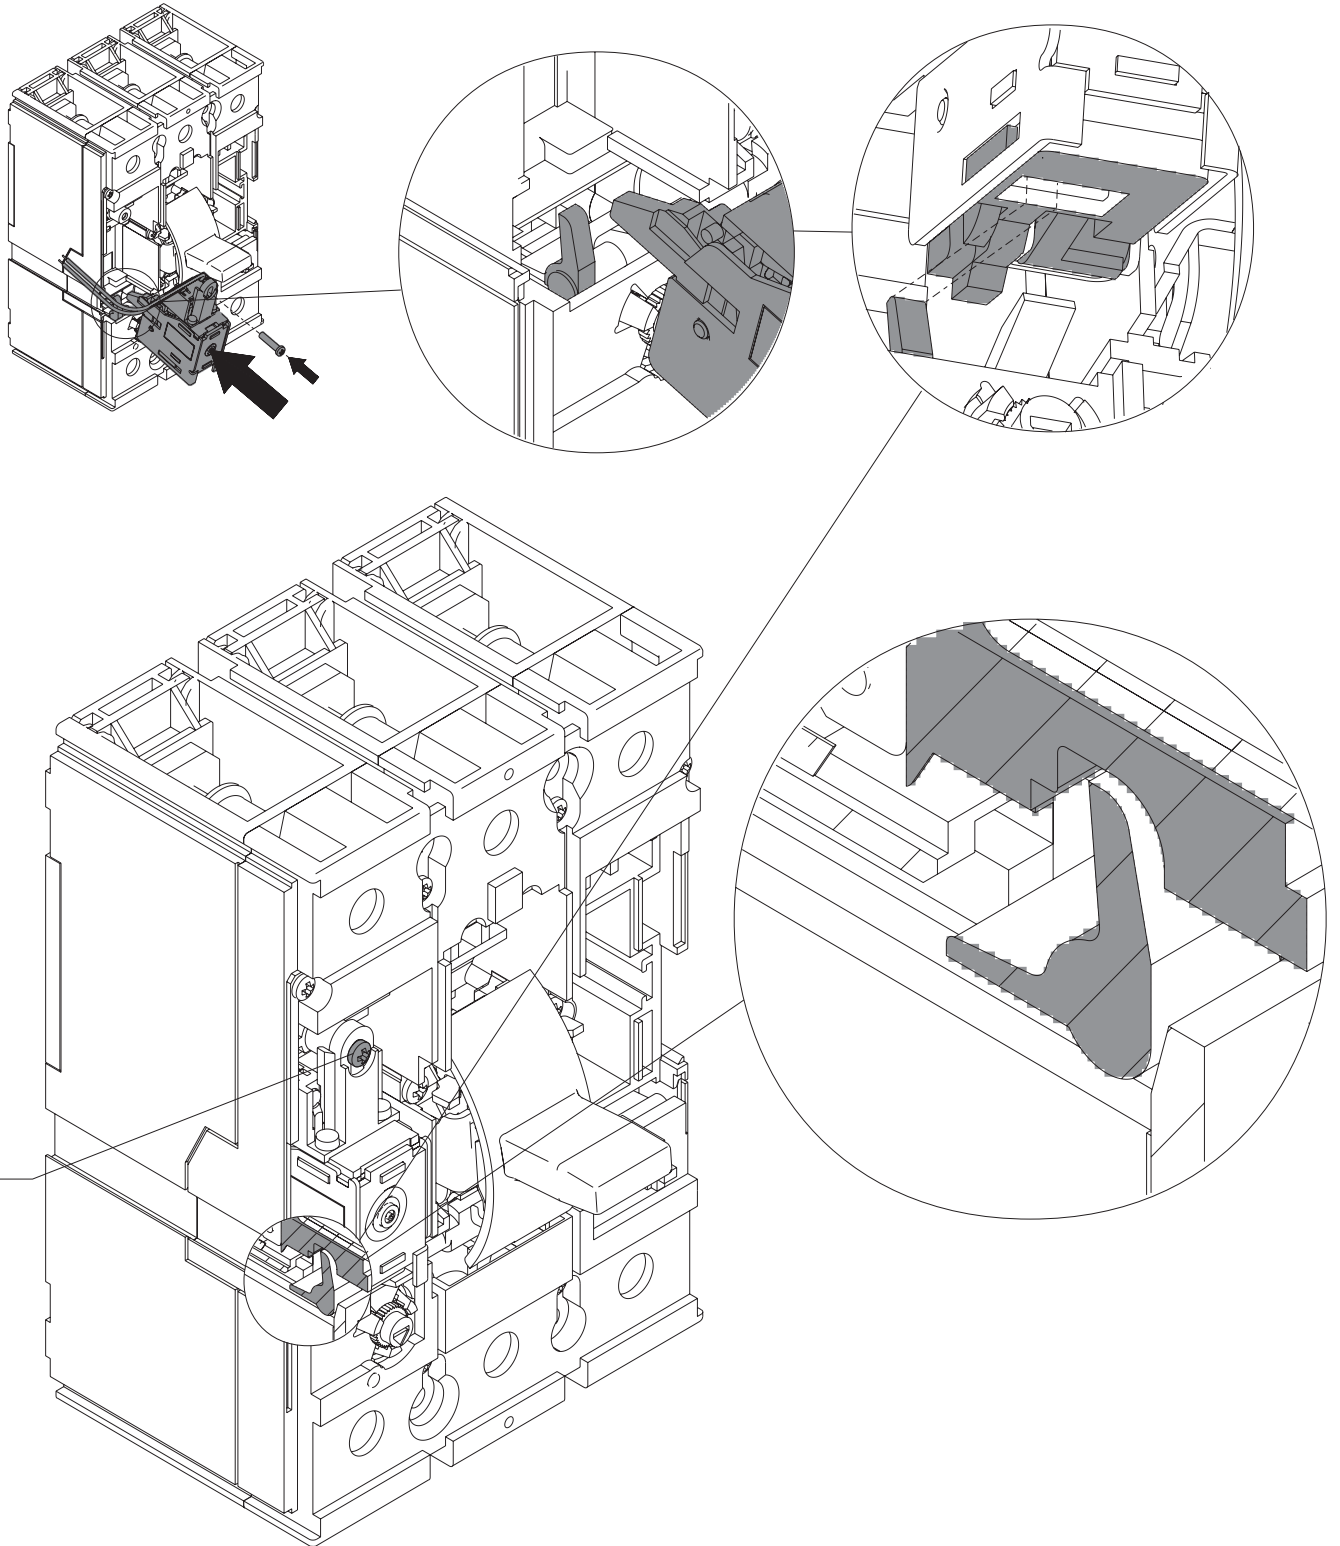


G

T2-PR221DS


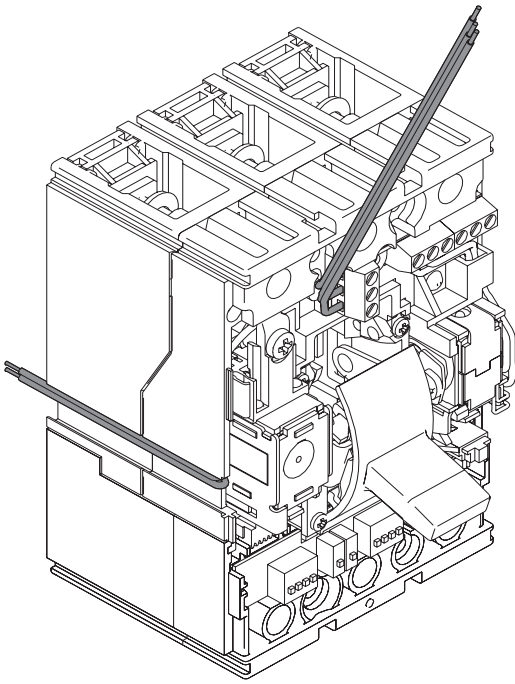


H


T2-PR221DS

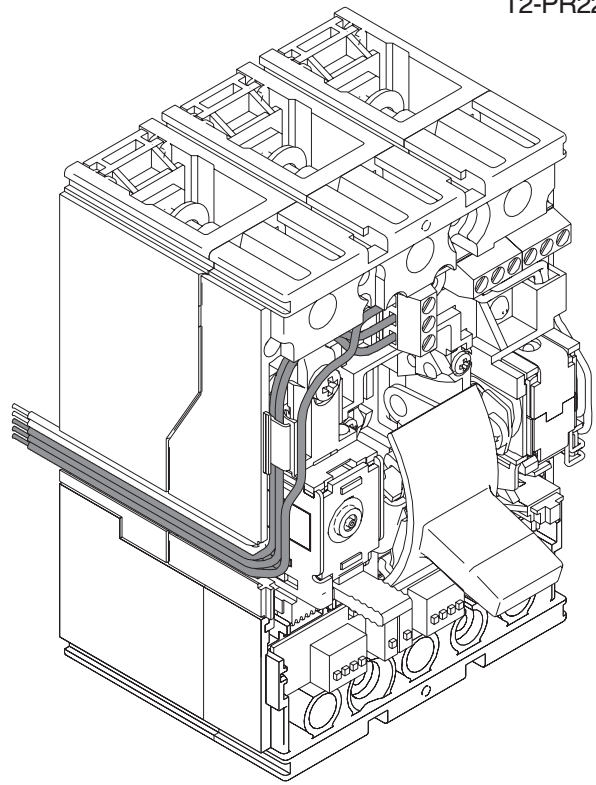


I

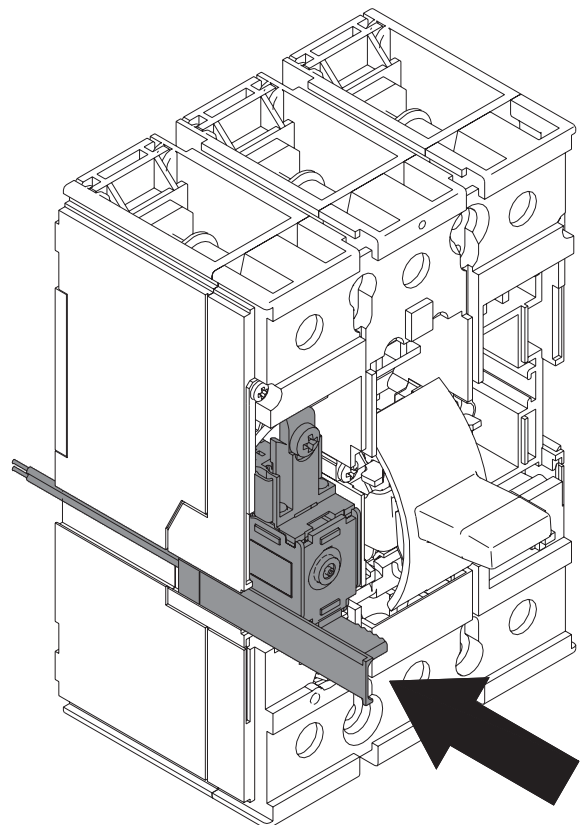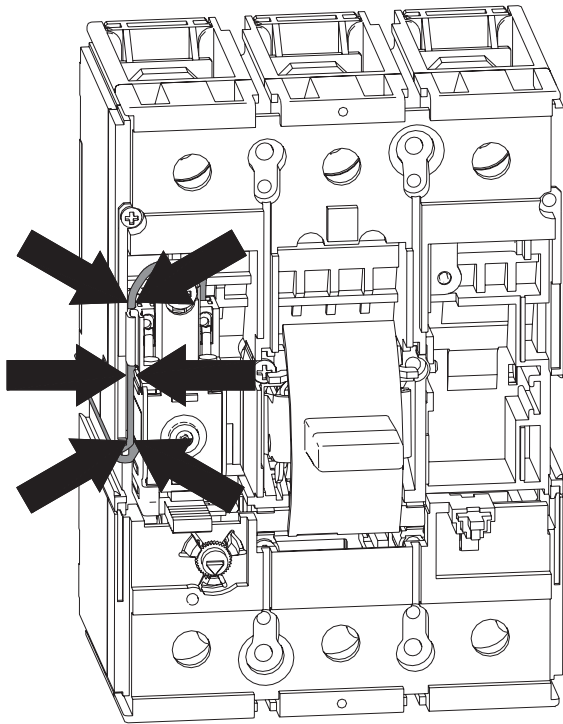


L

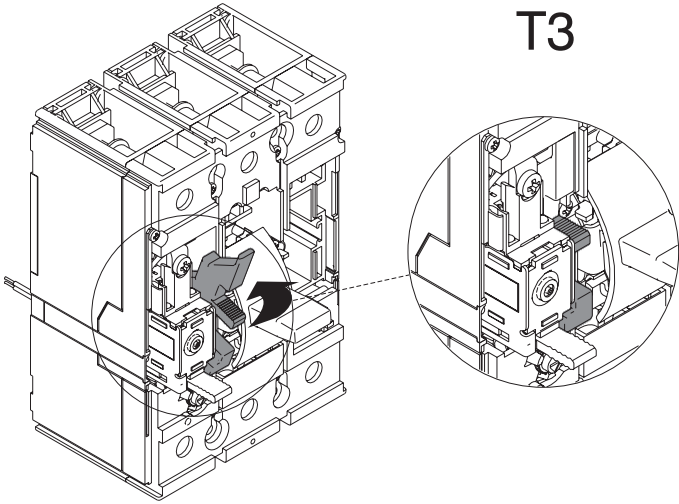

M

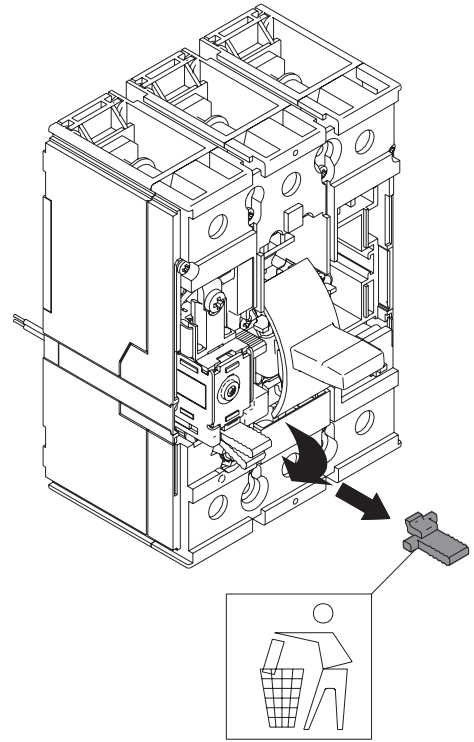


N

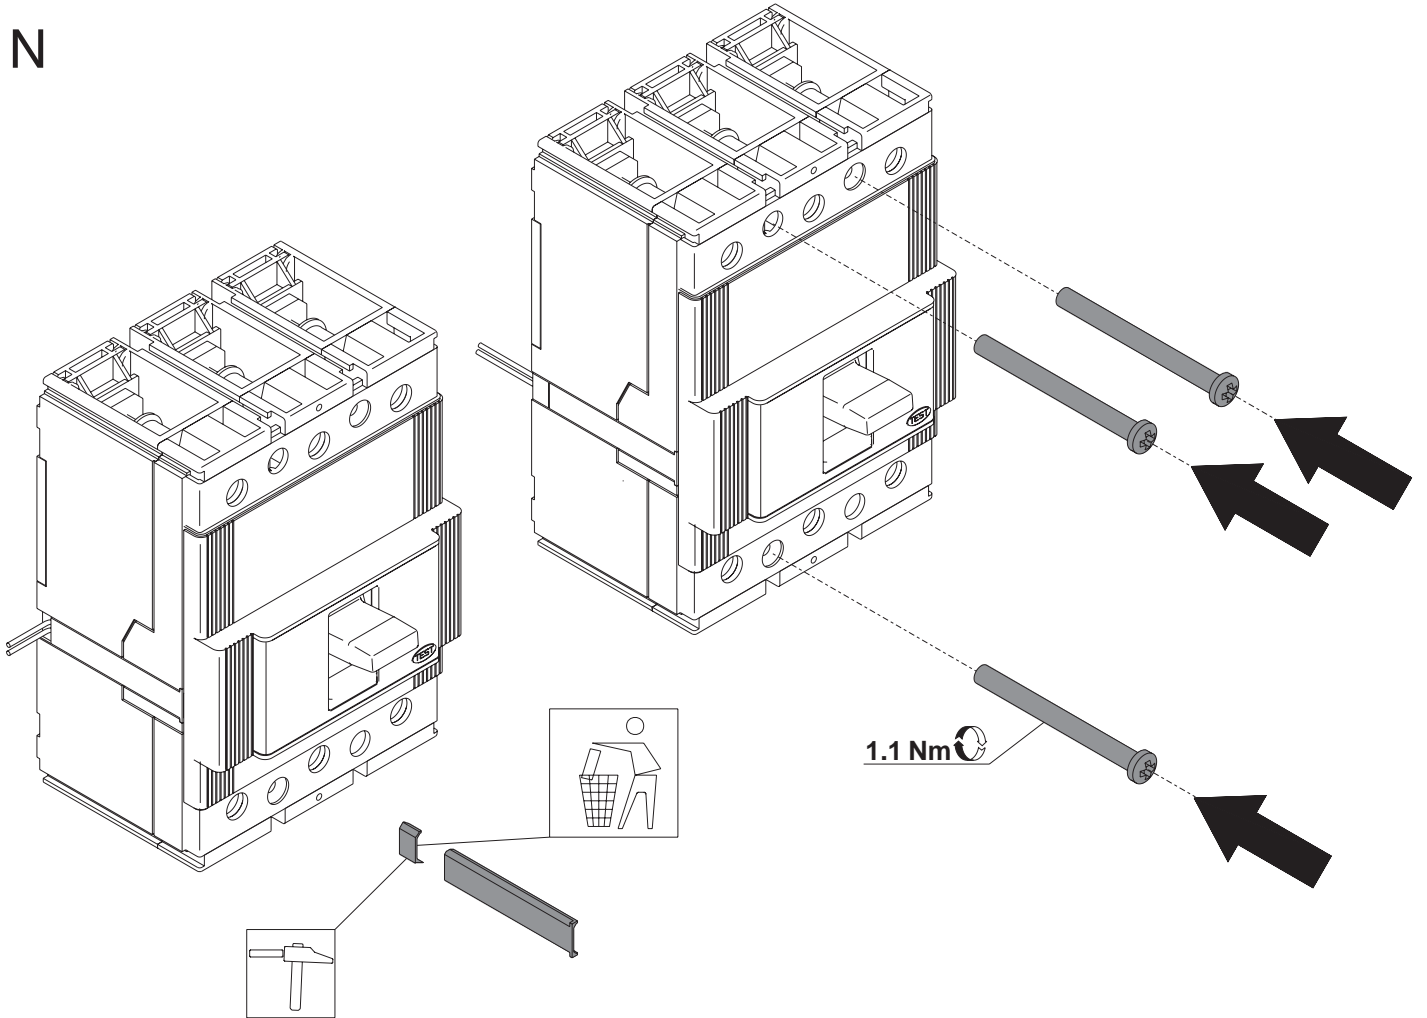


O

Yu 380 ÷ 440 V ~

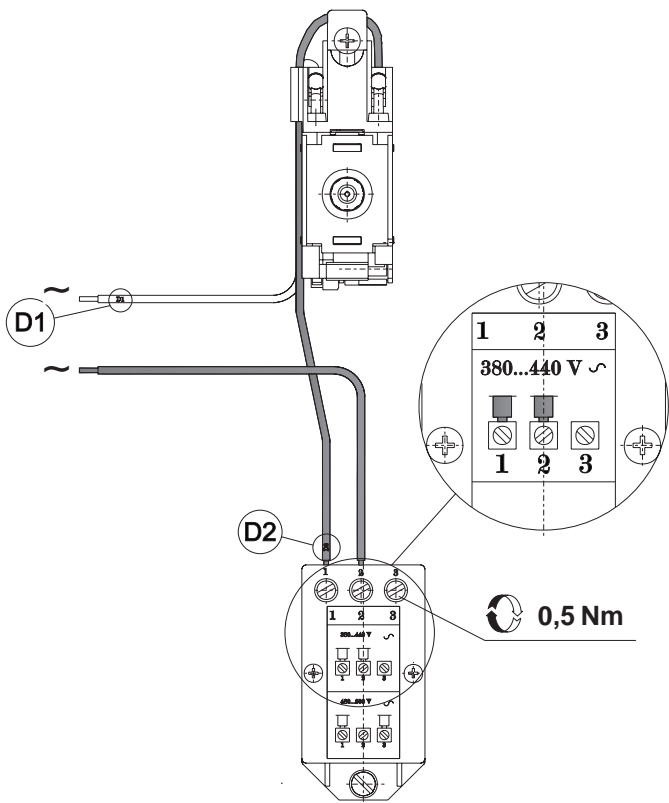


P


Yu 480 ÷ 500 V ~

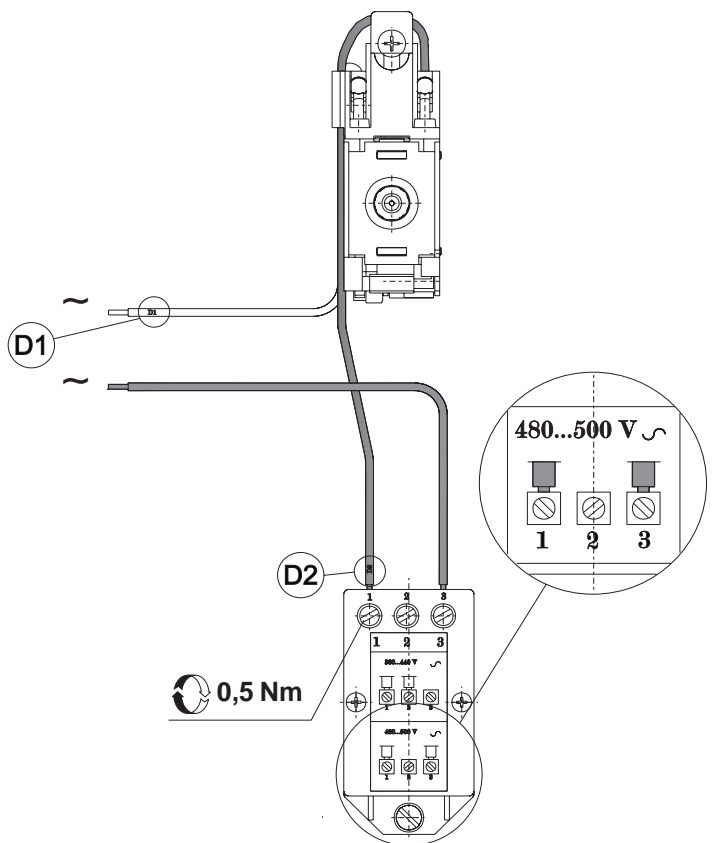

Q

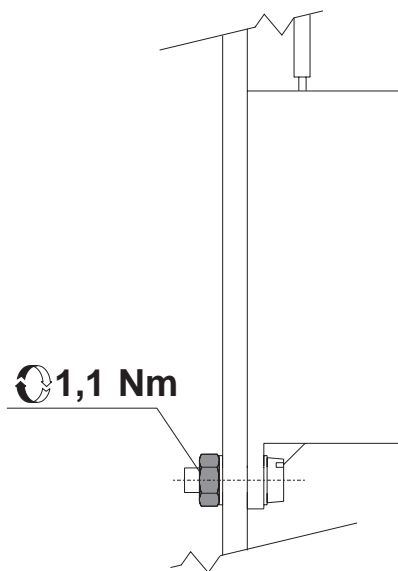

R

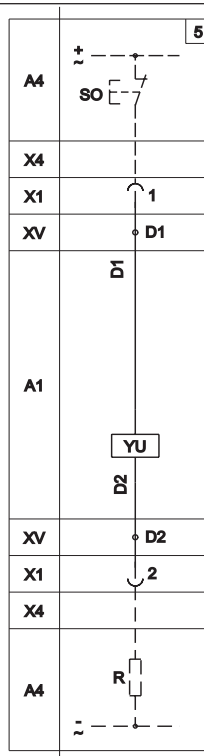

LEGENDA KEY ZEICHENERKLÄRUNG LÉGENDE LEYENDA

- SO = Pulsante o contatto per l'apertura dell'interruttore
 SO = Pushbutton or contact for opening the circuit-breaker
 SO = Taster oder Schalter zum Öffnen des Leistungsschalters
 SO = Bouton-poussoir ou contact pour l'ouverture du disjoncteur
 SO = Pulsador o contacto para la apertura del interruptor
- YU = Sganciatore di minima tensione
 YU = Undervoltage release
 YU = Unterspannungsauslöser
 YU = Déclencheur à minimum de tension
 YU = Relé de mínima tensión
- R = Resistore esterno addizionale per minima tensione alimentato a 380V/440Vca e 480/500Vca.
 R = Extra external minimum-voltage resistor powered on 380/440 Vac and 480/500 Vac.
 R = Zusätzlicher externer Widerstand für Unterspannungsauslöser; Versorgungsspannung 380/440 V WS und 480/500 V WS.
 R = Résistance extérieure supplémentaire pour tension minimum alimentée en 380/440 Vca et 480/500 Vca.
 R = Resistencia externa suplementaria para mínima tensión alimentada a 380/440 Vac y 480/500 Vac.

ABB

ABB SACE S.p.A.

Via Baioni, 35

24123 Bergamo Italy

Tel.: +39 035 395.111 -Telefax: +39 035 395.306-433

<http://www.abb.com>