 


Emax E1 ÷ E6

 
DOC. N.° 1SDH000460R0509 - L2413

Moduli opzionali PR120/D-M COM, PR120/K, PR120/D-BT per unità ABB SACE PR122/P e PR123/P
 Optional Module PR120/D-M COM, PR120/K, PR120/D-BT for ABB SACE PR122/P e PR123/P unit
 Fakultative Module PR120/D-M COM, PR120/K, PR120/D-BT für Einheit ABB SACE PR122/P und PR123/P
 Modules optionnels PR120/D-M COM, PR120/K, PR120/D-BT pour les unités ABB SACE PR122/P et PR123/P
 Módulos opcionales PR120/D-M COM, PR120/K, PR120/D-BT para unidades ABB SACE PR122/P y PR123/P


PR120/D-M COM

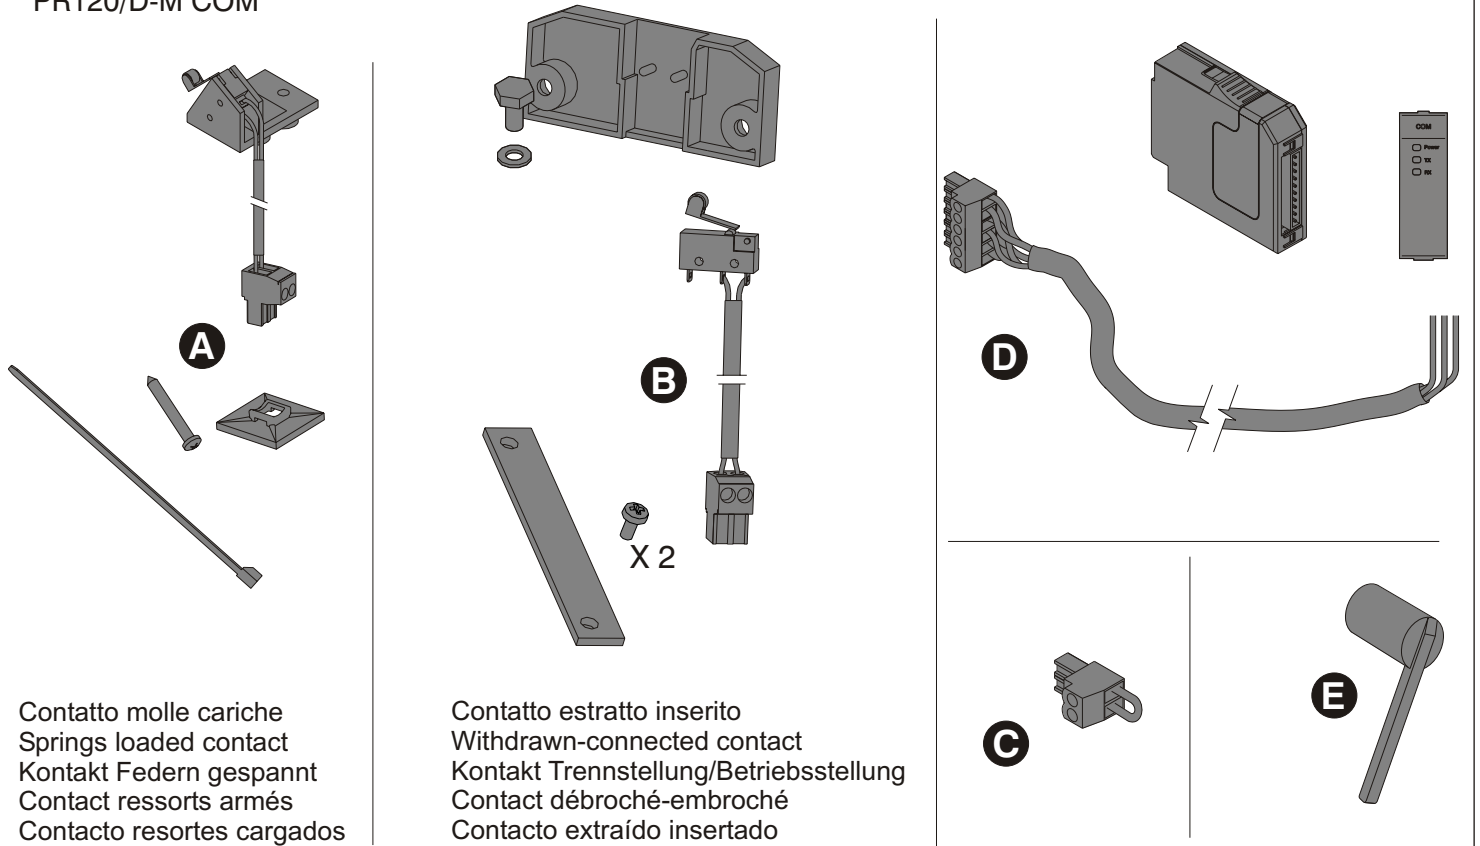


PR120/K

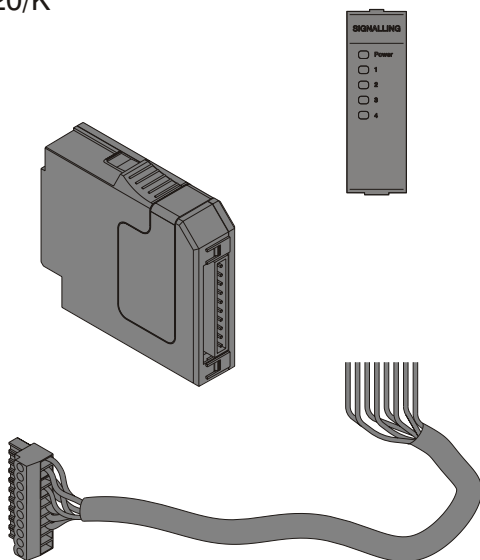


PR120/D-BT

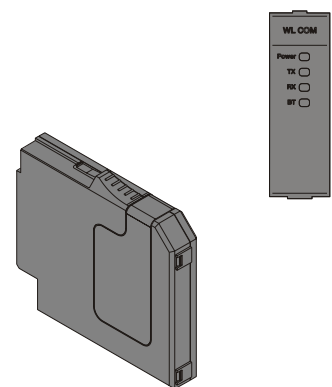 

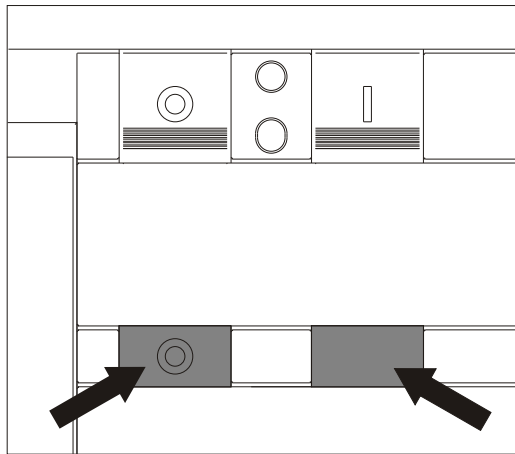 A


APERTO
OPEN
AUS-STELLUNG
OUVERT
ABIERTO

 BIANCO
WHITE
WEISS
BLANC
BLANCO

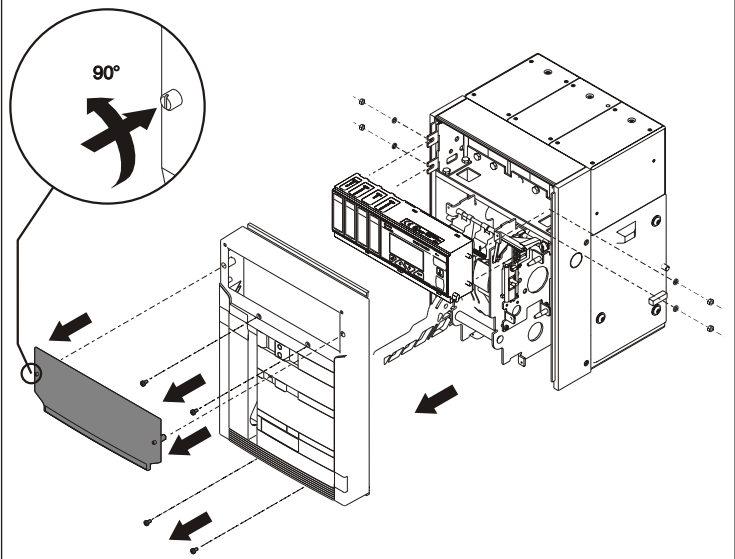
B**C**

PR120/D-M COM

 
1,5 Nm

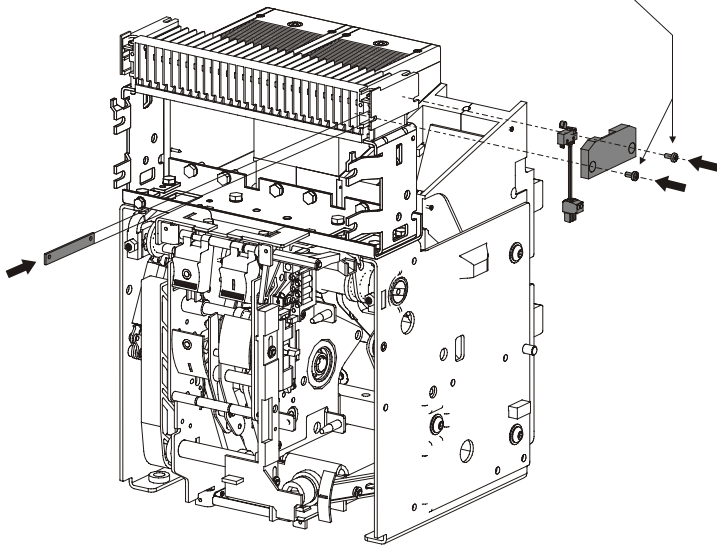


B Only for W

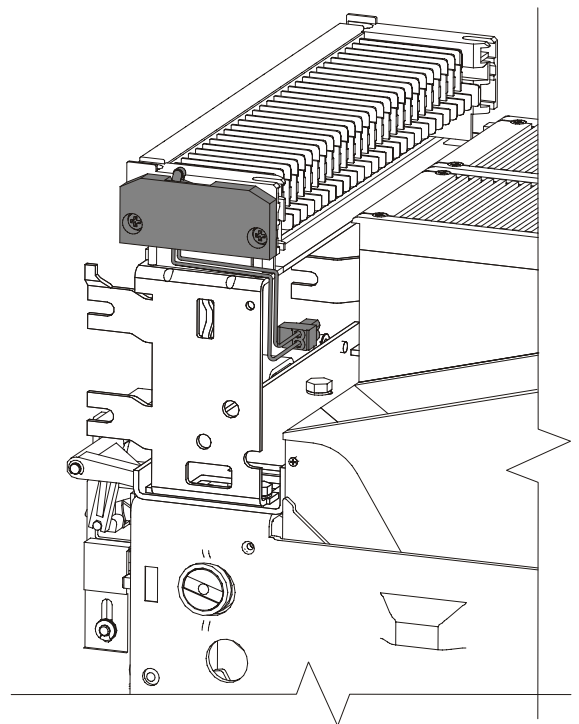 D

 E

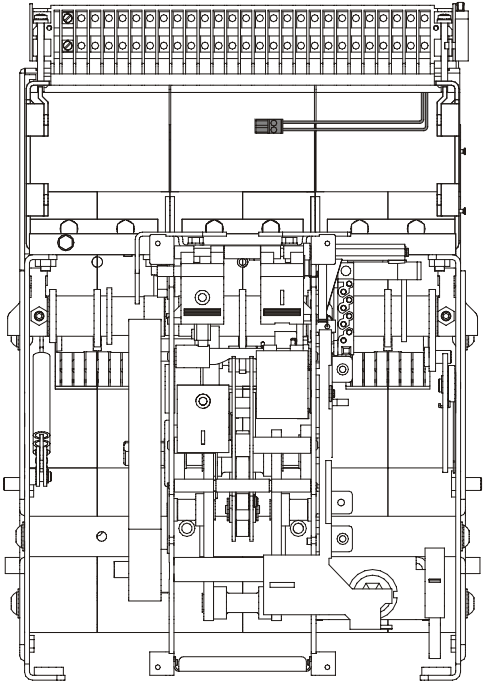


F

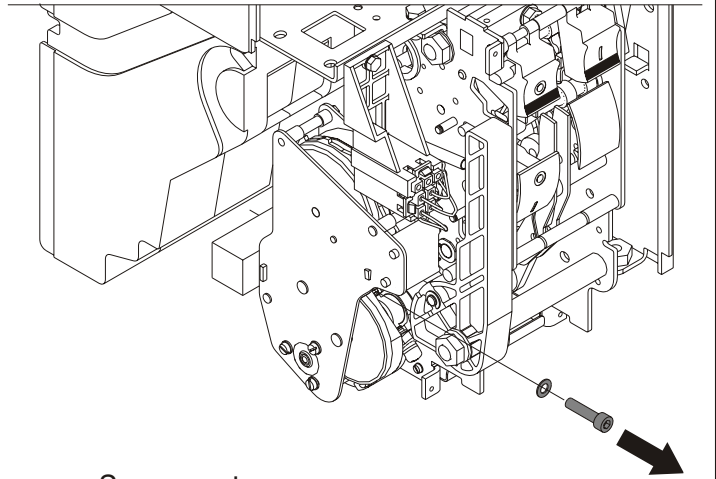 


Se presente
If present
Falls vorhanden
Si présent
Si está presente

A


 
G

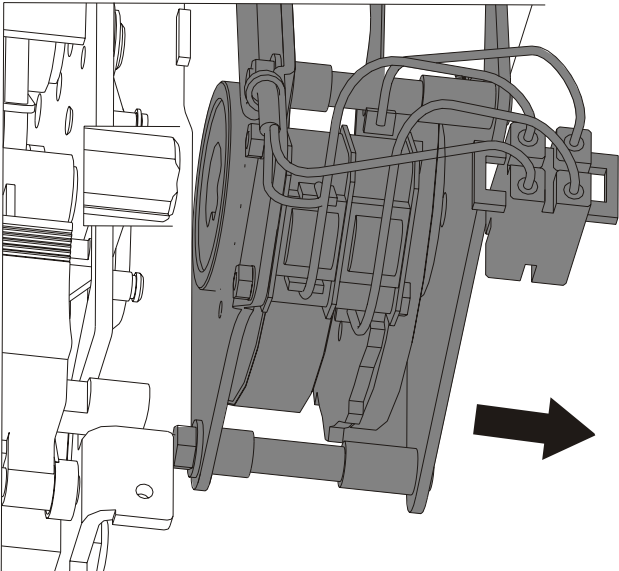



H

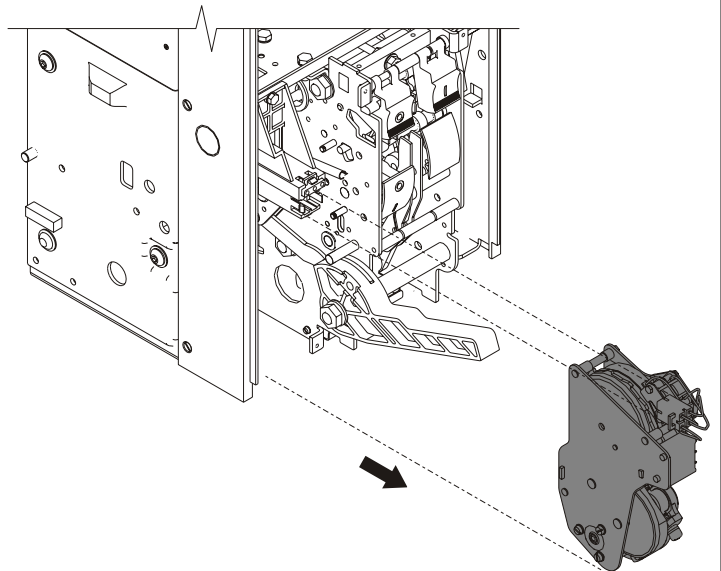 


I

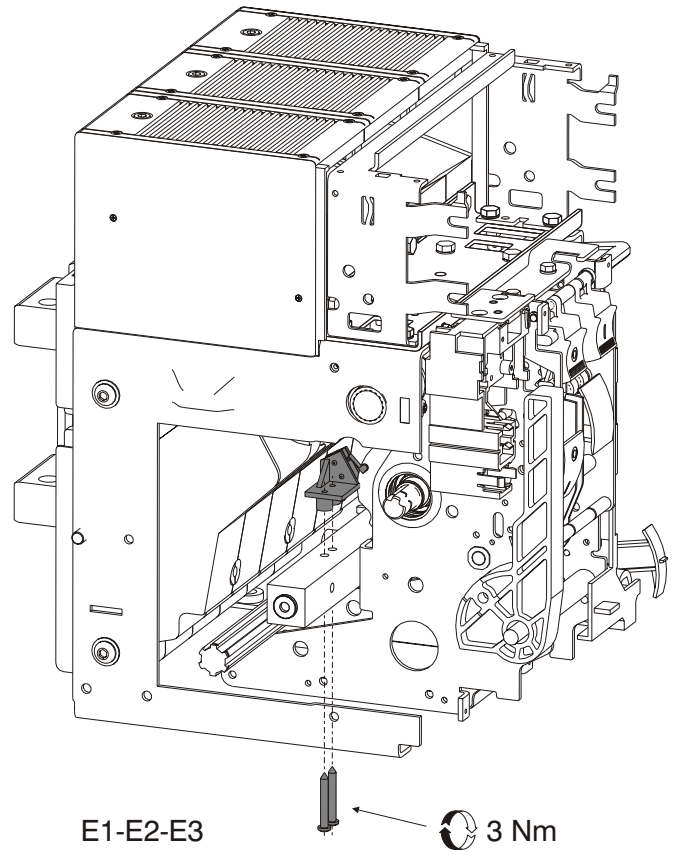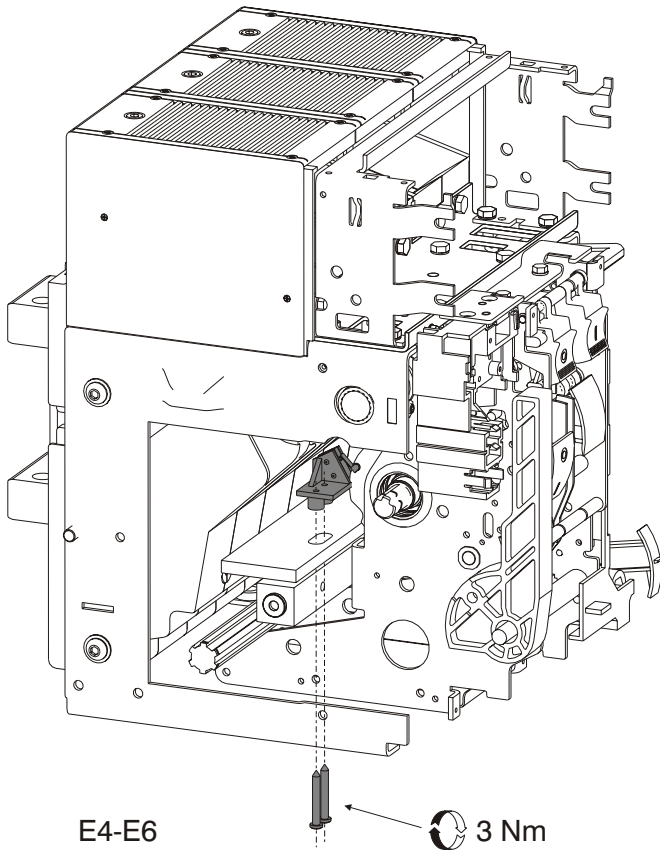  

L

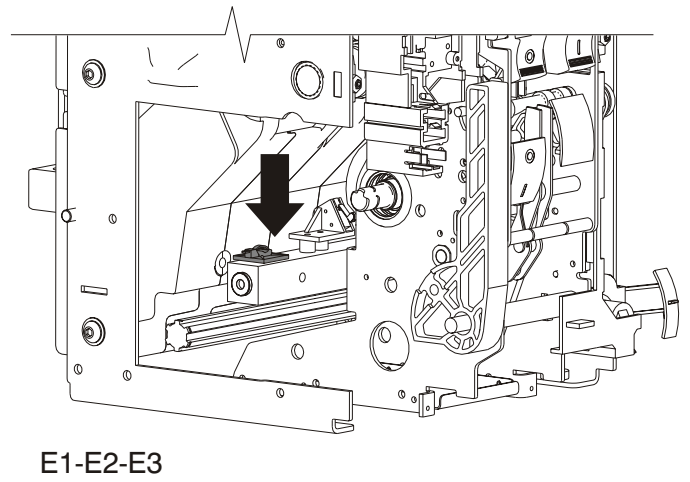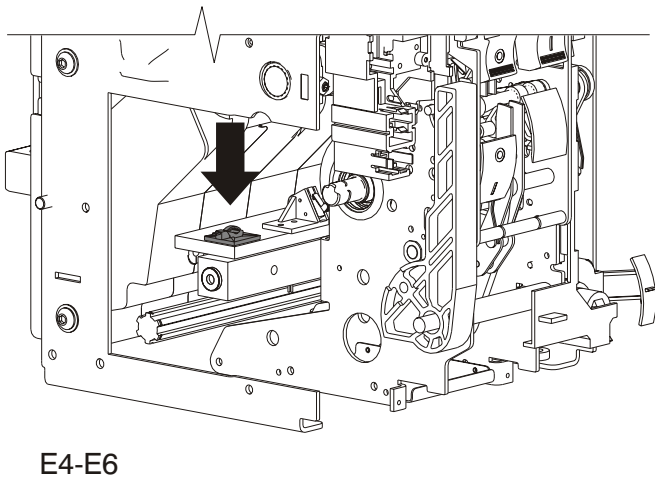  

M

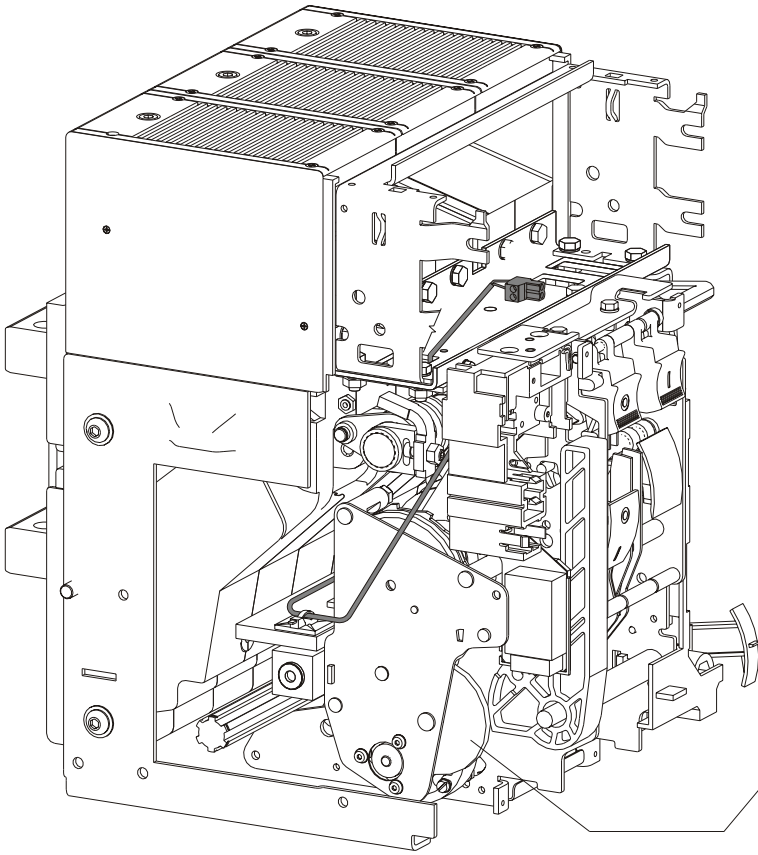 

Vedere 1SDH000460R0605 e usare attrezzo **E**

 
See 1SDH000460R0605 and use tool **E**

Siehe 1SDH000460R0605 und Vorrichtung **E** benutzen


Voir 1SDH000460R0605 et utiliser l'outil **E**

Ver 1SDH000460R0605 y usar herramienta **E**



N

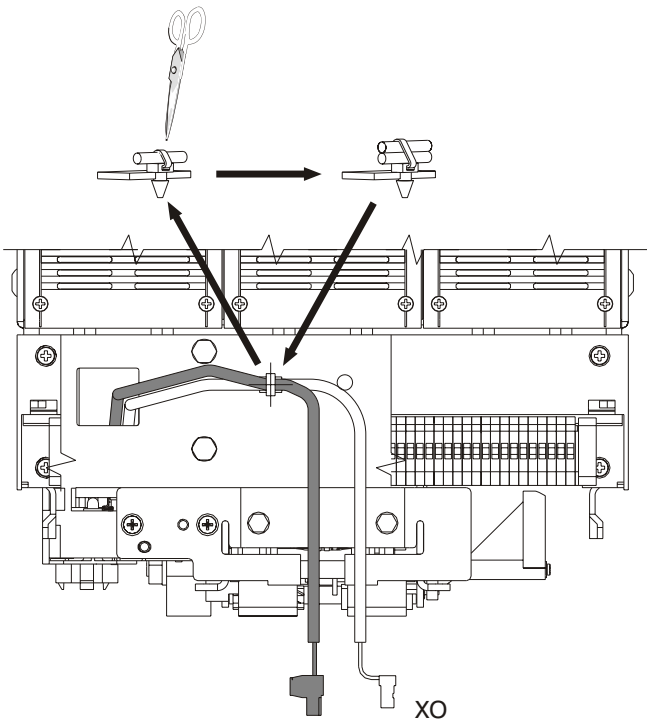


O

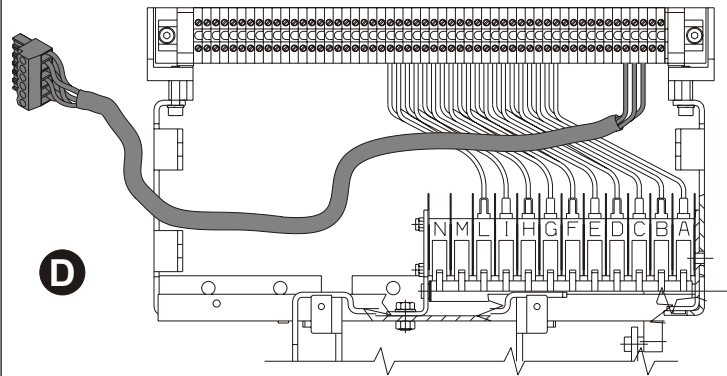 

P

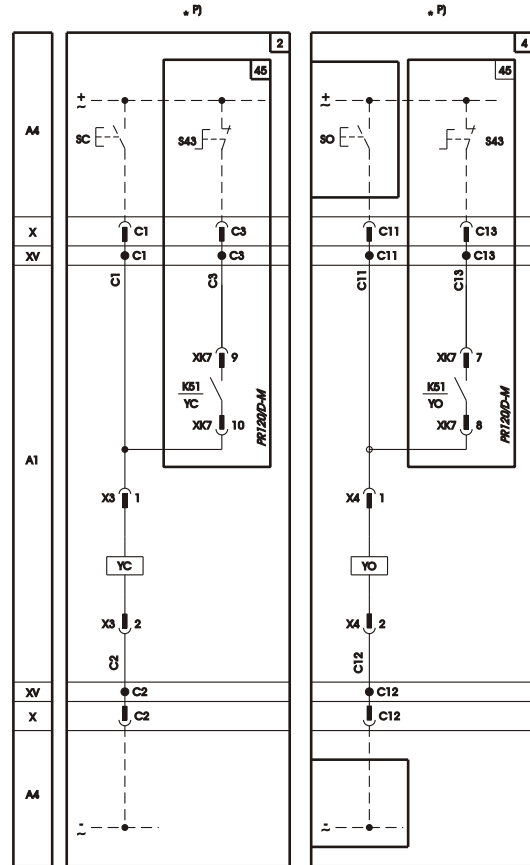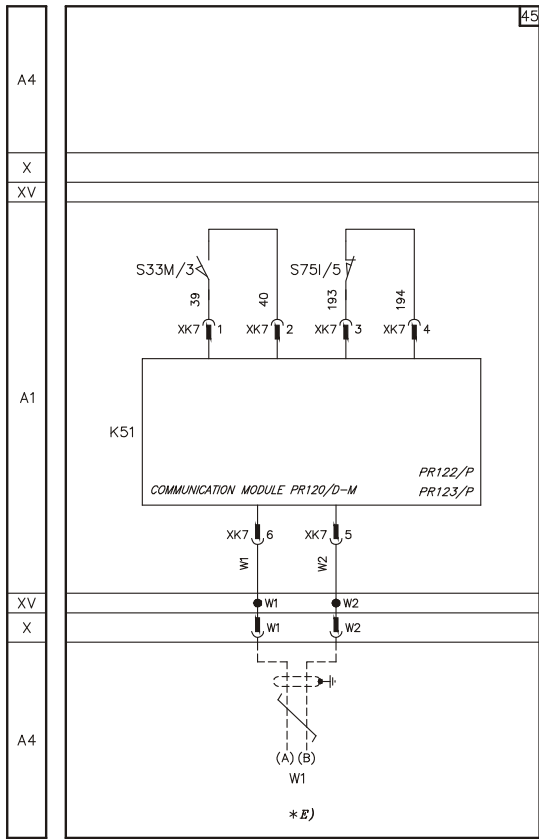  


Q

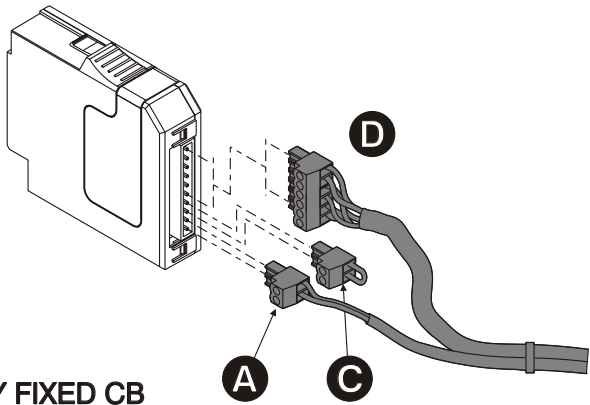 


ONLY FIXED CB

 R

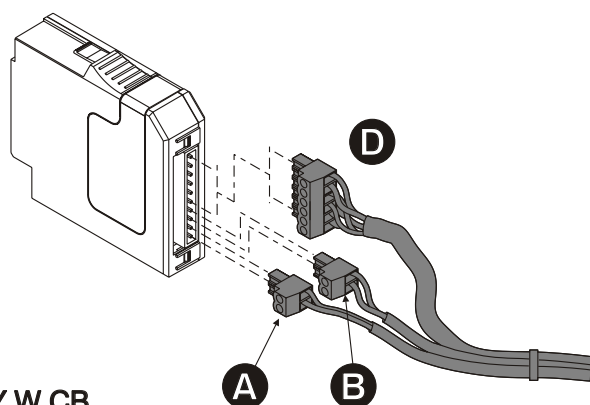

ONLY W CB

 S

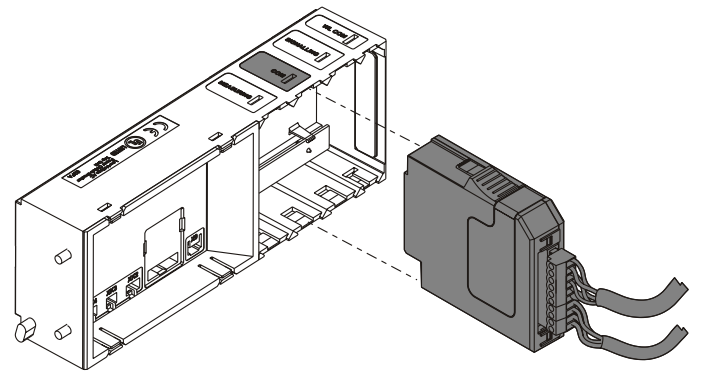


END OF PR120/D-M COM




T

 PR120/K

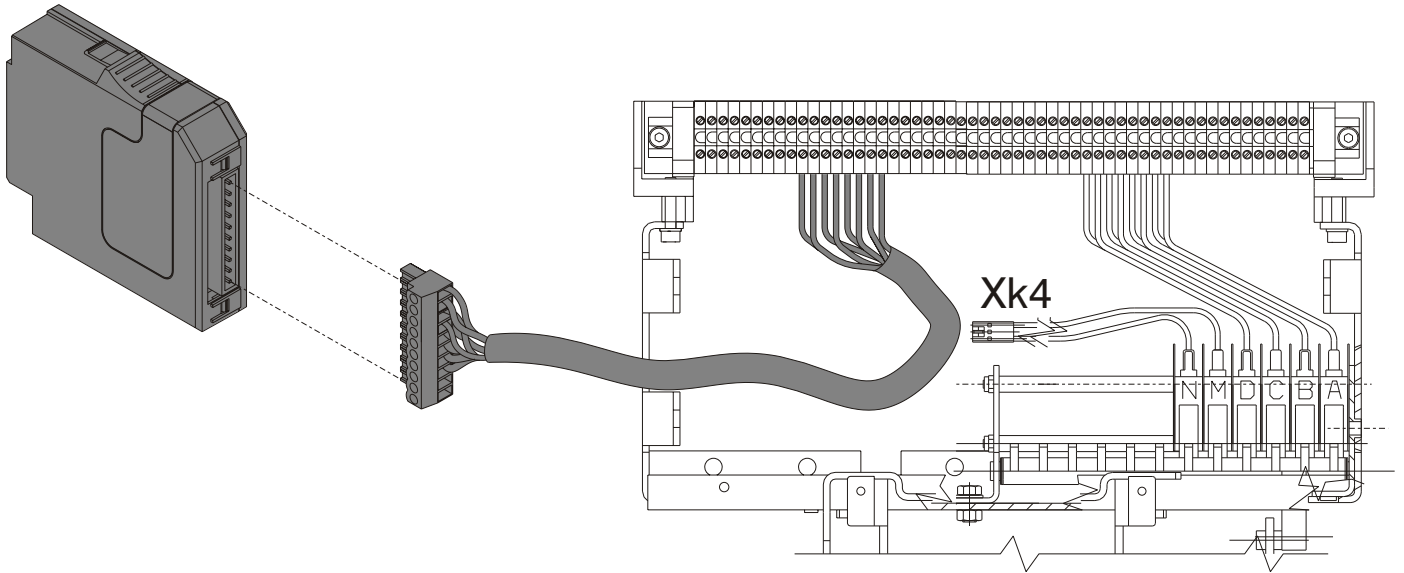

U

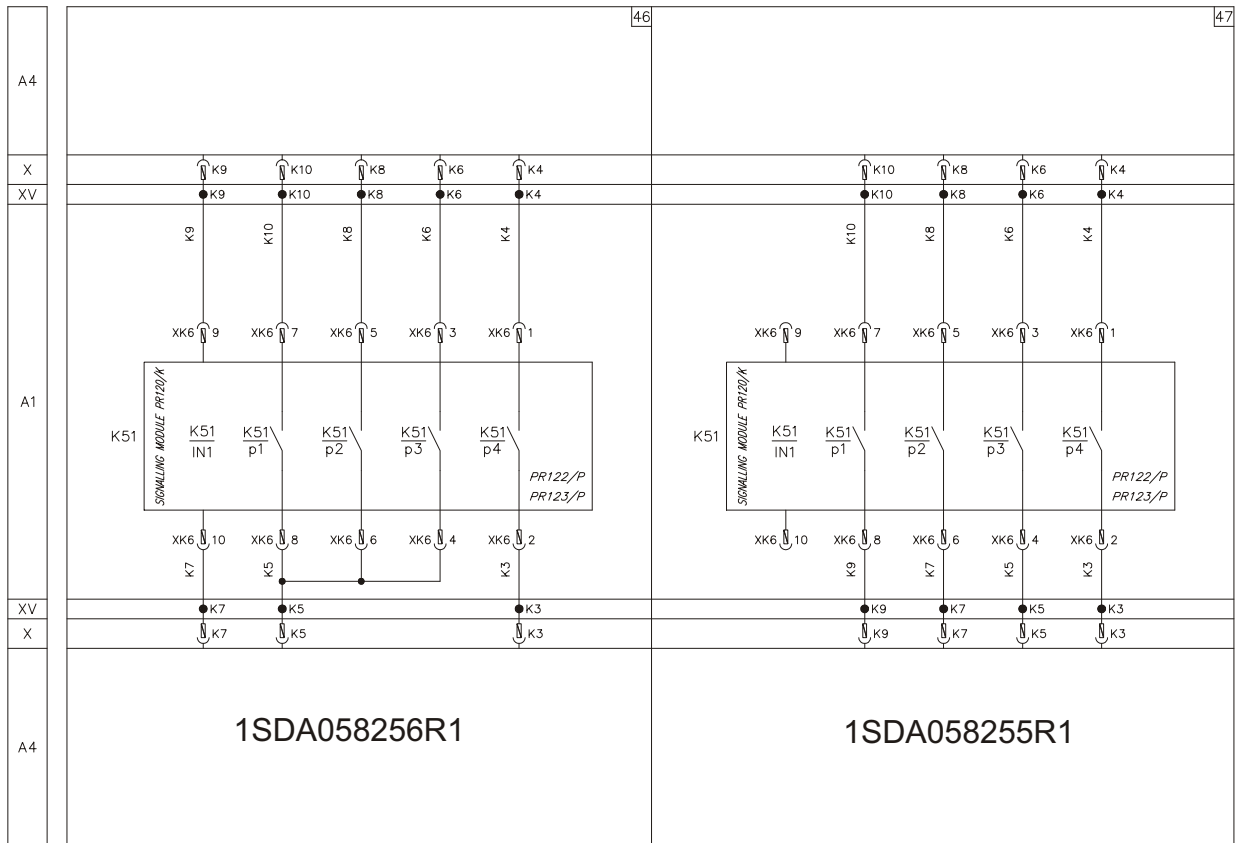 

Non è fornibile il modulo di segnalazione PR120/K delle figure 46 e 47 nel caso sia previsto il secondo pacco di contatti ausiliari contemporaneamente al relè PR122/P oppure al PR123/P

The indicator module PR120/K in figures 46 and 47 cannot be supplied if is present the second set of auxiliary contacts simultaneously as relay PR122/P or PR123/P

 
Das Signalmodul PR120/K der Abb. 46 und 47 ist nicht lieferbar, falls das zweite Hilfskontakt- Paket gleichzeitig an Relais PR122/P oder an PR123/P vorgesehen ist.

Le module de signalisation PR120/K des figures 46 et 47 ne peut pas être fourni au cas où l'on a prévu le deuxième bloc de contacts auxiliaires en même temps que le relai PR122/P ou bien PR123/P

No se suministrará el módulo de señalización PR120/K de las figuras 46 y 47 en caso de que esté previsto el segundo bloque de contactos auxiliares simultáneamente con los relés PR122/P o PR123/P




V

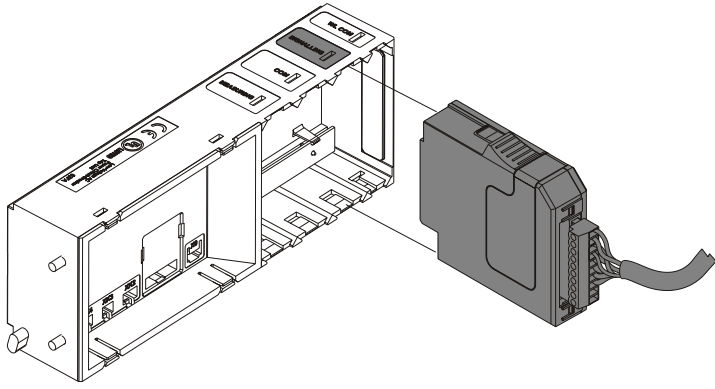

END OF PR120/K

W

 PR120/D-BT

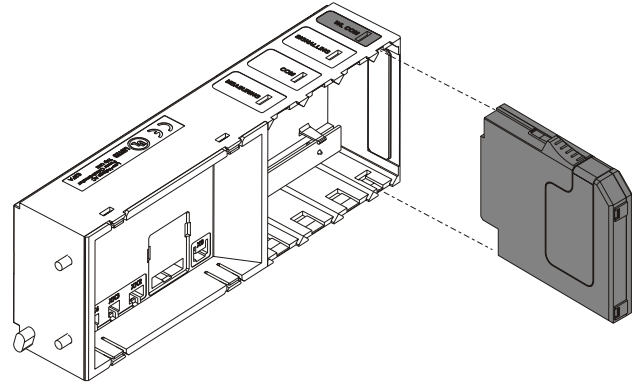

X

FOR ALL

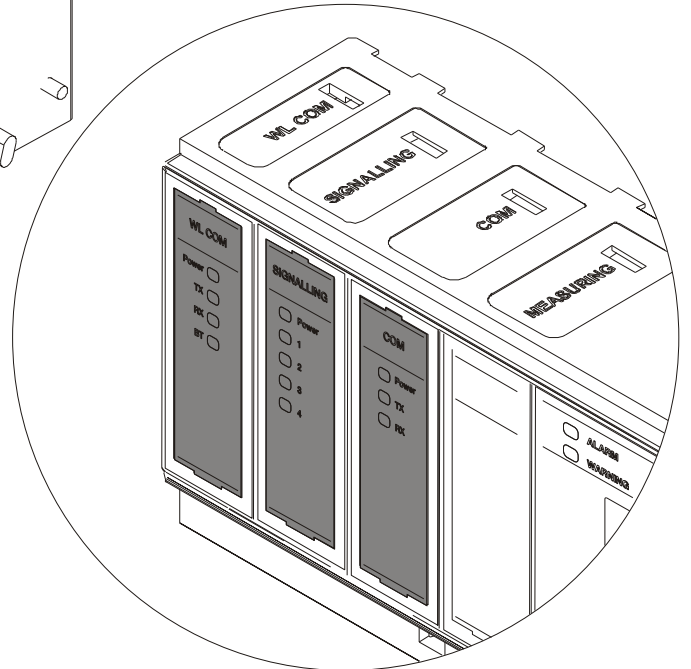 
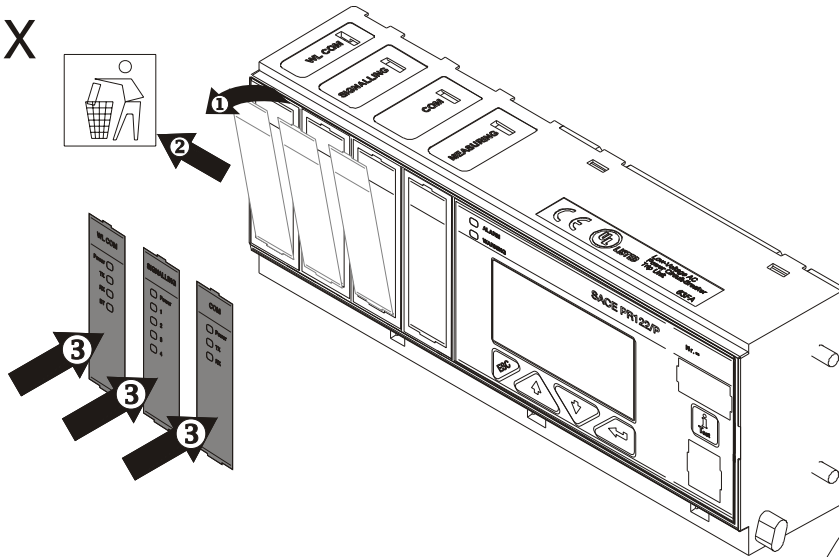 


ABB SACE S.p.A.

Via Baioni, 35

24123 Bergamo Italy

Tel.: +39 035 395.111 - Telefax: +39 035 395.306-433

<http://www.abb.com>